

Manual No: 510002110002-EN

Manual Version: A

April 2023

Translated version

# Maintenance Manual

---

## VM04E/VM120E



**CE AS/NZS GB**

**SINOBOOM**





## **WARNING**

**Operating, servicing and maintaining this vehicle or equipment can expose you to chemicals including engine exhaust, carbon monoxide, phthalates and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure and avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle or equipment in a well-ventilated area and wear gloves or wash your hands frequently when servicing. For more information, go to: [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov).**

**For disposal, please comply with local regulations.**

**SINOBOOM**



**星邦智能**

**星邦**

All of the above are registered trademarks of **Hunan Sinoboom  
Intelligent Equipment Co., Ltd.**

## **Contact us:**

**Website:** [www.sinoboom.com.cn/www.sinoboom.com](http://www.sinoboom.com.cn/www.sinoboom.com)

**Sales Tel:** +86 400-601-5828/+86-0731-87116222

**Service Tel:** +86 400-608-1289/+86-0731-87116333

**E-mail:** [info@sinoboom.com](mailto:info@sinoboom.com)/[sales@sinoboom.com](mailto:sales@sinoboom.com)

**Address:** No.128, East Jinzhou Avenue, Ningxiang High-tech Industrial Park, Changsha,  
Hunan, China

**Postal code:** 410600

**Copyright**©Hunan Sinoboom Intelligent Equipment Co., Ltd.

Hunan Sinoboom Intelligent Equipment Co., Ltd. retains the right of final interpretation of the manual.

# To Users

Thank you for choosing and using the machinery of **Hunan Sinoboom Intelligent Equipment Co., Ltd.**

Use this machine only to transport tools to work locations and for performing tasks on the work platform. Only authorized personnel who have received appropriate MEWP training may operate this machine. Before using the machine, carefully read and fully understand this manual and strictly follow its relevant instructions. Different countries, regions, or governments may have equipment operating regulations that conflict with this manual. The stricter safety operating regulations should be followed. Our company will not be liable for any adverse consequences arising from the failure to operate and use the machine in accordance with this manual or other relevant regulations.

This manual provides necessary safety precautions and maintenance instructions for users. This manual covers the basic configuration information of one or more models. Please refer to the information applicable to your machine model. Treat this manual as an integral part of the machine and keep it with the machine at all times. This manual may not be copied, distributed, sold, or altered without written permission from Sinoboom.

Due to continuous improvement and upgrading of product design and different product models covered, some charts and textual content in the manual may be not applicable to your machine. Our company reserves the right to revise the contents of this manual due to technological improvements. Changes will be made without prior notice. Contact Sinoboom to obtain the most current version of the manual.

Please go to [www.sinoboom.com.cn](http://www.sinoboom.com.cn) to download your desired Operation Manual, Maintenance Manual and Parts Manual.

If you have any questions, contact **Hunan Sinoboom Intelligent Equipment Co., Ltd.**

## Manual Revision History:

[illegible]

# Applicable Models

The manual applies to the following models and serial numbers:

| Model | Metric Trade ID | Imperial Trade ID | Serial No.            |
|-------|-----------------|-------------------|-----------------------|
| VM04E | VM04E           | VM120E            | 1000200100 to present |

## NOTICE:

- Check the machine model and serial number on the machine nameplate. The location of the nameplate can be found in the ***Diagram of Decal Positions*** section of the Operation Manual.
- Product model numbers are indicated on the nameplates to distinguish products with different main technical parameters.
- Product trade names (product commercial codes) are used for marketing purposes and machine decals for the differentiation of products with different main technical parameters. Product trade names are categorized as metric and imperial trade names: metric trade names are applicable to regions/countries using the metric system or as specifically requested by customers; imperial trade names are applicable to regions/countries using the imperial system or as specifically requested by customers.



# CONTENTS

|          |                                                                                        |           |
|----------|----------------------------------------------------------------------------------------|-----------|
| <b>1</b> | <b>Safety Warning Symbols and Signs .....</b>                                          | <b>1</b>  |
| <b>2</b> | <b>Maintenance Safety Precautions .....</b>                                            | <b>5</b>  |
| 2.1      | General .....                                                                          | 5         |
| 2.2      | Instructions before Maintenance ..                                                     | 5         |
|          | Requirements for Maintenance Personnel .....                                           | 5         |
|          | Precautions before Maintenance .....                                                   | 5         |
| 2.3      | Maintenance Safety .....                                                               | 6         |
| 2.4      | Considerations After Maintenance .....                                                 | 10        |
| <b>3</b> | <b>Technical Characteristics</b>                                                       | <b>11</b> |
| 3.1      | Machine Specifications .....                                                           | 11        |
| 3.2      | Specifications of Major Components .....                                               | 13        |
|          | Travel Reducer .....                                                                   | 13        |
|          | Power Unit .....                                                                       | 13        |
|          | Battery .....                                                                          | 13        |
| 3.3      | Movement Speed .....                                                                   | 14        |
| 3.4      | Weight of Major Components ....                                                        | 14        |
| 3.5      | Pressure Limits .....                                                                  | 15        |
| 3.6      | Oil Requirements .....                                                                 | 15        |
| 3.7      | Torque Specifications .....                                                            | 16        |
|          | Special Torque Requirements .....                                                      | 16        |
|          | Fastener Torque Specifications .....                                                   | 16        |
|          | Hydraulic Hose Torque .....                                                            | 18        |
|          | Hydraulic Fitting Torque .....                                                         | 18        |
| <b>4</b> | <b>Maintenance Instructions</b>                                                        | <b>21</b> |
| 4.1      | Inspection and Preventive Maintenance Schedule .....                                   | 21        |
|          | Pre-delivery Inspection (PDI) .....                                                    | 21        |
|          | Pre-operation Inspection .....                                                         | 21        |
|          | Regular Inspections .....                                                              | 21        |
|          | Annual Inspection .....                                                                | 21        |
|          | Preventive Maintenance .....                                                           | 21        |
|          | Responsible Persons and Qualifications for Performing Inspection and Maintenance ..... | 22        |
|          | Inspection and Preventive Maintenance Schedule .....                                   | 22        |
| 4.2      | General Maintenance Instructions .....                                                 | 25        |
| 4.3      | Major Modification and Repair ...                                                      | 29        |
| <b>5</b> | <b>Platform Components.....</b>                                                        | <b>31</b> |
| 5.1      | Platform Controller .....                                                              | 31        |
| 5.2      | Platform assembly .....                                                                | 31        |
| <b>6</b> | <b>Boom Components.....</b>                                                            | <b>33</b> |
| 6.1      | Disassembly and Installation .....                                                     | 34        |
| 6.2      | Safety strut .....                                                                     | 34        |
| 6.3      | Lift Cylinder .....                                                                    | 34        |
| <b>7</b> | <b>Chassis Component .....</b>                                                         | <b>35</b> |
| 7.1      | Travel Drive System .....                                                              | 35        |
|          | Drive Motor and Reducer .....                                                          | 35        |
|          | Wheel carrier .....                                                                    | 35        |
| 7.2      | Tire Assembly .....                                                                    | 36        |
|          | Checking Tires and Rims .....                                                          | 36        |
|          | Checking Wheel Nuts .....                                                              | 36        |
|          | Replacement Requirements .....                                                         | 36        |
|          | Replacing Tire and Wheel Assembly                                                      | 36        |
| 7.3      | Rear Wheel Bearing Housing ....                                                        | 37        |
| 7.4      | Battery .....                                                                          | 37        |

## **8 Hydraulic system.....39**

- 8.1 Power Unit .....39
  - Function valves .....40
  - Hydraulic pump .....40
  - Hydraulic Tank .....40
- 8.2 Hydraulic Oil .....41
  - Checking Oil Level.....41
  - Checking the Cleanliness of the Hydraulic Oil .....41
  - Changing the Hydraulic Oil .....41
- 8.3 Adjusting Emergency Lowering Handle .....42
- 8.4 Cylinder Drift Inspection.....42
- 8.5 Hydraulic Symbols .....42
- 8.6 Hydraulic Schematic Diagram ...44

## **9 Electrical system.....45**

- 9.1 Battery .....45
  - Inspection.....45
  - Adding Fluid .....46
  - Equalization .....46
  - Storage .....46
- 9.2 Changing the Charging Curve ...47
- 9.3 Fault Code Description.....48
  - Machine Faults and Solutions .....48
  - Charging Faults and Solutions.....53
- 9.4 Basic troubleshooting .....54
- 9.5 Electrical Symbols .....56
- 9.6 Electrical Schematic Diagram....58

## **10 Functions and Controls 59**

- 10.1 Machine Positions .....59
- 10.2 Drive Function .....59
- 10.3 Brake Function.....59
- 10.4 Pothole Protection Device .....60
- 10.5 Tilt Protection Function .....60
- 10.6 Overload limit function .....60
- 10.7 Staged Lowering Function .....61
- 10.8 Emergency Lowering Function .61

## **11 Control System.....63**

- 11.1 Sinoboom Main Control System 63
  - System Interface.....63
  - Updating the Program .....66
  - Checking the Program Version .....66
  - Query Interface .....66
  - Brake Release .....66
  - Calibrate Parameters .....66
  - User Selection Setting .....68
  - Parameters Setting .....68

## **12 Appendix.....69**

- 12.1 Major Modification and Repair Record .....69
- 12.2 Inspection and Preventive Maintenance Schedule.....70

# 1 SAFETY WARNING SYMBOLS AND SIGNS

The safety warning symbols used on the machine and in the manuals have the following meanings:



Safety warning symbol. This symbol is used to alert you to potential hazards. Observe all safety instructions following a symbol to avoid possible injuries.



## **DANGER**

Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.



## **WARNING**

Indicates an imminently hazardous situation that, if not avoided, could result in death or serious injury.



 
 
 
 








## **CAUTION**






 
 
Indicates an imminently hazardous situation that, if not avoided, could result in minor or moderate injury.

## **NOTICE**

*Indicates information directly or indirectly related to personal safety, machine damage, or property loss.*

The safety signs used on the machine and in the manuals have the following meanings:
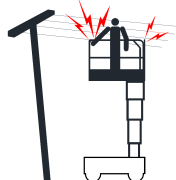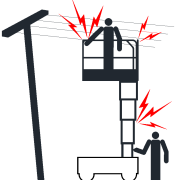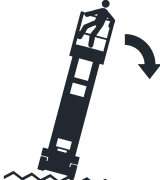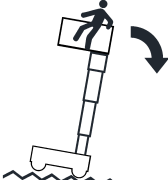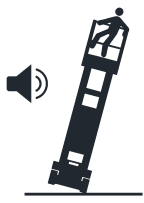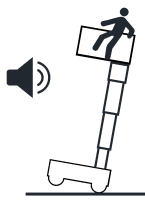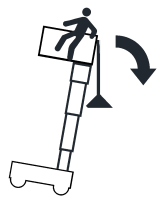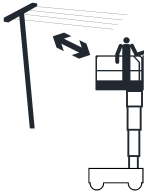
|                                                                                                                                                        |                                                                                                                                                  |                                                                                                                                                         |                                                                                                                                                  |                                                                                                                                                               |
|--------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br>Refer to the Maintenance Manual                                   | <br>Anchor point only for 1 person                              | <br>Wind speed                                                         | <br>Chemical burns hazard                                     | <br>Wedge the wheel                                                        |
| <br>Refer to the Operation Manual                                     | <br>Add lubricant                                               | <br>Crushing hazard – safety shoes required                            | <br>Danger of hot, high-pressure fluid spray                  | <br>Wind                                                                   |
| <br>Noise level                                                       | <br>Burn hazard                                                 | <br>Keep a safe distance from high temperatures                        | <br>Pull out-ON<br>Press-OFF                                   | <br>Alarm sounding                                                         |
| <br>Horn                                                             | <br>Hydraulic oil level low                                    | <br>Hydraulic oil level high                                          | <br>Temperature                                              | <br>Replace with tires of the same specification                          |
| <br>Only qualified maintenance personnel may access the compartment | <br>Electrocution hazard on platform                          | <br>Electrocution hazard on the ground and platform                  | <br>Tipping hazard – avoid uneven ground                     | <br>Tipping hazard – avoid uneven ground                                 |
| <br>Tipping hazard – never use machine in strong, gusty winds       | <br>Tipping hazard – never use machine in strong, gusty winds | <br>Tipping hazard – never push or pull objects outside the platform | <br>Tipping hazard – never suspend objects from the platform | <br>Tipping hazard – never place ladders and scaffolding on the platform |
|                                                                     |                                                               |                                                                      |                                                             |                                                                          |
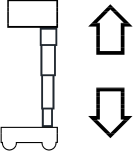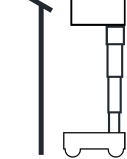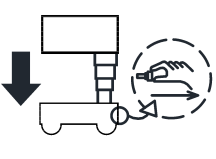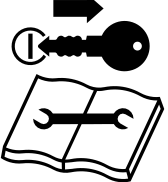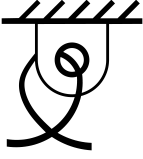
|                                                                                                                                                        |                                                                                                                       |                                                                                                           |                                                                                                                          |                                                                                                                                    |
|--------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| Keep a safe distance from power lines                                                                                                                  | Collision hazard – keep head clear of overhead obstacles when raising platform                                        | Crushing hazard – keep hands clear from overhead obstacles when raising platform                          | Fall hazard – never climb on platform guardrails                                                                         | Fall hazard – never climb on the boom                                                                                              |
| <br>Platform up and down movement                                     | <br>Indoor use                       | <br>Outdoor use          | <br>Emergency lowering handle position | <br>Wear protective clothing and safety goggles |
| <br>Only qualified maintenance personnel may perform maintenance work | <br>Lateral force                    | <br>Electrocution hazard | <br>Battery explosion hazard          | <br>No smoking or open flames/sparks            |
| <br>No smoking or open flames/sparks                                | <br>Lifting point                  | <br>Lashing point      | <br>Tire ground pressure            | <br>Hydraulic oil filler                      |
| <br>Platform load capacity                                          | <br>Do not use damaged power cords | <br>Tool or weight     | <br>Fast/high speed                  | <br>Slow/low speed                            |

**This Page Intentionally Left Blank**

# 2 MAINTENANCE SAFETY PRECAUTIONS

## 2.1 GENERAL

This chapter covers safety precautions that must be taken when servicing the mobile elevating work platform. Before carrying out any repair work, maintenance personnel must carefully read and understand all warnings and precautions, and follow the instructions in this manual when performing maintenance on the mobile elevating work platform.



### WARNING

It is forbidden to alter or modify the machine without the written permission of Hunan Sinoboom Intelligent Equipment Co., Ltd.

## 2.2 INSTRUCTIONS BEFORE MAINTENANCE

### Requirements for Maintenance Personnel

Maintenance personnel is responsible for maintaining the machine so that it can be operated safely and normally. Before performing inspection and maintenance work on this machine, maintenance personnel should read, understand and comply with all applicable regulations and requirements of employers, local authorities, and governments related to the operation of this machine. Maintenance personnel must also read and fully understand this manual.

Maintenance personnel shall:

- obtain appropriate qualification and authorization
- be experienced professional technicians or engineers
- be familiar with the machine and its associated risks
- receive appropriate training, including but not limited to training on the use of special equipment
- be familiar with the safety precautions and related operating procedures for maintenance work on this machine.

### NOTICE

- *Only authorized personnel who have received appropriate training and obtained qualifications may repair this machine.*
- *Individuals who have consumed alcohol or medication, who experience physical or mental fatigue or are unwell may not carry out any work on the machine.*

### Precautions before Maintenance

Before and during inspection and maintenance procedures personnel shall use caution and take measures to avoid dangerous situations. Those measures include, but are not limited to, the following:

1. Always park the machine on level, firm ground for maintenance, and ensure that the maintenance area is clean and unobstructed.
2. Choose appropriate safety equipment.
  - Maintenance personnel must identify risks in conjunction with inspection and maintenance work, and select appropriate safety equipment that is suitable for the type of work and the work place conditions, such as safety helmets, protective masks, protective gloves, goggles, protective clothing, safety belts and safety shoes.
  - Before carrying out inspection and maintenance work, check that the safety equipment is in good condition and is used correctly.
  - Safety equipment must be inspected regularly and needs to be replaced in case of damage.
3. Choose appropriate repair tools.
  - Before conducting any inspection and/or maintenance work, maintenance personnel shall prepare appropriate tools as required for the type of work, such as wrenches, screwdrivers, pliers, multimeter, pressure gauge, lubrication device, jack and lifting equipment.
  - Verify that the load capacity of jacks or lifting equipment is suitable for the planned task. Refer to the **Weight of Major Components** section to select a device with sufficient load capacity.
  - Service tools must be kept clean and in good condition.

4. Lock the wheels once the machine is parked to prevent it from moving inadvertently.
5. Do not perform inspection and/or maintenance work after the machine has been started.
  - Before performing inspection and/or maintenance work, make sure the machine is turned off, and remove the key. An "Out of Service" warning sign can be placed next to the ground controls and platform controls, or the main power switch can be pressed to prevent unrelated personnel from inadvertently starting the machine.

## 2.3 MAINTENANCE SAFETY



### WARNING

**Inadvertently starting the machine during inspection or maintenance may cause machine damage and/or personal injury.**

- If inspection or maintenance work must be carried out while the machine is running at least two people should work together. One person must be close to the turntable control panel or platform control panel so as to be able to turn off the machine any time if necessary while a second person carries out inspection or maintenance work, both persons shall maintain close contact with each other at all times.
6. Before carrying out maintenance work on electrical components always press (shut off) the main power switch.
  7. The machine should be cleaned before carrying out inspection and/or maintenance work. Avoid letting dust or debris enter internal machine components during the maintenance process, as this can affect the machine's performance.

The above listed requirements must be adhered to strictly during maintenance/inspection work. In addition, all other appropriate measures must be taken to ensure safety during maintenance work, taking account of the working environment.

## Unsafe Maintenance Hazards

### **WARNING**



- Before performing any adjustment or service operations, power off all control units and ensure that all moving parts are safely secured and cannot move unintentionally.
- Before performing any adjustment or service operations, ensure that the boom is stowed. Never work under a raised platform/boom. If it becomes necessary to work under the raised platform/boom, the platform and boom must be supported with appropriate safety supports.
- When lifting or moving heavy parts of the machine, use equipment with sufficient capacity, and never place heavy objects in an unstable position after moving.
- When machine parts are lifted by other equipment, ensure that there are no persons under and/or around the equipment.
- When striking brass rods with a mallet, make sure to wear eye protection.
- If you need to replace parts, use only original parts specified by Sinoboom.
- Do not wash the machine with water. The machine contains electronic components such as solenoid valves and sensors, which may fail or operate erratically after water ingress. If it is necessary to wash with water, turn off the emergency stop button and power switch before proceeding. Only turn the power back on after ensuring the machine is completely dry.
- Make sure the machine is turned off before using flushing equipment (such as a high-pressure water gun) to clean the machine. Do not direct water or steam ejected from the flushing equipment at electrical components, as this may cause short-circuits or electrical shocks.
- After maintenance is completed, thoroughly clean up any spilled

### **WARNING**

hydraulic oil, and avoid allowing it to be spilled on the ground.

- After maintenance is completed, immediately wash off any hydraulic oil that may have come into contact with your skin.
- Waste hydraulic fluids, fuels, coolants and refrigerants must be recycled or disposed as per local regulations.

## High Temperature and High Pressure Hazards

### WARNING



- While the machine is in operation or after running for a period of time, components may generate high surface temperatures, which can cause burns upon contact. Do not touch any hot parts!



- It is forbidden to repair or tighten hydraulic hoses or seals while the machine is operating or when the oil system is under pressure.
- Before loosening or disassembling hydraulic parts (especially the counterbalance valve on the cylinder), the hydraulic pressure of all hydraulic lines should be released and the hydraulic oil should completely cool down.
- For engine-powered machines, do not attempt to open the radiator cover while it is hot.
- Disassemble the hydraulic components slowly to prevent the hydraulic oil from splashing and causing injuries.
- Never check for hydraulic leakages by hand. Use a piece of cardboard or stiff paper to locate leaks, and wear gloves to protect your hands from spraying hydraulic fluid.
- Do not operate the machine in case of hydraulic or air leaks. Oil or air leakage from the hydraulic system may penetrate and burn the skin.
- Never plug hydraulic leaks by hand. If there is a leak, the pressure of the hydraulic system should be released first, maintenance/repair should be carried out after the hydraulic oil has cooled down.
- If injury occurs due to high temperature and/or high pressure, seek immediate medical attention. If treatment is not carried out immediately, serious complications may result.

## Welding and Grinding Operation Hazards

### WARNING



- Welding, grinding and polishing operations must follow the appropriate local safety procedures.
- Before performing welding, grinding and polishing operations, turn off the machine's power, and ensure that all wires or cables are connected correctly.
- Do not use the machine as a ground wire during welding and grinding operations.
- Always make sure that all power tools are placed completely within the perimeter of the platform. Do not hang the cords of power tools on the guardrail of the platform or in any work area outside the platform, and do not hang the power tools directly by their cords.

## Fire and Explosion Hazards

### WARNING



- Do not operate the machine, charge the battery or refuel the machine in places where potentially flammable or explosive gases may be present.
- Refueling and charging should be carried out in a well-ventilated place without flames, sparks, and other hazards that may cause fire or explosion.
- For engine-powered machines, do not refuel the machine while the engine is running.
- Never spray ether or other starting agents into glow-plug-equipped engines (engine-powered machines).
- Never touch the battery terminals or cable clamps with tools that can generate sparks.
- Only approved non-flammable cleaning solutions should be used on the machine.

## Battery Hazard

### WARNING



- Be sure to read and adhere to the battery manufacturer's recommendations on proper battery use and maintenance procedures.



- Individuals without adequate professional qualification should not repair and maintain the battery system, otherwise this may cause personal injury or damage to the battery system.



- Individuals without adequate professional qualification should not modify parameters, signal lights, etc. during the operation of the battery system, otherwise this may cause personal injury or damage to the battery system.



- Always wear goggles, protective gloves and protective clothing, and remove all rings, watches and other accessories before servicing the battery. Contact with live circuits may result in death or serious injury.



- Before replacing the battery, be sure to select an appropriate number of personnel and suitable lifting methods.

- It is forbidden to modify the battery system without approval to avoid serious accidents.

- When maintaining electrical components, the battery should be disconnected.

- Do not place tools or other metal objects across the two terminals of the battery.

- The battery charger can only be connected to a grounded three-wire AC power outlet. Make sure the charger is working properly before charging. Do not connect the battery directly to a power outlet.

- If the battery becomes hot, deformed, leaks, emits an unusual smell, or produces smoke during use, stop using the battery immediately and report to the relevant maintenance personnel promptly.

- Batteries contain sulfuric acid and can produce explosive

### WARNING

mixtures of hydrogen and oxygen. Keep any materials (including cigarette/smoking materials) that can cause sparks or flames away from batteries to prevent explosion.

- Never touch the battery terminals or cable clamps with tools that can generate sparks.
- Never charge the battery in direct sunlight. The battery should be charged in a well-ventilated place.

### CAUTION



- Avoid spilling battery acid or allowing it to come into contact with unprotected skin. If battery acid spills, use water mixed with bicarbonate (baking soda) to neutralize the acid. In case of contact with battery acid, rinse the acid off immediately with plenty of water and seek medical attention promptly.

- Always keep the battery upright. If the battery is placed on its side or at an angle, liquid may spill from the battery.

- Discarded batteries can be hazardous, and must not be treated like regular waste. If you need to discard them, please contact a battery recycling company.

## NOTICE



- Please use the charger provided by the manufacturer to charge the battery.
- The charging process must be completed in full. Frequent intermittent charging can damage the battery.
- The battery is only suitable for use with the equipment it was provided with at the time of manufacture. Do not use the battery for other purposes.
- Do not reverse the positive and negative terminals of the battery for use.
- Do not short-circuit the positive and negative terminals of the battery system.
- Do not place objects or tools on the battery to prevent short circuiting it.
- Do not strike, throw, step on, or hit the battery with sharp objects.
- Do not immerse the battery in water, acidic, alkaline or salty solutions, and protect the battery from rain.
- The battery should be fully charged immediately after each use of the machine, then the machine power switch should be turned off.

2. After maintenance, all maintained parts must be checked for abnormal operation, oil leakage, loose bolts and other problems.
3. The safety protective device needs to be restored or reinstalled, and if necessary, be recalibrated.
4. After maintenance, clear up the tools and equipment for maintenance, remove the replaced parts and loose objects, and clean up the site.
5. Record inspections and maintenance as required.

## NOTICE

*All maintenance work must include a verification that the machine is operating properly.*



## WARNING

- Waste liquids must not be dumped or disposed of randomly. Waste liquids shall be discharged into appropriate containers.
- Waste hydraulic fluids, fuels, coolants and refrigerants must be recycled or disposed as per local regulations.

## NOTICE

*Battery over-discharge (continued use of battery with level of less than 10%) or battery under-voltage caused by long-term non-charging (battery with level of less than 10% not charged for more than three days), resulting in battery capacity attenuation and failure, are not covered by the warranty.*

## 2.4 CONSIDERATIONS AFTER MAINTENANCE

1. Check the machine functions so that faults such as oil leakage or poor operation can be detected as early as possible.

# 3 TECHNICAL CHARACTERISTICS

## 3.1 MACHINE SPECIFICATIONS

Table 3-1 Specifications

| Item                                                        | Metric                                 | Imperial                           |
|-------------------------------------------------------------|----------------------------------------|------------------------------------|
| Product Category                                            |                                        |                                    |
| Battery type                                                | Maintenance-free lead-acid battery     |                                    |
| Travel drive type                                           | DC motor                               |                                    |
| Dimensions                                                  |                                        |                                    |
| Indoor Maximum platform height                              | 3.8 m                                  | 12 ft 5.6 in                       |
| Indoor Maximum working height                               | 5.8 m                                  | 19 ft                              |
| Overall length                                              | 1.38 m                                 | 4 ft 6.3 in                        |
| Overall width                                               | 0.78 m                                 | 2 ft 6.7 in                        |
| Overall height                                              | 1.66 m                                 | 5 ft 5.4 in                        |
| Wheelbase                                                   | 1.06 m                                 | 3 ft 5.7 in                        |
| Wheel track                                                 | 0.67 m                                 | 2.2 ft                             |
| Ground clearance (with pothole protective device retracted) | 0.068 m                                | 2.7 in                             |
| Ground clearance (with pothole protective device extended)  | 0.015 m                                | 0.59 in                            |
| Platform dimensions (L×W×H)                                 | 1.34 m×0.74 m×1.1 m                    | 4 ft 5 in×2 ft 5 in×3 ft 7 in      |
| Performance                                                 |                                        |                                    |
| Rated platform capacity                                     | 227 kg                                 | 500 lb                             |
| Maximum number of occupants                                 | 2 persons                              |                                    |
| Travel speed (stowed)                                       | 0 - 4 km/h                             | 0 - 2.5 mph                        |
| Travel speed (raised)                                       | 0 - 0.5 km/h                           | 0 - 0.3 mph                        |
| Platform lifting time (rated load)                          | 15 - 20 s                              |                                    |
| Platform lowering time (rated load)                         | 20 - 25 s                              |                                    |
| Gradeability (2WD)                                          | 25%/14°                                |                                    |
| Maximum allowable tilt angle (front-rear/left-right)        | 3°/1.5°                                |                                    |
| Turning radius (inside/outside)                             | 0.14 m/1.34 m                          | 5.5 in/4 ft 5 in                   |
| Tire (spec/type)                                            | Φ305×100 mm/solid<br>Φ305×114 mm/solid | Φ12×4 in/solid<br>Φ12×4.5 in/solid |
| Maximum operating noise level                               | 72dB                                   |                                    |
| IP rating                                                   | IP54                                   |                                    |

**Table 3-1 Specifications (continued)**

| Item                                                                             | Metric              | Imperial                  |
|----------------------------------------------------------------------------------|---------------------|---------------------------|
| Maximum total vibration on the platform                                          | 2.5 m/s²            |                           |
| Maximum whole body vibration value (WBV)                                         | 0.5 m/s²            |                           |
| Power                                                                            |                     |                           |
| Drive×steer                                                                      | 2 WD×2 WS           |                           |
| Power unit motor (voltage/power)                                                 | 24 V DC/2.2kW       |                           |
| Hydraulic tank volume                                                            | 6 L                 | 1.3 gal (UK)/1.6 gal (US) |
| Hydraulic system pressure                                                        | 9.5 MPa             | 1378 psi                  |
| Battery specifications (voltage, capacity, rate of discharge) -lead-acid battery | 24V, 220Ah, 20hr    |                           |
| System voltage                                                                   | 24 VDC              |                           |
| Control voltage                                                                  | 24 VDC              |                           |
| Charger (input voltage/output current)                                           | 100 - 240 V AC/15 A |                           |
| Drive motor (voltage/power)                                                      | 24 V DC/0.4 kW      |                           |
| Weight                                                                           |                     |                           |
| Gross weight (indoor/outdoor)                                                    | 780 kg              | 1720 lb                   |
| Ground bearing data                                                              |                     |                           |
| Maximum tire load                                                                | 260 kg              | 573 lb                    |
| Ground pressure                                                                  | 700 kPa             | 102 psi                   |
| Environment                                                                      |                     |                           |
| Maximum allowable side force                                                     | 400 N               | 90 lbf                    |
| Maximum allowable wind speed (indoor/outdoor)                                    | 0 m/s               | 0 mph                     |
| Maximum allowable altitude                                                       | 1000 m              | 3280.8 ft                 |
| Allowable ambient temperature (lead-acid battery)                                | -10°C to 40°C       | 14°F to 104°F             |
| Allowable ambient temperature range (lithium battery)                            | -20°C to 40°C       | -4°F to 104°F             |
| Maximum allowable relative humidity                                              | 90%                 |                           |

**Table 3-1 Specifications (continued)**

| Item                | Metric                                                                                                                                                                                | Imperial |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|
| Storage environment | Stored at -20°C to 50°C (-4°F to 122°F) in a well-ventilated environment with 90% relative humidity (20°C [68°F]), and away from rain, sun, corrosive gas, flammables and explosives. |          |

**Note:**

- a) The platform height plus the operator height (taken as 2m/6ft 7in) is the working height.
- b) In different areas, hydraulic oil, engine oil, coolant, fuel and lubricant should be added in accordance with the environmental temperature.
- c) In cold weather, auxiliary devices are needed to start the machine.
- d) The ground bearing data is approximate, without considering different options. Thus it is applicable only in adequately safe conditions.
- e) Rated platform load capacity refers to the maximum allowable load on the platform, including the weight of persons, materials, tools, accessories and other objects.
- f) The hydraulic tank capacity is the maximum volume of the tank.
- g) It's recommended not to use the lead-acid battery under the ambient temperature below 0°C, otherwise the battery capacity will decay rapidly and the battery life will be affected.

## 3.2 SPECIFICATIONS OF MAJOR COMPONENTS

### Travel Reducer

**Table 3-2 DC travel reducer (PN.203010003123)**

|                   |                   |
|-------------------|-------------------|
| Motor             |                   |
| Rated voltage     | 24VDC             |
| Rated power       | 400W              |
| Rated current     | 28A               |
| Rated rpm         | 4300rpm           |
| Brake             |                   |
| Voltage           | 24VDC             |
| Power             | 12.5W             |
| Torque            | 6Nm (4.4 ft-lb)   |
| Reducer           |                   |
| Maximum Torque    | 350Nm (258 ft-lb) |
| Continuous torque | 125 Nm (92 ft-lb) |
| Maximum rpm       | 5000 rpm          |
| Reduction ratio   | 50 : 1            |

### Power Unit

**Table 3-3 Power Unit (PN.202010000051)**

|              |              |
|--------------|--------------|
| Motor        |              |
| Power        | 2.2kW        |
| Voltage      | 24 V         |
| Current      | 125A         |
| RPM          | 2500–4500rpm |
| Pump         |              |
| Displacement | 4.2cc/r      |

### Battery

**Table 3-4 Maintenance-free AGM Battery (PN.203100000048)**

|                     |                                                                         |
|---------------------|-------------------------------------------------------------------------|
| Model               | EV31A-A115AH                                                            |
| Rated voltage       | 12 V                                                                    |
| Charging curve code | b48 (Longsheng charger)<br>203 (Tuobang charger)<br>12 (Yiyuan charger) |

## 3.3 MOVEMENT SPEED

Table 3-5

| Item                                     | Parameter        |
|------------------------------------------|------------------|
| Raise the platform                       | 15 to 20s        |
| Lower the platform                       | 20 to 25s        |
| Maximum travel speed in high gear-stowed | 24 to 30s        |
| Maximum travel speed in low gear-stowed  | 48 to 60s        |
| Maximum travel speed-operating           | 195 to 237s      |
| Braking distance at maximum drive speed  | S≤0.5m (1.64 ft) |

- a) The movement speed depends on the start point and end point of the movement, rather than on the controls or switches.
- b) The test results of travel speed vary with tyres of different specifications.
- c) All the speed tests should be conducted from the platform controls. The test results will differ if tested from the ground controls.
- d) All the tests should be conducted with the hydraulic oil temperature at 20 to 30°C (68 to 86°F). If the hydraulic oil temperature is too low the test results will be affected.

### Test requirements:

**Raise the platform:** Place a rated load on the platform and lift fully, fully raise the platform (from fully retracted position to fully raised position) twice.

**Lower the platform:** Place a rated load on the platform and lift fully, fully retract the platform (from fully raised position to fully retracted position) twice.

**Travel in high gear-stowed position:** With the machine on a level surface, in stowed position (do not activate high speed button), push the traveling joystick to the maximum travel distance. Drive the machine forward and reverse for 30m (98.4ft) respectively for two times.

**Travel in low gear-stowed position:** With the machine on a level surface, in stowed position (activate high speed button), push the traveling joystick to the maximum travel distance. Drive the machine forward and reverse for 30m (98.4ft) respectively for two times.

**Travel-operating position:** With the machine on a level surface, push the traveling joystick to the maximum travel distance. Drive the machine forward and reverse for 30m (98.4ft) respectively for two times.

**Braking distance :** As described in the “stowed position, high gear” test requirements, once the machine reaches the maximum drive speed, immediately release the control handle (starting timing) until the machine stops. Perform this maneuver for two times.

## 3.4 WEIGHT OF MAJOR COMPONENTS



### WARNING

- **Never attempt to move heavy components without the assistance of mechanical equipment.**
- **It is forbidden to place heavy components in an unstable position.**

Table 3-6

| Component         | Metric (kg) | Imperial (lb) |
|-------------------|-------------|---------------|
| Chassis assembly  | 520         | 1146          |
| Travel Reducer    | 16          | 35            |
| Steering cylinder | 4.3         | 9.5           |
| Wheel carrier     | 14          | 31            |
| Front wheel       | 13          | 29            |
| Rear wheel        | 17          | 37            |
| Left box          | 10          | 22            |
| Right box         | 10          | 22            |
| Battery           | 33          | 73            |
| Power Unit        | 16          | 35            |

Table 3-6 (continued)

| Component              | Metric (kg) | Imperial (lb) |
|------------------------|-------------|---------------|
| Boom assembly          | 210         | 463           |
| Base boom              | 36          | 79            |
| Second integrated boom | 30          | 66            |
| Third integrated boom  | 34          | 75            |
| Fourth integrated boom | 50          | 110           |
| Lift Cylinder          | 50          | 110           |
| Platform assembly      | 75          | 165           |

**Note:** The weight of certain components will vary with the options configured on the machine.

## 3.5 PRESSURE LIMITS

Table 3-7

| Movement                        | Maximum pressure   |
|---------------------------------|--------------------|
| Platform lifting, tire steering | 9.5 MPa (1378 psi) |



### WARNING

- Before refilling oil, wait until the temperature of the machine drops to room temperature, otherwise it may cause splashes, burns or other personal injury.
- The use of inferior oils is strictly prohibited. Using inferior oil may damage the machine, and faults caused by this are not covered by Sinoboom's warranty.

## 3.6 OIL REQUIREMENTS

### NOTICE

- Please choose suitable oil according to the ambient temperature and local regulations; the use of unsuitable oil will damage the machine components.
- Oils of different grades or viscosities should not be mixed. When refilling oil, the oil being added must be of the same grade and viscosity as that of the oil currently in use in the machine.
- The oil recommendations in this manual are for general operating conditions. For special environments or special operating requirements please contact Sinoboom for special oil.

### Hydraulic Oil

Factory-filled hydraulic oil is usually L-HV32 or L-HM46 or as specified by customers. Different regions have different temperature environments, so please select the hydraulic oil suitable for your region according to the recommendations in the table below.

Table 3-8

| Ambient temperature range       | Sinopec                                | Mobil           | Shell         | Castrol        |
|---------------------------------|----------------------------------------|-----------------|---------------|----------------|
| > 40°C<br>(104°F)               | AE46                                   | DTE 10 Excel 46 | S2M46         | Hyspin AWH-M46 |
| -25°C ~ 40°C<br>(-13°F ~ 104°F) | L-HV32                                 | DTE 10 Excel 32 | TELLUS-S3VE32 | Hyspin HVI-32  |
| <-30°C<br>(-22°F)               | Special oil required, to be determined |                 |               |                |

## 3.7 TORQUE SPECIFICATIONS

### Special Torque Requirements

Please refer to the table below for special torque requirements:

Table 3-9 Special torque requirements

| No. | Description                  | Torque value                |
|-----|------------------------------|-----------------------------|
| 1   | Travel reducer mounting bolt | 53Nm (39ft-lb)              |
| 2   | Cable nut M8                 | 9 ~ 11 Nm (6.6 ~ 8.1 ft-lb) |
| 3   | Cable nut M10                | 18 ~ 23Nm (13.2 ~ 17ft-lb)  |

### Fastener Torque Specifications

Torque metric bolts to the values specified in the table below unless special torque requirements are stated in this manual or other instructions.

Table 3-10 Fastener torque specifications – metric

| Nominal diameter (mm) | Pitch (mm) | Class 8.8          | Class 10.9         | Class 12.9         |
|-----------------------|------------|--------------------|--------------------|--------------------|
| 5                     | 0.8        | 7 Nm (5 ft-lb)     | 9 Nm (7 ft-lb)     | 10 Nm (7 ft-lb)    |
| 6                     | 1          | 12 Nm (9 ft-lb)    | 15 Nm (11 ft-lb)   | 18 Nm (13 ft-lb)   |
| 8                     | 1.25       | 30 Nm (22 ft-lb)   | 35 Nm (26 ft-lb)   | 42 Nm (31 ft-lb)   |
|                       | 1          | 30 Nm (22 ft-lb)   | 37 Nm (27 ft-lb)   | 45 Nm (33 ft-lb)   |
| 10                    | 1.5        | 55 Nm (41 ft-lb)   | 75 Nm (55 ft-lb)   | 85 Nm (63 ft-lb)   |
|                       | 1.25       | 56 Nm (41 ft-lb)   | 77 Nm (57 ft-lb)   | 87 Nm (64 ft-lb)   |
|                       | 1          | 60 Nm (44 ft-lb)   | 80 Nm (59 ft-lb)   | 92 Nm (68 ft-lb)   |
| 12                    | 1.75       | 95 Nm (70 ft-lb)   | 125 Nm (92 ft-lb)  | 150 Nm (111 ft-lb) |
|                       | 1.5        | 100 Nm (74 ft-lb)  | 130 Nm (96 ft-lb)  | 155 Nm (114 ft-lb) |
|                       | 1.25       | 105 Nm (77 ft-lb)  | 135 Nm (100 ft-lb) | 160 Nm (118 ft-lb) |
| 14                    | 2          | 150 Nm (110 ft-lb) | 200 Nm (148 ft-lb) | 230 Nm (170 ft-lb) |
|                       | 1.5        | 165 Nm (122 ft-lb) | 210 Nm (155 ft-lb) | 250 Nm (184 ft-lb) |

**Table 3-10 Fastener torque specifications – metric (continued)**

| Nominal diameter (mm) | Pitch (mm) | Class 8.8            | Class 10.9           | Class 12.9           |
|-----------------------|------------|----------------------|----------------------|----------------------|
| 16                    | 2          | 230 Nm (170 ft-lb)   | 300 Nm (221 ft-lb)   | 360 Nm (266 ft-lb)   |
|                       | 1.5        | 250 Nm (184 ft-lb)   | 320 Nm (236 ft-lb)   | 380 Nm (280 ft-lb)   |
| 18                    | 2.5        | 320 Nm (236 ft-lb)   | 420 Nm (310 ft-lb)   | 500 Nm (369 ft-lb)   |
|                       | 1.5        | 360 Nm (266 ft-lb)   | 470 Nm (345 ft-lb)   | 550 Nm (406 ft-lb)   |
| 20                    | 2.5        | 450 Nm (332 ft-lb)   | 600 Nm (443 ft-lb)   | 700 Nm (516 ft-lb)   |
|                       | 1.5        | 500 Nm (369 ft-lb)   | 650 Nm (479 ft-lb)   | 770 Nm (568 ft-lb)   |
| 22                    | 2.5        | 600 Nm (443 ft-lb)   | 800 Nm (590 ft-lb)   | 980 Nm (723 ft-lb)   |
|                       | 2          | 650 Nm (479 ft-lb)   | 850 Nm (627 ft-lb)   | 1050 Nm (774 ft-lb)  |
| 24                    | 3          | 750 Nm (553 ft-lb)   | 1050 Nm (774 ft-lb)  | 1250 Nm (923 ft-lb)  |
|                       | 2          | 800 Nm (590 ft-lb)   | 1100 Nm (811 ft-lb)  | 1300 Nm (959 ft-lb)  |
| 27                    | 3          | 1150 Nm (848 ft-lb)  | 1500 Nm (1106 ft-lb) | 1800 Nm (1327 ft-lb) |
| 30                    | 3.5        | 1500 Nm (1106 ft-lb) | 2000 Nm (1475 ft-lb) | 2400 Nm (1770 ft-lb) |

Unless special torque requirements are specified in this manual or other instructions, torque Unified Thread Standard bolts (label: UNF) to the values specified in the table below.

**Table 3-11 Fastener torque specifications – Unified Thread Standard (UNC)**

| Nominal diameter (in) | Opposite nut size (s) | Class 5            | Class 8            |
|-----------------------|-----------------------|--------------------|--------------------|
| 1/4-20                | 7/16"                 | 10 Nm (7 ft-lb)    | 14 Nm (10 ft-lb)   |
| 5/16-18               | 1/2"                  | 21 Nm (15 ft-lb)   | 29 Nm (21 ft-lb)   |
| 3/8-16                | 9/16"                 | 37 Nm (27 ft-lb)   | 51 Nm (38 ft-lb)   |
| 7/16-14               | 5/8"                  | 60 Nm (44 ft-lb)   | 82 Nm (60 ft-lb)   |
| 1/2-13                | 3/4"                  | 90 Nm (66 ft-lb)   | 130 Nm (96 ft-lb)  |
| 9/16-12               | 13/16"                | 130 Nm (96 ft-lb)  | 180 Nm (133 ft-lb) |
| 5/8-11                | 15/16"                | 178 Nm (131 ft-lb) | 250 Nm (184 ft-lb) |
| 3/4-10                | 1-1/8"                | 315 Nm (232 ft-lb) | 445 Nm (328 ft-lb) |
| 7/8-9                 | -                     | 509 Nm (375 ft-lb) | 715 Nm (527 ft-lb) |

Unless special torque requirements are specified in this manual or other instructions, torque Unified Thread Standard bolts (label: UNF) to the values listed in the table below.

**Table 3-12 Fastener torque specification-Unified Thread Standard bolts (UNF)**

| Nominal diameter (in) | Opposite nut size (s) | Class 5           | Class 8          |
|-----------------------|-----------------------|-------------------|------------------|
| 1/4-28                | 7/16"                 | 11.5 Nm (8 ft-lb) | 16 Nm (11 ft-lb) |
| 5/16-24               | 1/2"                  | 23 Nm (17 ft-lb)  | 32 Nm (24 ft-lb) |
| 3/8-24                | 9/16"                 | 41 Nm (30 ft-lb)  | 58 Nm (43 ft-lb) |

**Table 3-12 Fastener torque specification-Unified Thread Standard bolts (UNF) (continued)**

| Nominal diameter (in) | Opposite nut size (s) | Class 5            | Class 8            |
|-----------------------|-----------------------|--------------------|--------------------|
| 7/16-20               | 5/8"                  | 65 Nm (48 ft-lb)   | 92 Nm (68 ft-lb)   |
| 1/2-20                | 3/4"                  | 100 Nm (74 ft-lb)  | 145 Nm (107 ft-lb) |
| 9/16-18               | 13/16"                | 145 Nm (107 ft-lb) | 200 Nm (148 ft-lb) |
| 5/8-18                | 15/16"                | 200 Nm (148 ft-lb) | 280 Nm (207 ft-lb) |
| 3/4-16                | 1-1/8"                | 350 Nm (258 ft-lb) | 495 Nm (365 ft-lb) |
| 7/8-14                | -                     | 560 Nm (413 ft-lb) | 780 Nm (575 ft-lb) |

## Hydraulic Hose Torque

The hydraulic hoses must be installed with the following torques.

**Table 3-13 Hydraulic Hose Torque**

| Metric thread | L (light-duty)           | S (heavy-duty)           |
|---------------|--------------------------|--------------------------|
| M12 × 1.5     | 19±1 Nm (14±1 ft-lb)     |                          |
| M14 × 1.5     | 26±2 Nm (19±2 ft-lb)     |                          |
| M16 × 1.5     | 40±3 Nm (30±2 ft-lb)     |                          |
| M18 × 1.5     | 50±4 Nm (37±3 ft-lb)     |                          |
| M20 × 1.5     | -                        | 60±4 Nm (44±3 ft-lb)     |
| M22 × 1.5     | 70±5 Nm (52±4 ft-lb)     | -                        |
| M24×1.5       | -                        | 85±6 Nm (63±4 ft-lb)     |
| M26 × 1.5     | 90±6 Nm (66±4 ft-lb)     | -                        |
| M30 × 2       | 120±8 Nm (89±6 ft-lb)    | 140±10 Nm (103±7 ft-lb)  |
| M36 × 2       | 150±12 Nm (111±9 ft-lb)  | 180±12 Nm (133±9 ft-lb)  |
| M42 × 2       | -                        | 260±16 Nm (192±12 ft-lb) |
| M45 × 2       | 240±15 Nm (177±11 ft-lb) | -                        |
| M52 × 2       | 250±16 Nm (184±12 ft-lb) | 280±18 Nm (207±13 ft-lb) |

## Hydraulic Fitting Torque

The hydraulic pipe fittings with metric thread must be installed with the following torques.

**Table 3-14 Hydraulic Fitting Torque – Metric**

| Thread size    | Installed with aluminum | Installed with steel |                      |
|----------------|-------------------------|----------------------|----------------------|
|                | ED, O-ring + Circlip    | ED, O-ring + Circlip | O-ring seal          |
| L (light-duty) |                         |                      |                      |
| M10×1          | 18±1 Nm (13±1 ft-lb)    | 20±2 Nm (15±2 ft-lb) | 18±1 Nm (13±1 ft-lb) |
| M12×1.5        | 30±2 Nm (22±2 ft-lb)    | 35±2 Nm (26±2 ft-lb) | 30±2 Nm (22±2 ft-lb) |

**Table 3-14 Hydraulic Fitting Torque – Metric (continued)**

| Thread size    | Installed with aluminum  | Installed with steel         |                          |
|----------------|--------------------------|------------------------------|--------------------------|
|                | ED, O-ring + Circlip     | ED, O-ring + Circlip         | O-ring seal              |
| M14×1.5        | 42±3 Nm (31±2 ft-lb)     | 48±4 Nm (35±3 ft-lb)         | 35±2 Nm (26±2 ft-lb)     |
| M16×1.5        | 55±4 Nm (41±3 ft-lb)     | 60±4 Nm (44±3 ft-lb)         | 40±3 Nm (30±3 ft-lb)     |
| M18×1.5        | 75±5 Nm (55±4 ft-lb)     | 75±5 Nm (55±4 ft-lb)         | 45 ± 3 Nm (33 ± 4 ft-lb) |
| M22×1.5        | 90±6 Nm (66±4 ft-lb)     | 130±8 Nm (96±6 ft-lb)        | 60±4 Nm (44±3 ft-lb)     |
| M27×2          | 120±8 Nm (89±6 ft-lb)    | 185±12 Nm (136±9 ft-lb)      | 100±7 Nm (74±5 ft-lb)    |
| M30×2          | 140±8 Nm (103±6 ft-lb)   | 245±15 Nm (181±11 ft-lb)     | 135±8 Nm (100±6 ft-lb)   |
| M33×2          | 180±10 Nm (133±7 ft-lb)  | 320±20 Nm (236±15 ft-lb)     | 160±10 Nm (118±7 ft-lb)  |
| M42×2          | 240±15 Nm (177±11 ft-lb) | 450 ± 25 Nm (332 ± 18 ft-lb) | 210±13 Nm (155±10 ft-lb) |
| M48×2          | 280±20 Nm (207±15 ft-lb) | 540±30 Nm (398±22 ft-lb)     | 260±15 Nm (192±11 ft-lb) |
| S (heavy-duty) |                          |                              |                          |
| M12×1.5        | 33±2 Nm (24±2 ft-lb)     | 43±3 Nm (32±2 ft-lb)         | 35±2 Nm (26±2 ft-lb)     |
| M14×1.5        | 42±3 Nm (31±2 ft-lb)     | 50±4 Nm (37±3 ft-lb)         | 45 ± 3 Nm (33 ± 2 ft-lb) |
| M16×1.5        | 55±4 Nm (41±3 ft-lb)     | 75±5 Nm (55±4 ft-lb)         | 55±4 Nm (41±3 ft-lb)     |
| M18×1.5        | 75±5 Nm (55±4 ft-lb)     | 95±6 Nm (70±4 ft-lb)         | 70±5 Nm (52±4 ft-lb)     |
| M22×1.5        | 90±6 Nm (66±4 ft-lb)     | 140±8 Nm (103±6 ft-lb)       | 100±10 Nm (74±7 ft-lb)   |
| M27×2          | 120±8 Nm (89±6 ft-lb)    | 185±12 Nm (136±9 ft-lb)      | 160±10 Nm (118±7 ft-lb)  |
| M30×2          | 140±8 Nm (103±6 ft-lb)   | 245±15 Nm (181±11 ft-lb)     | 210±13 Nm (155±10 ft-lb) |
| M33×2          | 180±10 Nm (133±7 ft-lb)  | 320±20 Nm (236±15 ft-lb)     | 260±15 Nm (192±11 ft-lb) |
| M42×2          | 240±15 Nm (177±11 ft-lb) | 450 ± 25 Nm (332 ± 18 ft-lb) | 330±20 Nm (243±15 ft-lb) |
| M48×2          | 280±20 Nm (207±15 ft-lb) | 540±30 Nm (398±22 ft-lb)     | 420±25 Nm (310±18 ft-lb) |

The hydraulic pipe fittings with British Standard Pipe (BSP) thread must be installed with the following torques.

**Table 3-15 Hydraulic Fitting Torque - British Standard Pipe (BSP)**

| Thread size    | Installed with aluminum  | Installed with steel         |             |
|----------------|--------------------------|------------------------------|-------------|
|                | ED, O-ring + Circlip     | ED, O-ring + Circlip         | O-ring seal |
| L (light-duty) |                          |                              |             |
| G1/8A          | 20±1 Nm (15±1 ft-lb)     | 20±1 Nm (15±1 ft-lb)         | -           |
| G1/4A          | 35±2 Nm (26±2 ft-lb)     | 40±2 Nm (30±2 ft-lb)         | -           |
| G3/8A          | 50±3 Nm (37±2 ft-lb)     | 75±5 Nm (55±2 ft-lb)         | -           |
| G1/2A          | 75±5 Nm (55±2 ft-lb)     | 95±6 Nm (70±4 ft-lb)         | -           |
| G3/4A          | 120±8 Nm (89±6 ft-lb)    | 185±12 Nm (136±9 ft-lb)      | -           |
| G1A            | 180±10 Nm (133±7 ft-lb)  | 320±20 Nm (236±15 ft-lb)     | -           |
| G1-1/4A        | 240±15 Nm (177±11 ft-lb) | 450 ± 25 Nm (332 ± 18 ft-lb) | -           |
| G1-1/2A        | 280±20 Nm (207±15 ft-lb) | 540±30 Nm (398±22 ft-lb)     | -           |

**Table 3-15 Hydraulic Fitting Torque - British Standard Pipe (BSP) (continued)**

| Thread size    | Installed with aluminum  | Installed with steel         |             |
|----------------|--------------------------|------------------------------|-------------|
|                | ED, O-ring + Circlip     | ED, O-ring + Circlip         | O-ring seal |
| S (heavy-duty) |                          |                              |             |
| G1/4A          | 40±3 Nm (30±2 ft-lb)     | 43±3 Nm (32±2 ft-lb)         | -           |
| G3/8A          | 55±3 Nm (41±2 ft-lb)     | 85±5 Nm (63±4 ft-lb)         | -           |
| G1/2A          | 80±5 Nm (59±4 ft-lb)     | 120±8 Nm (89±6 ft-lb)        | -           |
| G3/4A          | 120±8 Nm (89±6 ft-lb)    | 185±12 Nm (136±9 ft-lb)      | -           |
| G1A            | 180±10 Nm (133±7 ft-lb)  | 320±20 Nm (236±15 ft-lb)     | -           |
| G1-1/4A        | 240±15 Nm (177±11 ft-lb) | 450 ± 25 Nm (332 ± 18 ft-lb) | -           |
| G1-1/2A        | 280±20 Nm (207±15 ft-lb) | 540±30 Nm (398±22 ft-lb)     | -           |

The hydraulic pipe fittings with Unified Thread Standard (UNC/UNF) thread must be installed with the following torques.

**Table 3-16 Hydraulic Fitting Torque - Unified Thread Standard (UNC/UNF)**

| Thread size    | Installed with aluminum | Installed with steel     |
|----------------|-------------------------|--------------------------|
|                | O-ring seal             | O-ring seal              |
| L (light-duty) |                         |                          |
| 7/16-20        | 21±2 Nm (15±2 ft-lb)    | 21±2 Nm (15±2 ft-lb)     |
| 9/16-18        | 34±2 Nm (25±2 ft-lb)    | 35±2 Nm (26±2 ft-lb)     |
| 11/16-12       | 40±3 Nm (30±2 ft-lb)    | 50±4 Nm (37±3 ft-lb)     |
| 3/4-16         | 50±3 Nm (37±2 ft-lb)    | 65±4 Nm (48±3 ft-lb)     |
| 7/8-14         | 75±5 Nm (55±4 ft-lb)    | 110±8 Nm (81±6 ft-lb)    |
| 1-1/16-12      | 110±8 Nm (81±6 ft-lb)   | 140±10 Nm (103±7 ft-lb)  |
| 1-5/16-12      | 160±10 Nm (118±7 ft-lb) | 210±15 Nm (155±11 ft-lb) |
| S (heavy-duty) |                         |                          |
| 7/16-20        | 21±2 Nm (15±2 ft-lb)    | 23±2 Nm (17±2 ft-lb)     |
| 9/16-18        | 34±2 Nm (25±2 ft-lb)    | 40±3 Nm (30±2 ft-lb)     |
| 11/16-12       | 40±3 Nm (30±2 ft-lb)    | 65±4 Nm (48±3 ft-lb)     |
| 3/4-16         | 50±3 Nm (37±2 ft-lb)    | 80±6 Nm (59±4 ft-lb)     |
| 7/8-14         | 75±5 Nm (55±4 ft-lb)    | 125±10 Nm (92±7 ft-lb)   |
| 1-1/16-12      | 110±8 Nm (81±6 ft-lb)   | 185±15 Nm (136±11 ft-lb) |
| 1-5/16-12      | 160±10 Nm (118±7 ft-lb) | 280±20 Nm (207±15 ft-lb) |

# 4 MAINTENANCE INSTRUCTIONS

## 4.1 INSPECTION AND PREVENTIVE MAINTENANCE SCHEDULE

This section provides safety and other vital information for machine operators. To extend the service life of the machine and ensure safe operation, all necessary inspections and maintenance work must be completed before the machine is put into service.

It is crucial to develop and adhere to a comprehensive inspection and preventive maintenance program. This manual outlines the regular inspections and maintenance procedures recommended by Hunan Sinoboom Intelligent Co., Ltd. Consult your national, regional or local regulations for aerial work platforms. The frequency of the inspection and maintenance must be increased as required by environmental conditions, requirements and frequency of usage.

### Pre-delivery Inspection (PDI)

The pre-delivery inspection shall be performed by qualified Sinoboom technicians.

A pre-delivery inspection shall be performed before each sale, lease or rental delivery.

Refer to the **Inspection and Preventive Maintenance Schedule** for items requiring a PDI. Refer to the corresponding section of this manual to perform inspection and maintenance procedures.

### Pre-operation Inspection

A pre-operation inspection must be performed before each start or restart of work, change of operator, and after each maintenance operation. Refer to the pre-operation inspection section of the Operation Manual for detailed information. The Operation Manual must be entirely read and understood before performing the pre-operation inspection.

### Regular Inspections

Regular inspections shall be performed by qualified Sinoboom technicians.

Regular inspections must be performed after the machine has been in service for 3 months or 250 hours, whichever comes first, or if it has been out of service for more than 3 months. The frequency of the inspection and maintenance must be increased as required by environmental conditions, requirements and frequency of usage.

The items included in the regular inspections are identical to the pre-delivery inspection.

### Annual Inspection

An annual machine inspection must be performed once a year and no later than 13 months from the date of the previous annual inspection. Hunan Sinoboom Intelligent Equipment Co., Ltd. recommends this task be performed by a factory-trained service technician, a person recognized by Sinoboom as one who, by qualification, certificate and training, has successfully demonstrated the ability and proficiency to service, repair and maintain the Sinoboom model in question.

Refer to the **Inspection and Preventive Maintenance Schedule** for items requiring annual inspection, and refer to the corresponding section of this manual to perform inspection and maintenance procedures.

### Preventive Maintenance

Preventive maintenance procedures shall be performed by qualified Sinoboom technicians. The frequency of the inspection and maintenance must be increased as required by environmental conditions, requirements and frequency of usage.

Refer to the **Inspection and Preventive Maintenance Schedule** for items requiring a PDI. Refer to the corresponding section of this manual to perform inspection and maintenance procedures.

## Responsible Persons and Qualifications for Performing Inspection and Maintenance

Table 4-1

| Inspection Type               | Inspection Frequency                                                                                  | Primary Responsible Persons | Service Qualifications             |
|-------------------------------|-------------------------------------------------------------------------------------------------------|-----------------------------|------------------------------------|
| Pre-operation Inspection      | Before starting/restarting work, change of user, after each maintenance activity.                     | User or operator            | Properly trained user or operator  |
| Pre-delivery Inspection (PDI) | Before each sale, lease or rental delivery                                                            | Owner, dealer or user       | Qualified Sinoboom technician      |
| Regular Inspections           | In service for 3 months or 250 hours (whichever comes first) or out of service for more than 3 months | Owner, dealer or user       | Qualified Sinoboom technician      |
| Annual Inspection             | Once a year and no later than 13 months from the date of the previous annual inspection               | Owner, dealer or user       | Factory-trained service technician |
| Preventive Maintenance        | At intervals specified in the <b>Inspection and Preventive Maintenance Schedule</b>                   | Owner, dealer or user       | Qualified Sinoboom technician      |

## Inspection and Preventive Maintenance Schedule

Perform inspection and preventive maintenance for the items in the table below at the specified intervals. Maintenance and inspection intervals are calculated based on the months of service or the “accumulated operating hours” (cumulative working time) displayed on the ground controls (whichever comes first).

Inspection intervals are based on the use of the machine under normal operating conditions. The intervals should be shortened accordingly when operating in harsh environmental conditions.

Table 4-2 Inspection and Preventive Maintenance Schedule

| Item                        | Interval                                                    |                           |                       |
|-----------------------------|-------------------------------------------------------------|---------------------------|-----------------------|
|                             | Before each delivery <sup>1</sup> or quarterly <sup>2</sup> | Semiannually <sup>3</sup> | Annually <sup>4</sup> |
| <b>Platform assembly</b>    |                                                             |                           |                       |
| Platform                    | 1                                                           | 1                         | 1                     |
| Guardrails and floor        | 2                                                           | 2                         | 2                     |
| Access gate                 | 1, 2, 3                                                     | 1, 2, 3                   | 1, 2, 3               |
| Platform fasteners          | 1, 2                                                        | 1, 2                      | 1, 2                  |
| Safety belt anchorage point | 1, 2, 7                                                     | 1, 2, 7                   | 1, 2, 7               |
| <b>Boom assembly</b>        |                                                             |                           |                       |
| Boom weldment               | 1, 2                                                        | 1, 2                      | 1, 2                  |
| Wear pads                   | 1, 2, 5, 12                                                 | 1, 2, 5, 12               | 1, 2, 5, 12           |

**Table 4-2 Inspection and Preventive Maintenance Schedule (continued)**

| Item                                       | Interval                                                    |                           |                       |
|--------------------------------------------|-------------------------------------------------------------|---------------------------|-----------------------|
|                                            | Before each delivery <sup>1</sup> or quarterly <sup>2</sup> | Semiannually <sup>3</sup> | Annually <sup>4</sup> |
| Bearings                                   | 1, 2, 5, 12                                                 | 1, 2, 5, 12               | 1, 2, 5, 12           |
| Fasteners                                  | 1, 2                                                        | 1, 2                      | 1, 2                  |
| <b>Chassis assembly</b>                    |                                                             |                           |                       |
| Chassis                                    | 2                                                           | 2                         | 2                     |
| Tires                                      | 1, 2                                                        | 1, 2                      | 1, 2                  |
| Wheel nuts                                 | 1 <sup>50</sup>                                             | 1 <sup>50</sup>           | 1 <sup>50</sup>       |
| Traveling and steering components          | 1, 2, 5                                                     | 1, 2, 5                   | 1, 2, 5               |
| Bearings                                   | 1, 2, 5, 12                                                 | 1, 2, 5, 12               | 1, 2, 5               |
| Left compartment, right compartment        | 1, 2, 3                                                     | 1, 2, 3                   | 1, 2, 3               |
| Drive or drive motor                       | 1, 5, 6                                                     | 1, 5, 6                   | 1, 5, 6               |
| Brake and brake release device             | 1, 5, 6                                                     | 1, 5, 6                   | 1, 5, 6               |
| Lift motor                                 | 1, 2, 3, 6                                                  | 1, 2, 3, 6, 13            | 1, 2, 3, 6, 13        |
| Gear pump                                  | 1, 2, 3, 6                                                  | 1, 2, 3, 6                | 1, 2, 3, 6            |
| Safety strut                               | 1, 2, 3                                                     | 1, 2, 3                   | 1, 2, 3               |
| <b>Hydraulic System</b>                    |                                                             |                           |                       |
| Hydraulic pump                             | 1, 2, 3, 6                                                  | 1, 2, 3, 6                | 1, 2, 3, 6            |
| Hydraulic cylinder                         | 1, 2, 3, 5, 6                                               | 1, 2, 3, 5, 6             | 1, 2, 3, 5, 6         |
| Hydraulic valves                           | 1, 2, 3, 5, 6                                               | 1, 2, 3, 5, 6             | 1, 2, 3, 5, 6         |
| Hydraulic hoses, pipes and fitting         | 1, 2, 6                                                     | 1, 2, 6                   | 1, 2, 6               |
| Hydraulic tank and vent                    | 1, 2, 3, 5, 6                                               | 1, 2, 3, 5, 6             | 1, 2, 3, 5, 6         |
| Hydraulic oil filter                       | 1, 5, 6                                                     | 1, 5, 6                   | 1, 5, 6, 11           |
| Hydraulic oil                              | 5, 6                                                        | 5, 6                      | 5, 6, 11              |
| <b>Electrical system</b>                   |                                                             |                           |                       |
| Electrical harness, connectors             | 1, 2                                                        | 1, 2                      | 1, 2                  |
| Battery                                    | 1, 2, 6, 9, 12                                              | 1, 2, 6, 9, 12            | 1, 2, 6, 9, 12        |
| Electrolyte                                | 6                                                           | 6                         | 6                     |
| Charging function                          | 3                                                           | 3                         | 3                     |
| Instruments, gauges, switches, lamps, horn | 1, 3                                                        | 1, 3                      | 1, 3                  |
| <b>Functions and controls</b>              |                                                             |                           |                       |
| Platform controller                        | 1, 3, 4, 7, 10                                              | 1, 3, 4, 7, 10            | 1, 3, 4, 7, 10        |
| Ground controller                          | 1, 3, 4, 7, 10                                              | 1, 3, 4, 7, 10            | 1, 3, 4, 7, 10        |

**Table 4-2 Inspection and Preventive Maintenance Schedule (continued)**

| Item                                                       | Interval                                                    |                           |                       |
|------------------------------------------------------------|-------------------------------------------------------------|---------------------------|-----------------------|
|                                                            | Before each delivery <sup>1</sup> or quarterly <sup>2</sup> | Semiannually <sup>3</sup> | Annually <sup>4</sup> |
| Function control lock, secondary guarding device and brake | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| Emergency stop button (ground and platform)                | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| Limit switches and power switch                            | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| Tilt alarm                                                 | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| Pothole protection device                                  | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| Emergency lowering device                                  | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| Overload limit function                                    | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| Staged lowering function                                   | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| Drive function                                             | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| Brake function                                             | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| <b>Other</b>                                               |                                                             |                           |                       |
| Operation Manual in the manuals compartment                | 10                                                          | 10                        | 10                    |
| All decals/labels complete, clear and secure               | 10                                                          | 10                        | 10                    |
| Annual inspection date of the machine                      | /                                                           | /                         | 10                    |
| No unapproved changes or additions                         | 10                                                          | 10                        | 10                    |
| All safety publications taken into account                 | 10                                                          | 10                        | 10                    |
| General structural components and weldments                | 2                                                           | 2                         | 2                     |
| All fasteners, pins, protective guards and covers          | 1, 2                                                        | 1, 2                      | 1, 2                  |
| Greasing and lubricating according to specifications       | 10                                                          | 10                        | 10                    |
| Functional test of all systems                             | 10                                                          | 10                        | 10                    |
| Paint and appearance                                       | 5                                                           | 5                         | 5                     |
| Inspection date stamped on the chassis                     | /                                                           | /                         | 10                    |
| Notify Sinoboom of machine ownership (change)              | /                                                           | /                         | 10                    |

**Table 4-2 Inspection and Preventive Maintenance Schedule (continued)**

| Item                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Interval                                                    |                           |                       |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|---------------------------|-----------------------|
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Before each delivery <sup>1</sup> or quarterly <sup>2</sup> | Semiannually <sup>3</sup> | Annually <sup>4</sup> |
| <p>NOTICE:</p> <p><sup>1</sup> Before each sale, lease or shipment delivery;</p> <p><sup>2</sup> In service for 3 months or 250 hours; or out of service for more than 3 months;</p> <p><sup>3</sup> In service for 6 months or 500 hours;</p> <p><sup>4</sup> Once a year and no later than 13 months from the date of the previous annual machine inspection;</p> <p><sup>50</sup> The first inspection shall be performed once the machine reaches 50 hours in service for the first time. This occurs only once in the service life of the machine.</p> <p><sup>250</sup> The first inspection shall be performed once the machine reaches 250 hours in service for the first time. This occurs only once in the service life of the machine.</p> <p>NO. 1 Before the machine is put into service for the first time, or before the first use after the oscillating cylinder or counterbalance valve has been replaced.</p> |                                                             |                           |                       |
| <p>Inspection activity (numerical codes):</p> <ol style="list-style-type: none"> <li>1. Check for correct installation (accurate position, firmly installed, tightened to the specified torque)</li> <li>2. Visual inspection for damage (cracks, cracked welds, deformation, wear, corrosion, excessive wear, gouges, abrasions and exposed threads)</li> <li>3. Check for normal function</li> <li>4. Check for normal return to neutral or "off" position (self-resetting switches return to neutral or "off" position after released)</li> <li>5. Clean and free of foreign objects</li> <li>6. Check for correct level, sealing and leaks</li> <li>7. Labels complete, clear and secure</li> <li>8. Check for appropriate tolerances</li> <li>9. Fully charged</li> <li>10. Verify/perform</li> <li>11. Replace the oil or filter element</li> <li>12. Correctly lubricated</li> </ol>                                     |                                                             |                           |                       |

## 4.2 GENERAL MAINTENANCE INSTRUCTIONS

### Safety and Operating Standards

The following precautions should be taken before carrying out adjustment and repair work on the machine:

1. Disconnect the power source to prevent inadvertent start up of the machine and tag the machine accordingly.
2. All controls should be turned off to avoid accidental actuation of the control system.

3. If possible, lower the work platform to the lowest position. If this is not possible, secure the work platform to prevent it from falling.

4. Before loosening or removing hydraulic components, the oil pressure in the hydraulic lines should be released.

Some maintenance work may require the machine to be in a state other than the ones described in 1-4 above. Such work should be carried out in accordance with the specific safety measures listed in the Operation Manual and this manual.

Safety of personnel always has the highest priority, also when performing maintenance work on the machine. Always take the weight of components into consideration, and never attempt to move heavy parts without the assistance of mechanical equipment. Never place heavy objects in an unstable position. Before lifting any machine components, ensure the parts are sufficiently supported.

## Cleaning

1. To extend the service life of the machine it is crucial to prevent dirt or impurities from entering critical components of the machine. A number of protective measures have been taken to prevent such ingress. Protective plates, covers, seals, and filters are installed to keep intake air, fuel and oil clean. Such protective devices must be serviced/maintained at prescribed intervals to ensure their proper function.
2. When air, fuel, or oil lines are disconnected, their adjacent areas, openings and fittings should be cleaned. Openings should be covered immediately to prevent foreign objects from entering.
3. During repair or maintenance, all components should be cleaned and inspected, make sure all pipes/tubes and openings are unobstructed. Cover all parts to keep them clean. All parts must be clean before installation. New parts should be stored in containers before use.

## Components Disassembly and Installation

1. A safe and appropriate plan for the installation of machine components should be developed based on this manual, taking the site conditions into account.
2. Personnel carrying out disassembly and installation work must be appropriately qualified and must be able to use safety equipment correctly.
3. Before carrying out installation work, qualified personnel should inspect the ground, concealed foundations and anchors, or review reliable documentation verifying that the manufacturer's requirements are met.
4. Wind speed at the installation site must not exceed 8.3 m/s (18.6 mph).
5. Before installation, check the site conditions such as power supply and ground conditions to make sure the installation requirements are met.
6. All components should be inspected prior to installation to verify they are in good condition.
7. High-strength bolts should be tightened in strict accordance with the requirements of this manual.
8. Requirements for the acceptance of onsite machine installation work:

- 1) Relevant inspections and functional tests should be carried out to confirm that the components have been installed correctly, that specific functional requirements are met and that all safety devices are operating properly.
  - 2) Static and dynamic load tests should follow and comply with the relevant standards.
  - 3) Before putting the machine into service, a qualified person shall issue a handover certificate confirming the integrity of the machine. All test/inspection results should be recorded and an inspection report should be prepared (including the inspector's name, title, company, and inspection date).
9. Disassembly work should meet the same safety requirements as installation work.
  10. If lifting tools are required to dis-assemble the machine, use the correct lifting points, lifting equipment and additional tools. Only use tested and certified tools and equipment.
  11. If the lifting gear strands have to be attached at an angle of less than 90° when lifting a component exercise special caution since the eye bolt or similar bracket cannot provide adequate lateral support.
  12. If components are difficult to be removed check that all nuts, bolts, cables, brackets, wiring, etc. have been removed, and that adjacent components are not obstructing the removal.

## Components Disassembly and Reassembly

When disassembling or reassembling components, follow the steps one by one. If assembly/disassembly of a certain component has not been completed, do not proceed with another component. Always check the disassembly/assembly operation to make sure nothing is missing. No adjustments (unless recommended) may be made without prior approval.

## Storage

Please follow the recommendations below to ensure best performance of the cylinders and to avoid corrosion during long-term storage (indoor/outdoor):

- The machine should be in stowed position with all tires adjusted to keep aligned.
- Fully raise and lower the platform, and steer left and right to the full steering angle twice a week in order to keep the respective cylinder components lubricated.

## Disposal of Structural Components

- Major structural components that no longer meet the requirements for safe use due to corrosion, wear or other reasons should be repaired, reinforced, or replaced and discarded.
- Load-bearing structural components that are permanently deformed and cannot be repaired must be replaced and discarded.
- Load-bearing structural components that have lost overall stability and cannot be repaired must be replaced and discarded.
- Cracks in structural components or welds should be analyzed to understand the cause. The components/welds should be reinforced as appropriate considering the load and the characteristics of the cracks. Continued use is only allowed if the structural component/weld meet the original design requirements; otherwise they should be discarded.

## Pressure-fit Parts

When assembling pressure-fit parts, use anti-seize or molybdenum disulfide-based compounds to lubricate the mating surface.

## Bearings

1. Cover bearings that have been removed from the machine to keep the bearing clean from dust and abrasives. Use non-flammable cleaning solvent to clean bearings and allow them to dry in a shaded area. Compressed air may be used but the bearings should not be rotated.
2. If the races and balls (or rollers) display pits, notches or burn marks, the bearing should be replaced and discarded.
3. If the bearing is still serviceable, apply a coat of oil and wrap it in clean paper (or wax paper). Do not unwrap reusable bearings or new bearings until they are ready for installation.
4. Lubricate new or serviceable bearings before installation. When pressing the bearing into the retainer or bore, pressure should be applied only to the outer race. If the bearing is to be installed on a shaft, pressure should be applied only to the inner race.

## Gaskets

Check if the opening in the gasket is aligned with the opening in the component that is to be sealed.

## Bolt Use and Torque Requirements

### NOTICE

*Self-locking fasteners such as nylon inserts and thread locking nuts must not be reinstalled after removal.*

1. Always use a new self-locking fastener when installing locking fasteners. Use bolts of appropriate lengths. If a bolt is too long it may be pressed against the adjacent part before being properly tightened. If the bolt is too short it is likely to not have enough thread area to properly secure the parts. Replacement bolts must be of the same or equivalent size as the original bolt.
2. In addition to the specific torque requirements provided in this manual, standard torque values should be used on heat-treated bolts, studs, and steel nuts in accordance with recommended factory practice (see [Page 16, Fastener Torque Specifications](#)).

## Hydraulic Pipeline and Electrical Wiring

When unplugging or removing hydraulic hoses and electrical wires from the machine, the hydraulic hoses and electrical wires and their sockets should be clearly marked so that their reinstallation will be correct.

### Hydraulic Hose and Fitting Tightening Procedures

The following requirements apply when installing hydraulic hoses and fittings:

1. Before installation, check the seals on hoses and fittings, and replace the seal or even the hose assembly and the fitting if the seal is found to be damaged or oil spills out of the seal. Clean hoses and fittings before installation.
2. If a seal is to be replaced, lubricate the replacement seal before installation.
3. To install a hose nut and fitting, align the fitting, hose and hose nut, and tighten the nut with the torque specified in **Hydraulic Hose Torque** and **Hydraulic Fitting Torque**. If the tightening torque of a fitting or hose exceeds the specified value its seal cannot be reused.
4. After installation, test all machine functions and check to ensure the hose, fitting and related components are free from leaks.

### Application of Insulating Silicone Grease to Electrical Connections

Insulating silicone grease should be applied to all electrical connections for the purpose of:

- Avoiding oxidization of the connecting points between the male pin and female pin.
- Avoiding electrical failure due to low conductivity between the pins in humid environments.

The following instructions should be observed when applying insulating silicone grease to the electrical connections. This procedure applies to all plug connections installed outside the distribution cabinet. The silicone grease is not suitable for the connectors with a sealed outer surface.

1. Prior to the machine assembling, apply silicone grease around the male and female pins of the connectors to prevent oxidization. A grease syringe may be used for this procedure.

## NOTICE

*Oxidization that is allowed to progress over a certain period will increase the resistance of the connectors and eventually lead to electrical failure.*

2. Silicone grease should be applied to each electrical cord that is exposed outside the connectors to prevent short circuit. Silicon grease should also be applied to the connecting points of male and female connectors. Sealing measures should also be applied to other connectors that may be subject to water ingress, such as around strain relief clamps.

## NOTICE

*Due to the higher conductivity of cleaning solvents compared to water, situations of water ingress are especially likely to occur when cleaning the machine with a pressure washing method.*

3. The connectors between battery and charger should be sealed with silicone grease at each contact point.

## NOTICE

*Solidifying sealants can also be used to prevent short circuits and help maintain cleanliness, but they will make it more difficult to remove the pins later on.*

## Lubrication

The relevant components should be lubricated at defined intervals using the lubricant of the quantity, type and grade as recommended in this manual. If the recommended lubricant is not available, contact your local supplier who can help you obtaining the recommended lubricant or a satisfactory alternative.

## Hydraulic System

1. Contaminants are the primary hazard for the hydraulic system. Contaminants can enter the hydraulic system in various ways, such as improper use of hydraulic oil, moisture, grease, metal chips, sealing elements and sand entering the system during maintenance, or cavitation of the hydraulic pump due to insufficient system preheating or leakage in the pump supply (suction) lines.
2. Oil that appears clouded indicates a high moisture or air content, which contributes to organic growth, leading to oxidation or corrosion. In such case, drain the oil from the hydraulic system, and fill with clean hydraulic oil after rinsing the hydraulic system.
3. Check the filter frequently for the presence of metal particles. Because hydraulic components are designed and manufactured to very tight tolerances, even a small amount of contaminants entering the system can cause wear or damage to hydraulic components and lead to malfunctions. Hydraulic system filters should be inspected, cleaned or replaced as needed at required intervals.
4. Keep the hydraulic system clean. After disconnecting the hydraulic lines, seal the tube ports immediately to prevent contaminants from entering the hydraulic system. If signs of metal or rubber particles are found in the hydraulic system, the hydraulic oil should be drained immediately and the entire system flushed.

## NOTICE

*Metal particles may appear in the hydraulic oil or filter of a new machine due to wear of new hydraulic components.*

5. Disassemble or reassemble parts on clean workbenches. Clean all metal parts using a non-flammable cleaning solvent. Lubricate parts as needed to facilitate assembly.
6. Hydraulic oils of different brands or types should not be mixed. Different oils may contain different essential additives or may have different viscosity. It is recommended to use high-quality mineral oil with a viscosity suitable for the temperature of the environment the machine is operating in.
7. Unless otherwise expressly stated in this manual, the filter element must be replaced at least once a year or every 1000 working hours; the replacement interval should be shorter in harsh working conditions. If hydraulic oil needs to be changed, use hydraulic oil meeting or exceeding the type and specification requirements in this manual. If hydraulic oil of the same type as that supplied with the machine is not available, consult your local supplier to help you select the appropriate hydraulic oil. Do not mix petroleum-based oils with synthetic oils.

8. Take all precautions to keep the hydraulic oil clean. If hydraulic oil must be poured from the original container into another container, ensure that the second container is kept clean and does not contain any contaminants. Make sure to clean the filter screen, and replace the filter element when changing the hydraulic oil.
9. After the machine is shut down, take proper preventive maintenance measures, thoroughly check all hydraulic components, piping, fittings, etc., and perform a function test for each system before putting the machine into service again.

## Battery

Clean the battery with a non-metallic brush and sodium bicarbonate aqueous solution, then rinse it with clean water. After cleaning, allow the battery to dry completely, and apply anti-corrosion compound to the battery terminals.

## Pins and Composite Bearing

1. The connecting pins should be removed and inspected in case any of the following defects is found:
  - Excessively tilted joint
  - Noise originating from the joint during operation.
2. The composite bearing should be replaced in any of the following conditions:
  - Frayed or separated fiber on the sleeve surface
  - Cracked or damaged sleeve housing
  - Bearing moved or rotated into the housing
  - Debris embedded in the sleeve surface.
3. Replace the pivot pin if any of the following is detected (properly clean the pivot pin before inspection):
  - Wear in the bearing area
  - Flaking, peeling, scratches or abrasions on the pivot pin surface
  - Corroded pivot pin in the bearing area
4. Reassemble the connecting pin and composite bearing
  - Blow off the dirt and debris on the housing. Remove any foreign objects on the bearing and housing.
  - Clean the bearing and pivot pin with a cleaning agent to remove all grease and oil. The composite bearing uses dry coupling which does not require lubrication.

- During installation and operation, inspect the pivot pin to ensure that there are no burrs, nicks or abrasions that could damage the bearing.

## 4.3 MAJOR MODIFICATION AND REPAIR

A major modification/repair is a modification/repair of the entire machine or its components that affects the stability, strength or performance of the machine.

Each major modification/repair to the machine by the machine owner/company should be recorded using the **Major Modification/Repair Record** in the attachment to this manual. This record should be retained until the machine is taken out of service or as required by the machine owner/company.

Major modifications/repairs to the machine must be performed by a qualified service technician. The machine must be inspected and verified after major modifications/repairs, the inspection items include but are not limited to all items in the **Inspection and Preventive Maintenance Schedule**. Once inspection and verification are complete the machine can be put back into service.

**This Page Intentionally Left Blank**

# 5 PLATFORM COMPONENTS

## 5.1 PLATFORM CONTROLLER

### Disassembly



#### WARNING

Before performing such disassembly tasks, disconnect the battery and disconnect the charger from the AC outlet. Contact with live conductors may result in serious injury or death.

1. Make sure the machine is in stowed position.
2. Turn off the machine and press the emergency stop button at the platform controller and ground controller.
3. Mark and disconnect the harness connections in the platform controller.
4. Remove the fastening bolts on the bottom of the platform controller.
5. Carefully remove the platform controller.

### Installation

For installation, follow the disassembly procedure in reverse order.

## 5.2 PLATFORM ASSEMBLY

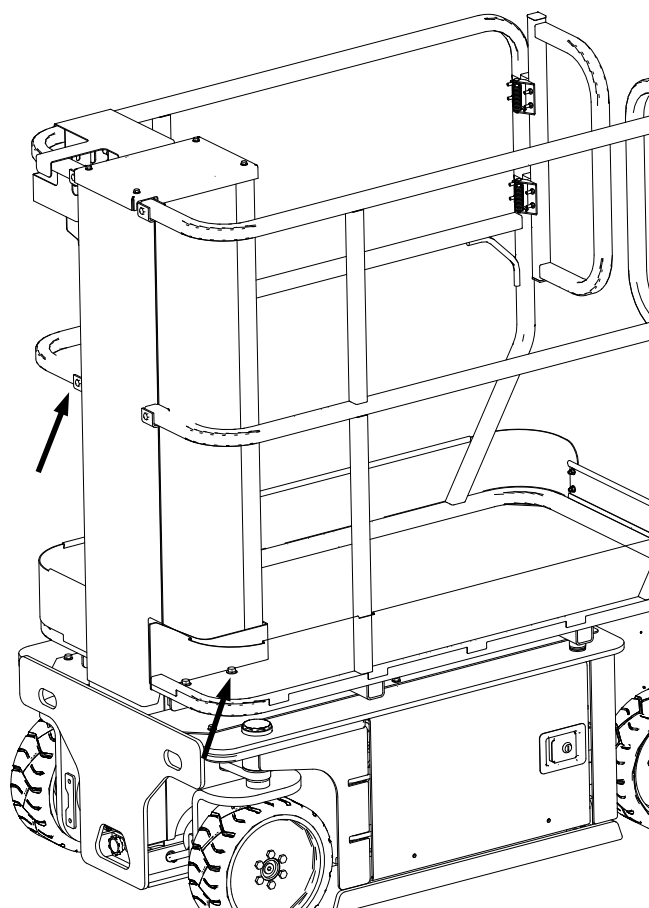


Fig. 1 Platform assembly

### Disassembly

1. Slightly raise the work platform until the fastening nuts on the bottom of the platform are accessible.
2. Remove the platform controls from the platform.
3. Support the platform with suitable lifting equipment.
4. Remove the fastening nuts and bolts from the boom and the bottom of the platform.
5. Remove the fastening nuts and bolts from the boom and the side of the platform.
6. Slowly remove the platform assembly with the aid of the lifting equipment.

### Installation

For installation, follow the disassembly procedure in reverse order.

**This Page Intentionally Left Blank**

# 6

## BOOM COMPONENTS

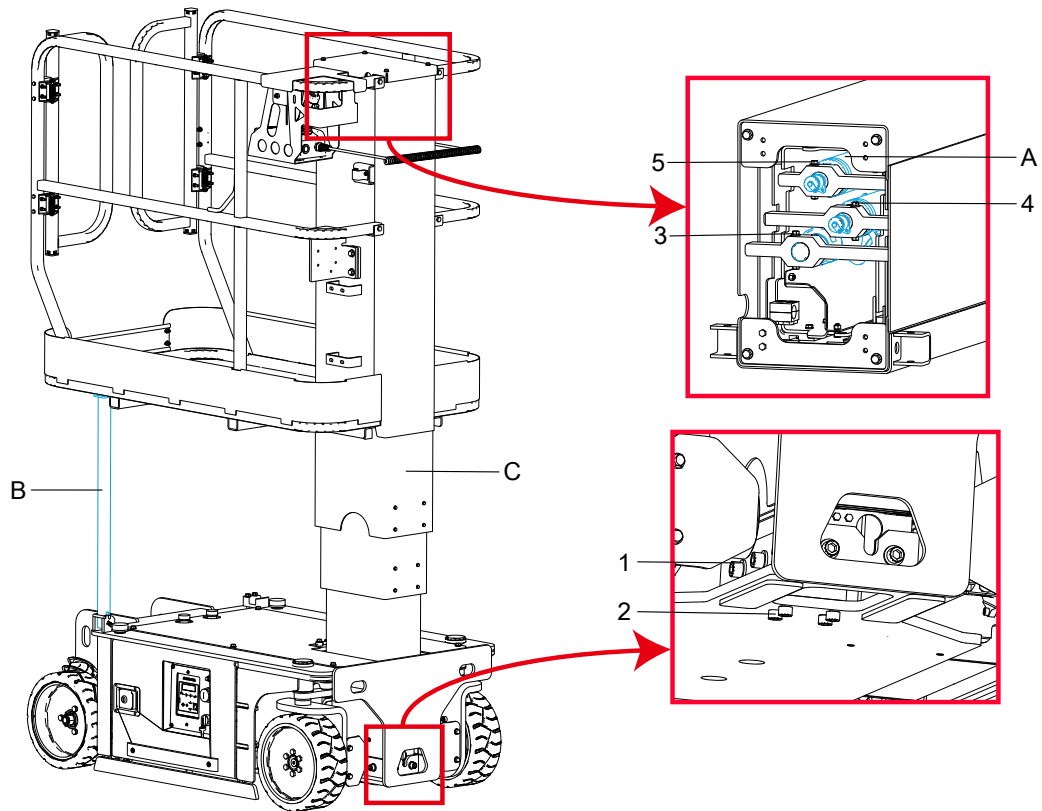


**Fig. 1 Diagram, Boom Components**

**Table 6-1 Boom Components Description**

|                                                   |                 |                  |
|---------------------------------------------------|-----------------|------------------|
| 1. Fasteners, boom assembly and frame             |                 |                  |
| 2. Fasteners, lift cylinder and boom base         |                 |                  |
| 3\4\5. Fasteners, lift cylinder and boom assembly |                 |                  |
| A. Lift Cylinder                                  | B. Safety strut | C. Boom Assembly |

## 6.1 DISASSEMBLY AND INSTALLATION

### WARNING

- Before loosening or disassembling hydraulic parts, the hydraulic pressure of all hydraulic lines should be released and the hydraulic oil should completely cool down.
- Disassemble the hydraulic components slowly to prevent the hydraulic oil from splashing and causing injuries.

#### Disassembly

1. Make sure the machine is in stowed position.
2. Remove the platform assembly.
3. Mark and disconnect the harness connections in the boom assembly.
4. Mark and disconnect the hydraulic lines on the boom base assembly and collect the hydraulic oil from the lines with a suitable container. Plug the lines and the ports.
5. Use suitable lifting equipment to support the boom assembly.
6. Remove the fasteners of the boom assembly and frame.
7. Remove the fasteners from the lift cylinder and the boom base.
8. Using suitable lifting equipment, slowly remove the boom assembly from the chassis and carefully place it in a suitable location.

#### Installation

For installation, follow the disassembly procedure in reverse order.

## 6.2 SAFETY STRUT

### WARNING

**If it is necessary to work under the raised boom, make sure that the safety strut is properly set up and provides effective support.**

1. Start the machine from the ground and raise the platform so that the safety strut can be fully erected.
2. Erect the safety strut and lower the platform as to ensure that the safety strut provides effective support.

3. When the platform bottom plate is in full contact with the safety strut, stop lowering the platform.

## 6.3 LIFT CYLINDER

### WARNING

- Before loosening or disassembling hydraulic parts, the hydraulic pressure of all hydraulic lines should be released and the hydraulic oil should completely cool down.
- Disassemble the hydraulic components slowly to prevent the hydraulic oil from splashing and causing injuries.

#### Disassembly

1. Remove the boom assembly and place it in a suitable location.
2. Remove the fasteners of the lift cylinder and the boom assembly in sequence.
3. Use suitable lifting equipment to support the hydraulic cylinder, and carefully and slowly pull the cylinder out of the boom base.

### NOTICE

*When pulling the telescopic cylinder out of the boom base, use extreme caution to avoid damaging other parts of the boom tube.*

### WARNING

**When disassembling the cylinder, use caution to prevent it from falling and getting damaged, and also to avoid impacts that could lead to high-pressure oil leaks.**

#### Installation

For installation, follow the disassembly procedure in reverse order.

# 7 CHASSIS COMPONENT

## 7.1 TRAVEL DRIVE SYSTEM

This machine is equipped with a two-wheel drive. The travel drive system is mainly comprised of the travel motor and reducer (including the motor, brake and gearbox, wheel frame, and tires).

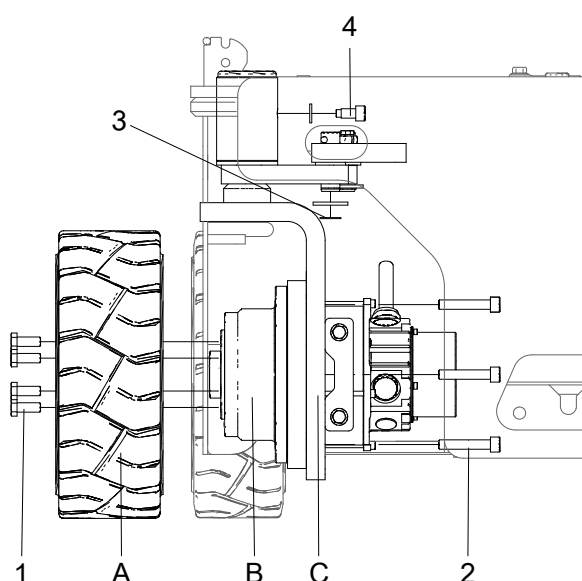


**Fig. 1 Diagram of the travel drive system**

**Table 7-1 Description of the travel drive system**

| No. | Description             |
|-----|-------------------------|
| A   | Tires                   |
| B   | Drive Motor and Reducer |
| C   | Wheel carrier           |

### Drive Motor and Reducer

#### Disassembly

1. Make sure the machine is in stowed position.
2. Press the main power switch/pull out the main power handle and disconnect all power sources (such as battery charger) from the machine.
3. Place a jack of sufficient capacity under the chassis side to be worked on, and support the chassis.
4. Remove the tire and wheel assembly.
5. Mark and disconnect the harness connections on the drive motor and reducer.

6. Use suitable lifting equipment to support the drive motor and reducer.
7. Remove the fasteners of the drive motor and reducer installed on the wheel carrier, and slowly move the drive motor and reducer out with the assistance of lifting equipment.

#### Installation

1. Place a jack of sufficient capacity under the chassis side to be worked on, and support the chassis.
2. Align the mounting holes on the drive motor and reducer with the ones on the wheel carrier.
3. Fit the flat surface of the gasket to the mounting surface (if a gasket is required), apply Loctite 272 threadlocking adhesive, then install the bolts one by one.
4. Tighten the bolts to the specified torque with a torque wrench.
5. Reconnect the electrical harness.
6. Install the tire and wheel assembly as needed.

### Wheel carrier

#### Disassembly

1. Make sure the machine is in stowed position.
2. Turn the power switch off and disconnect all power sources (such as battery charger) from the machine.
3. Place a jack of sufficient capacity under the chassis side to be removed. Lift the jack so the wheels are off the ground.
4. Remove the tire assembly and travel motor reducer.
5. Use suitable lifting equipment to support the wheel carrier.
6. Remove the retaining ring and washer on the connecting shaft between the wheel frame and the connecting rod at #3.
7. Remove the bolts and washers on the #4 bushing.
8. With the aid of lifting equipment, slowly move the wheel carrier out of the chassis.

#### Installation

For installation, follow the disassembly procedure in reverse order.

## 7.2 TIRE ASSEMBLY

### Checking Tires and Rims

Maintaining the tires and rims is essential for the normal and safe operation of the machine. The machine may tip over if a tire or a rim fails, so check the tires and rims each time before operating the machine and repair defective tires and rims in a timely fashion.

This machine is equipped with solid tires that do not need to be inflated.

- Check each tire for cuts, cracks, punctures and abnormal wear. Replace the tire if necessary.
- Check each rim for damage, deformation or cracked welds. Replace the rim if necessary.

### Checking Wheel Nuts

The wheel nuts should be tightened before the machine is put into service for the first time and after each tire is removed. Check and tighten the wheel nuts to the specified torque every 3 months or 250 operating hours.

### Replacement Requirements

#### WARNING

- **The tires and rims on the machine have been designed and selected according to the overall performance and load stability requirements of the machine. Therefore, the model specifications, rim width, installation center surface, diameter, etc. must not be changed, otherwise this could lead to an unstable and hazardous condition.**
- **Wheel-specific nuts must be used that match the wheel bolts. The wheel nuts must be installed and maintained with the proper tightening torque to prevent loose rims, broken bolts and wheels loosening from the axle. Be sure to only use nuts that match the mounting angle of the rim holes.**

Hunan Sinoboom Intelligent Equipment Co., Ltd. recommends the replacement tire be of the same size, ply rating and brand as the original tire. For the tire part numbers of specific machine models, please refer to the Parts Manual of the corresponding machine. If you choose not to use the replacement tires recommended by Hunan Sinoboom Intelligent Equipment Co., Ltd., the following specifications should be adhered to:

- The ply rating/rated load capacity and size should be the same as the original tire or superior to it.
- The tire tread contact width should be the same as or superior to the original tire.

- The wheel diameter, width and offset dimensions must be the same as the original tires.
- The replacement tire must be approved for the application by the tire manufacturer (including intended purpose, maximum travel speed, maximum tire load, etc.).
- Due to size differences between different tire brands, both tires on the same axle should be of the same brand.

#### NOTICE

*Unless specifically approved by Sinoboom, do not replace foam-filled tires with pneumatic tires.*

### Replacing Tire and Wheel Assembly

#### WARNING

**Tighten the wheel nuts to the specified torque to prevent the wheel from loosening. Use a torque wrench to tighten the nuts. If no torque wrench is available use a socket wrench to tighten the nuts and then immediately have a service station or dealer tighten the nuts to the specified torque. Over-tightening will cause the nuts to break or permanently deform the bolt holes in the rims.**

The correct steps to replace a tire and wheel assembly are as follows:

1. Make sure the machine is in stowed position.
2. Press the main power switch/pull out the main power handle and disconnect all power sources (such as battery charger) from the machine.
3. Use a jack with sufficient load capacity to lift the machine to the appropriate height so that the wheel assembly is off the ground.
4. Use suitable lifting equipment to safely support the tire and wheel assembly.
5. Remove the fasteners alternately, and then remove the wheel.
6. Align the mounting holes of the new wheel with the corresponding mounting holes on the hub,, fit the flat surface of the gasket to the mounting surface (if gaskets are used). After applying Loctite 272 threadlocking adhesive to the bolts, install the bolts in sequence, and tighten the bolts diagonally to the torque specified in **Torque Specifications**.
7. Remove the jack as needed after installation.

## 7.3 REAR WHEEL BEARING HOUSING

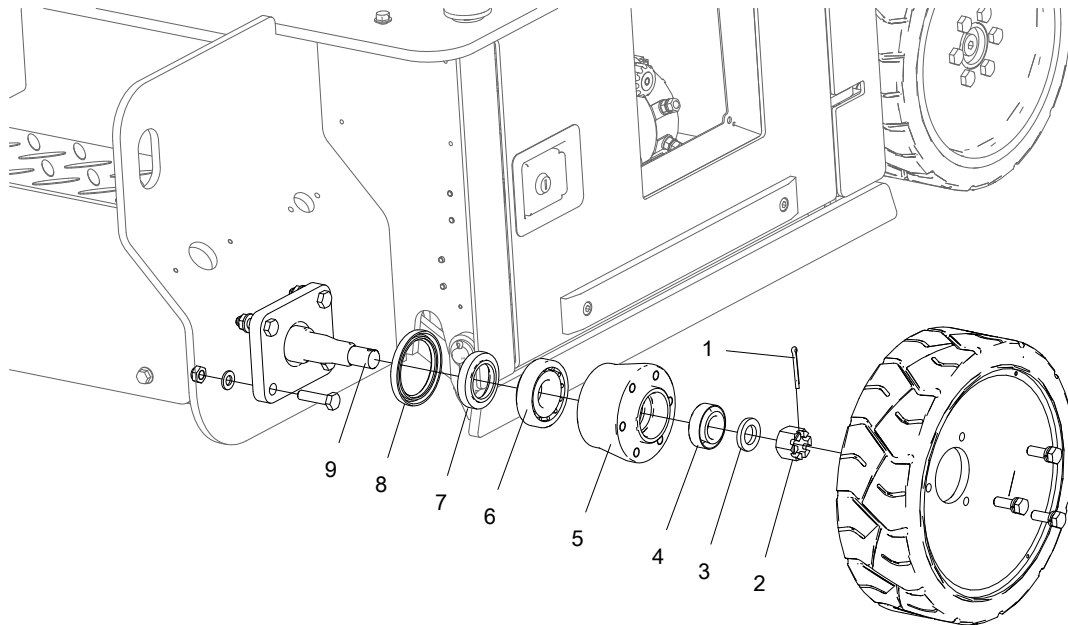


**Fig. 2 Diagram – Installation of the rear wheel bearing housing**

**Table 7-2 Description – Installation of the rear wheel bearing housing**

| No. | Description     |
|-----|-----------------|
| 1   | Cotter pin      |
| 2   | Slotted nut     |
| 3   | Gaskets         |
| 4   | Bearings        |
| 5   | Bearing housing |
| 6   | Bearings        |
| 7   | Retaining ring  |
| 8   | Shaft seal      |
| 9   | Hub shaft mount |

Install the rear wheel bearing seat as shown in the above picture, and note that:

- Before installation, ensure the bearings are lubricated with grease. Before installing the bearing seat, the cavity must be lubricated with grease.
- When installing and adjusting the bearing seat, the slotted nut should be tightened without rotating the bearing seat. If necessary, adjust the tightened nut slightly to ensure that the nut slot is aligned with the pin hole on the shaft seat.

- Rotate the bearing seat by hand. There should not be any impression of jamming or blocking. If the nut is too tight, turn it so that the previous slot aligns with the pin hole.
- Cotter pins must not be reused.

## 7.4 BATTERY

### **WARNING**

- **Before removing the battery, the charger power supply and the entire machine's operating power must be cut off.**
- **The battery case may only be disassembled by qualified/authorized personnel; improper work may result in system damage.**

1. Place the machine in a ventilated and spark-free environment.
2. Open the left chassis compartment to locate the battery.
3. Mark and disconnect the wire harness connection on the negative terminal of the battery, then disconnect the wire harness connection on the positive terminal of the battery.

4. After securing the battery with slings, remove the battery from the machine using suitable lifting equipment.

# 8 HYDRAULIC SYSTEM

The machine's hydraulic system can be viewed as consisting of two parts: one part is used for the steering function, the other part for the platform lifting/lowering functions.

The motor drives the hydraulic pump that transfers hydraulic oil to the function valve blocks, which are equipped with directional valves for the control of different movements. To protect components and to avoid overpressure, the valve blocks are equipped with overflow valves.

Proper maintenance of the hydraulic system is essential for the proper and safe operation of the machine. Failure to maintain the hydraulic components in a timely fashion may lead to component damage, which can affect the safe operation of the machine.

## 8.1 POWER UNIT

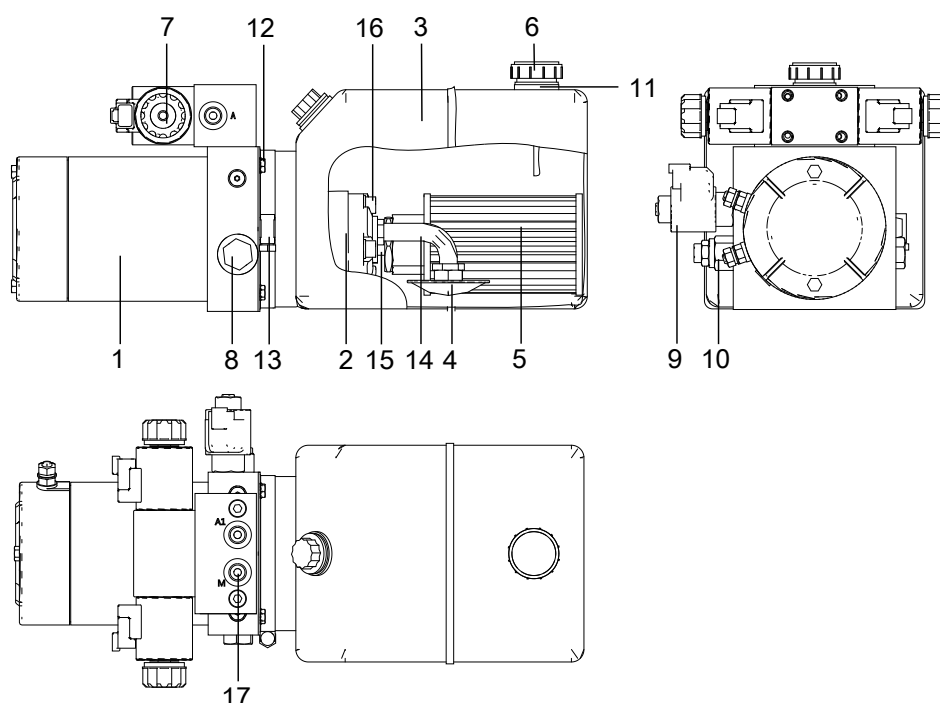


**Fig. 1 Diagram, Power Unit**

**Table 8-1 Description, Power Unit**

|                                                |                             |                                    |
|------------------------------------------------|-----------------------------|------------------------------------|
| 1. DC motor                                    | 2. Gear pump                | 3. Hydraulic Tank                  |
| 4. Suction Filter Screen                       | 5. Return Filter            | 6. Air Filter                      |
| 7. 3-Position 4-Way Solenoid Valve             | 8. Check valve              | 9. 2-Position 2-Way Solenoid Valve |
| 10. Overflow valve                             | 11. Oil Port Drain          | 12. Hydraulic Tank Fasteners       |
| 13. Clamp                                      | 14. Oil Suction Tube        | 15. Oil Return Tube                |
| 16. Hydraulic Pump Mounting Screws and Washers | 17. Pressure Measuring Port |                                    |

## Function valves

The function valves shown in the power unit assembly above serve the following purposes:

Table 8-2

| No. | Description                     | Installation torque | Function                            |
|-----|---------------------------------|---------------------|-------------------------------------|
| 7   | 3-Position 4-Way Solenoid Valve | 9 Nm (7 ft-lb)      | Controls wheel steering left/right  |
| 8   | Check valve                     | /                   | Keeps oil flowing in one direction  |
| 9   | 2-Position 2-Way Solenoid Valve | 34 Nm (25 ft-lb)    | Controls platform up/down movements |
| 10  | Overflow valve                  | 27 Nm (20 ft-lb)    | Prevents system overpressure        |

## Hydraulic pump

### Inspection

Perform inspection on the hydraulic pump as per the instructions in **Regulating the Pressure of System Overflow Valve**.

### Disassembly

#### WARNING

- Before loosening or disassembling hydraulic parts (especially the counterbalance valve on the cylinder), the hydraulic pressure of all hydraulic lines should be released and the hydraulic oil should completely cool down.
- Disassemble the hydraulic components slowly to prevent the hydraulic oil from splashing and causing injuries.

1. Open the right chassis door and locate the power unit.
2. Remove the power unit and place it in a suitable location.
3. Remove the hydraulic tank from the power unit.
4. Remove the oil return pipe connected to the hydraulic pump.
5. Remove the oil suction pipe connected to the hydraulic pump.
6. Remove the hydraulic pump fasteners, and slowly remove the hydraulic pump from the valve block.

#### NOTICE

Extra care should be taken during disassembly to avoid damaging component surfaces.

### Installation

For installation, follow the disassembly procedure in reverse order.

## Hydraulic Tank

### Air Filter

It is recommended to clean the hydraulic tank air filter every 3 months or after 250 hours of operation, and replace it every 6 months or after 500 hours of operation. The replacement interval should be shorter in harsh operating environments.

The steps to check and clean the air filter are as follows:

1. Turn off the machine.
2. Open the right door of the chassis, locate the air filter on the top of the hydraulic tank.
3. Remove the air filter.
4. Check the hydraulic tank air filter: air should pass through the air filter smoothly.
5. If the air cannot pass through the air filter smoothly, clean the air filter with a neutral solvent and dry it using an air gun.
6. Check the air filter again, repeat as necessary until the air passes through the filter smoothly.
7. Install the air filter back onto the tank.
8. Clean up any hydraulic oil that was spilled during the process.
9. Start the machine from the ground.
10. Check the return filter and related components for leakage.

### Suction Filter Screen

It is recommended to replace the suction filter screen every year or after 1000 hours of operation. The replacement interval should be shorter in harsh operating environments.

**NOTICE**

*Remove the hydraulic tank before replacing the suction filter screen.*

Every time the hydraulic oil is replaced, the suction filter screen should also be replaced.

**Return Filter**

The return filter of the hydraulic oil tank cannot be replaced separately. Instead, the complete filter needs to be replaced.

It's recommended to replace the hydraulic tank return filter every year or after 1000 operating hours. The replacement interval should be shorter in harsh operating environments.

**NOTICE**

*Remove the hydraulic tank before replacing the hydraulic tank return filter.*

**8.2 HYDRAULIC OIL****Checking Oil Level**

Maintaining the hydraulic oil at a proper level is essential for the normal operation of the machine. If the hydraulic oil level is too high, oil will overflow from the tank during operation. If the hydraulic oil level is too low the oil pump will suck in air during operation, which will lead to component damage.

1. Make sure the platform is in stowed position.
2. Open the right chassis door and visually inspect the side of the hydraulic tank. The hydraulic oil level should be between the MAX scale line and the third (from top to bottom) scale line on the tank.
3. If necessary, fill the tank through the oil drain port with suitable hydraulic oil according to the **Oil Specifications**, never overfill the tank.
4. Check the hydraulic tank and fittings for leakage.

**Checking the Cleanliness of the Hydraulic Oil**

Check the hydraulic oil. If any of the following conditions are observed the hydraulic oil must be replaced.

- The hydraulic oil is milky white and cloudy.
- The hydraulic oil is black.
- Check a small sample of the hydraulic oil using a bright source of light to see if there are reflections of

metal particles or rub the hydraulic oil with two fingers to locate metal particles.

- The hydraulic oil has an unusual smell.

**Changing the Hydraulic Oil**

It is recommended to change the hydraulic oil every year or after 1000 hours of operation. The replacement interval should be shorter in harsh operating environments.

**NOTICE**

*Every time the hydraulic oil is replaced, the suction filter screen of the hydraulic tank must also be replaced.*

1. Turn off the machine and make sure the hydraulic oil has cooled to room temperature.
2. Open the right chassis door and locate the power unit.
3. Remove the power unit and place it in a suitable location.
4. Unscrew the hydraulic tank air filter and allow the hydraulic oil to drain from the drain port into a suitable container.
5. After all hydraulic oil has been drained completely, install the air filter.
6. Remove the fasteners on the side of the hydraulic tank, then remove the hydraulic tank from the power unit.

**NOTICE**

*Be extremely careful while removing the hydraulic tank; the inside of the hydraulic tank and other components that are mounted to the power unit may get damaged.*

7. After cleaning the inside of the tank with a neutral solvent, drain the solvent.
8. After the hydraulic tank is dry, reinstall it to the power unit.
9. Reinstall the power unit assembly into its position on the chassis.
10. Fill the tank through the oil drain port with suitable hydraulic oil according to the **Oil Specifications**, never overfill the tank.

## 8.3 ADJUSTING EMERGENCY LOWERING HANDLE

### NOTICE

*Perform this operation with the platform in an unloaded state.*

1. Start the machine and raise the platform so that the safety strut can be fully erected.
2. Erect the safety strut and lower the platform as to ensure that the safety strut provides effective support.



### WARNING

**Do not place your hands or other parts of your body under the platform while it is being lowered.**

3. Pull out the emergency lowering handle located on the rear of the chassis.
4. Measure the distance from the end of the handle to the mounting nut.
5. If the measured distance is less than or equal to 3 mm (0.12 in), proceed to step 7. If the measured distance is greater than 3 mm (0.12 in), proceed to step 6.
6. Adjust the mounting nut so that the distance from the mounting nut is no more than 3 mm (0.12 in).
7. Start the machine and raise the platform so that the safety strut can be fully lowered. Lower the safety strut.
8. Pull the emergency lowering handle outward 2 to 3 times to ensure normal operation.

## 8.4 CYLINDER DRIFT INSPECTION

A drift of the cylinder is normal within a certain range. In order to ensure normal operation of the machine, it is recommended to conduct a drift inspection on the platform every 3 months or after 250 hours of operation to determine whether a drift inspection of the cylinder is required.

Raise the platform to the highest position, and place a weight equivalent to the rated load on the platform to measure the drift from the platform to the ground with the machine powered off. If the platform drifts down more than 50 mm (1.97 in) in 10 minutes, perform a cylinder drift inspection as per the following procedures.

1. Place the machine in an environment with stable ambient temperature.

2. Raise the platform to the highest position, and place a weight equivalent to the rated load on the platform.
3. Measure drift at the cylinder piston rod with a calibrated dial indicator.
4. The maximum allowable drift for cylinders with different bores is shown in the table below. If the measured value is less than the maximum allowable drift, the cylinder is operating normally. If the measured value is greater than the maximum allowable drift the cylinder is not operating normally. Contact qualified service technicians for inspection and repair.

**Table 8-3 Maximum allowable drift for different cylinder bore diameters**

| Cylinder bore diameter<br>(mm/in) | Maximum allowable drift in<br>10 minutes<br>(mm/in) |
|-----------------------------------|-----------------------------------------------------|
| 76/3                              | 0.66/0.026                                          |
| 89/3.5                            | 0.48/0.019                                          |
| 102/4                             | 0.38/0.015                                          |
| 127/5                             | 0.22/0.009                                          |
| 152/6                             | 0.15/0.006                                          |
| 178/7                             | 0.13/0.005                                          |

### NOTICE

*The data is based on a cylinder leakage value of 6 drops per minute. Since the hydraulic oil expands and contracts depending on temperature, the tolerance for the cylinder drift is up to 7/10000 or 0.07 % for each temperature change of 1°C.*

## 8.5 HYDRAULIC SYMBOLS

**Table 8-4**

 
 
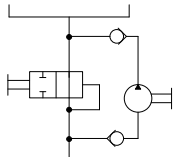
 
 
 
 
 
 
 
| Symbols                                                                              | Description |
|--------------------------------------------------------------------------------------|-------------|
|  | Filter      |
|  | Power unit  |

Table 8-4 (continued)

| Symbols                                                                             | Description                                             |
|-------------------------------------------------------------------------------------|---------------------------------------------------------|
|    | Hydraulic motor                                         |
|    | Manual brake release valve                              |
|    | Overflow valve                                          |
|    | 3-position 4-way solenoid directional valve             |
|   | 2/2-way solenoid directional valve with manual override |
|  | 2-position 4-way solenoid directional valve             |
|  | Directional valve for traveling at high and low speed   |
|  | Priority flow valve                                     |
|  | Check valve                                             |

## 8.6 HYDRAULIC SCHEMATIC DIAGRAM

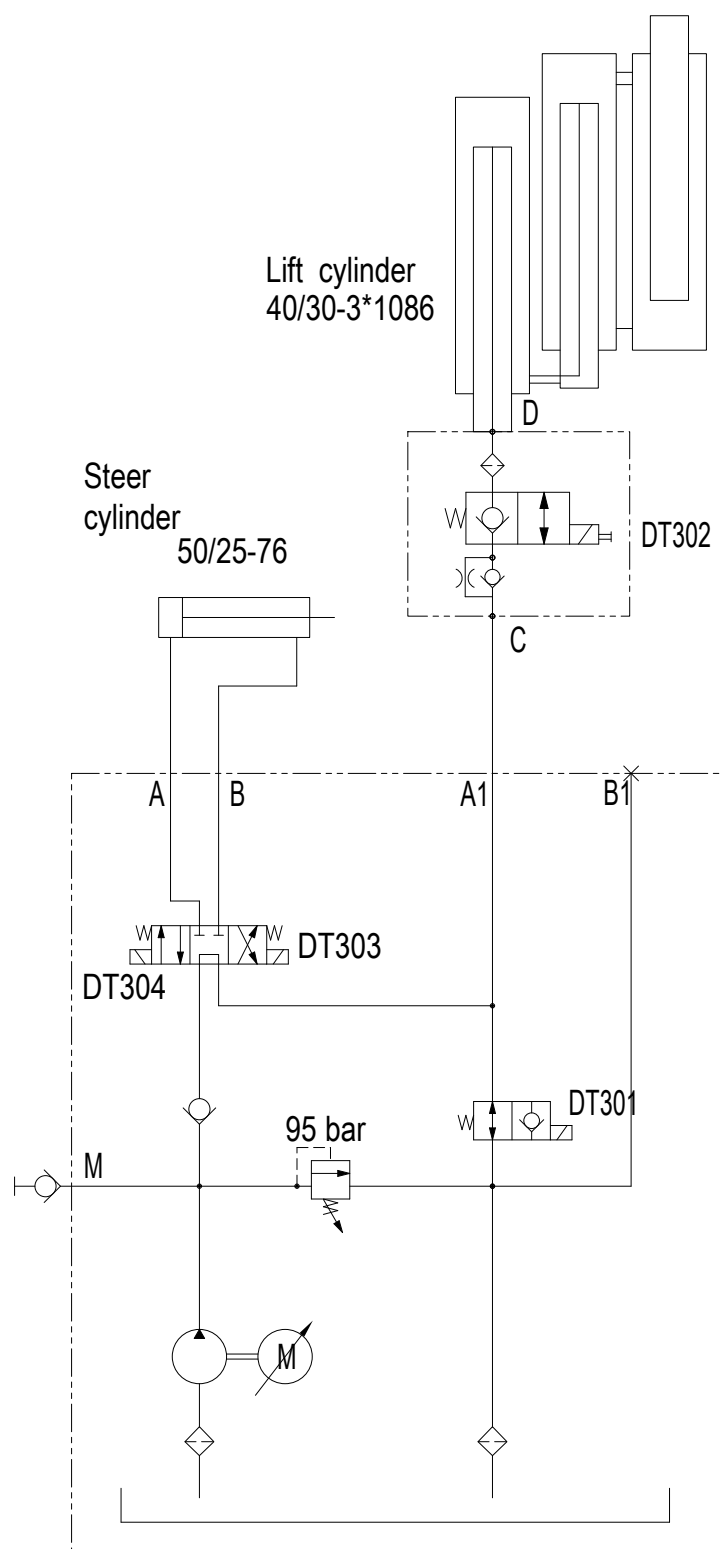


**Fig. 2 Hydraulic Schematic Diagram**

# 9 ELECTRICAL SYSTEM

Two 12 V lead-acid batteries in series are used to supply power to the drive motor and the lift motor to enable traveling, steering and platform lifting/lowering movements.

The batteries are charged via an external power source. A circuit breaker is used to protect the control system.

Proper maintenance of the electrical equipment is essential for the proper and safe operation of the machine. Continued operation of the machine with damaged or corroded electrical components may lead to unsafe situations or severe injuries.

## 9.1 BATTERY

There are three types of batteries that may be used in this machine: lead acid battery, lead acid maintenance-free battery, and lithium battery. The latter two batteries do not require maintenance.

### Inspection

The battery condition will affect machine performance and operation. The following checks should be performed on the battery at specified intervals.

- Check the battery level. The battery should not be discharged by more than 80% of its total capacity, it should be charged immediately after each discharge.
- Check the wiring harness retaining nuts between the battery cells. Make sure that the retaining nuts are tightened with the correct torque. Refer to the **Torque Specifications** section for the tightening torques.
- Inspect the battery wire harness connections. Make sure that the battery harness connections are firmly secured and are free from corrosion. Positive and negative terminals must not be reversed.

#### NOTICE

*Improper connection may result in reduced performance and damaged terminals, melting, or even fire.*

- Check whether the inside and outside paint of the battery box shows any damage. If any damage is found, repair the paint immediately to protect the outer box insulation and to prevent corrosion.

- Check the battery compartment for accumulation of water. Clean up any accumulated water immediately.
- Clean the area around the battery regularly. Regularly clean the top of the battery, terminals, and connection points with a mixture of baking soda and water using a cloth or brush. After cleaning, promptly dry with a cloth and apply a thin layer of Vaseline or use terminal protectors. Do not allow the cleaning solution to enter the battery's interior.

#### NOTICE

*Adding terminal protectors and anti-corrosion sealants will protect the battery terminals and cables from corrosion.*

The instructions below are applicable only for batteries requiring maintenance: Before conducting the inspection, fully charge the battery and let it sit for 24 hours, allowing the battery cells to balance.

1. Wear protective clothing, protective gloves and protective glasses.
2. Remove the battery vent cover.
3. Top up the hydrometer and drain it two or three times, then take a sample of the battery electrolyte.
4. Measure the specific gravity of all battery cells in sequence and note down the readings.
5. If the ambient temperature is above 27 °C (80 °F), add 0.004 to the specific gravity reading for every increase of 5 °C (40 °F). If the ambient temperature is below 27 °C (80 °F), subtract 0.004 from the specific gravity reading for every decrease of 5 °C (40 °F).
  - Result 1: if the specific gravity reading of all battery cells is 1.250 or higher, and the reading difference between any two cells is less than 0.050 proceed with the next step.
  - Result 2: if the specific gravity reading of one or more battery cells is below 1.250, it indicates that the battery is running low and needs charging. After charging, measure the specific gravity reading; if it meets Result 1 proceed with the next step.
  - Result 3: If the specific gravity reading difference between any two cells in the battery pack exceeds 0.050, equalize the battery pack and let it sit for 6 hours before measuring the specific gravity again. If the readings match Result 1 proceed to the next step.

**NOTICE**

*If Result 1 cannot be achieved even after several attempts the battery may be malfunctioning.*

6. Check the battery electrolyte level. Make sure the electrolyte level is correct. Add distilled water as needed.
7. Install the battery vent cover.

**Adding Fluid****NOTICE**

- For lead-acid batteries (requiring maintenance), the electrolyte level should be checked after each charging. If the level is low, add water in time.
- The water shall be added after charging. Adding water before charging may cause acid overflow during charging.

- For batteries equipped with an automatic water refilling system, when the electrolyte is at the lowest level with the battery fully charged (the white dot in the battery observation opening is not at the top), add water immediately. It is recommended to use an automatic water refilling device for refilling. Correct steps for its application are as follows:
  1. Open the bucket cover of the refilling device.
  2. Add deionized water.
  3. Put the cover back on and connect the refilling plug.
  4. Connect the quick connector between the refilling device and the battery, and turn on the power switch to start automatic water refilling.
  5. After water refilling is completed, the automatic water refilling system will automatically stop.
  6. Turn off the power switch and disconnect the water refilling plug to complete the refilling process.
- If the battery is not equipped with an automatic refilling system, check the electrolyte level after charging. If the level is lower than the allowed minimum level (the white dot in the battery observation hole is not at the top), add suitable distilled water or deionized water to the standard level (1-2 cm above the minimal level of the water filler plug). Wear gloves during the process. Never add any acid solution.

**Equalization**

Equalization is the deliberate process of overcharging the flooded/wet battery after it has been fully charged. Equalize the battery only when its specific gravity is low (less than 1.25) or its specific gravity exceeds the scope (more than 0.030) after the battery is fully charged.

**NOTICE**

- Equalization can only be performed on flooded/wet batteries. Do not balance other types of batteries.
- To prevent battery damage, the battery must be equalized after a storage period of up to three months from the date of delivery.

1. Check the electrolyte level to ensure that it meets the specified requirements.
2. Verify that all vent caps are properly secured to the battery.
3. Set the charger to equalization mode.
4. Charge the battery in equalization mode. The battery will bleed air in the equalization process (forming bubbles).
5. Remove the vent cap every hour to measure the specific gravity of all battery cells, stop charging in equalization mode if the specific gravity doesn't increase any further.

**Storage**

- Fully charge the battery before placing the machine into storage.
- The battery should be stored in cool and dry environment (temperature 10°C-25°C/50-77°F, RH < 90%), and charge the battery every 3 months using the charger provided by the manufacturer.
- Turn off power switch and emergency stop button, to eliminate potential hazards that could cause electrical leakage of the battery.
- The battery will self-discharge gradually during storage. Monitor the specific gravity or the voltage every 4 ~ 6 weeks. The equivalent values of the state of charge, specific gravity and open-circuit voltage are shown in the following table.

Table 9-1

| State of charge (%) | Specific gravity | Open-circuit voltage (V) |      |       |
|---------------------|------------------|--------------------------|------|-------|
|                     |                  | Battery cell             | 6V   | 12V   |
| 100                 | 1.277            | 2.122                    | 6.37 | 12.73 |
| 90                  | 1.258            | 2.103                    | 6.31 | 12.62 |
| 80                  | 1.238            | 2.083                    | 6.25 | 12.50 |
| 70                  | 1.217            | 2.062                    | 6.19 | 12.37 |
| 60                  | 1.195            | 2.040                    | 6.12 | 12.24 |
| 50                  | 1.172            | 2.017                    | 6.05 | 12.10 |
| 40                  | 1.148            | 1.993                    | 5.98 | 11.96 |
| 30                  | 1.124            | 1.969                    | 5.91 | 11.81 |
| 20                  | 1.098            | 1.943                    | 5.83 | 11.66 |
| 10                  | 1.073            | 1.918                    | 5.75 | 11.51 |

- Recharge the battery in quick charging mode when the battery level is 70 % or lower.
- Recharge the battery before use after taking it out of storage.
- Storage in hot environments (above 32°C/90°F): Avoid exposing the battery to heat sources during storage since the battery self-discharges faster at higher temperatures. If it's necessary to store the battery at higher temperatures monitor the specific gravity or voltage more frequently (approximately every 2 to 4 weeks).
- Storage in cold environments (below 0°C/32°F): Avoid storing the battery in locations that may be exposed to freezing temperatures since the battery may freeze if not fully charged. If the battery is to be stored in cold environments it must be fully charged.

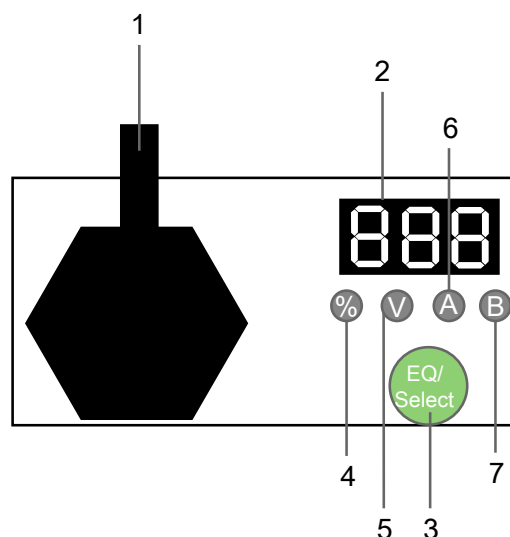


Fig. 1

Table 9-2

| No. | Description                                    |
|-----|------------------------------------------------|
| 1   | Battery program update interface (if equipped) |
| 2   | Digital display                                |
| 3   | EQ/Select key                                  |
| 4   | Capacity indicator light                       |
| 5   | Charging voltage indicator                     |
| 6   | Charging current indicator                     |
| 7   | Battery voltage indicator                      |

Change the curve:

## NOTICE

*Do not store the battery longer than 6 months in hot or cold environments.*

## 9.2 CHANGING THE CHARGING CURVE

**Note:** The charging curve of the charger for lithium batteries does not require any settings, so the following instructions apply to the charger for lead-acid batteries only.

**NOTICE**

*The default curve code of the charger is b48. Please select an appropriate charging curve code for your machine as per the battery requirements in the **Technical Characteristics** section in this manual.*

1. Press and hold the Select key for 5 sec until the screen displays the current charging curve code.
2. Press and hold the key for 1 sec to change the charging curve code.
3. After selecting the charging curve code, press and hold the Select key for 5 sec until the charging curve code flashes quickly, and the charging curve will be set.

4. Repeat the steps above if you wish to change the charging curve again.

**Enter EQ mode manually:**

1. Press and hold the select key for 10 sec until the letters EQ flash rapidly on the screen; this means the charger enters the EQ mode.
2. To exit the EQ mode, press and hold the select key for 10 sec until the word OFF flashes rapidly on the screen, this means the charger will exit the EQ mode.

**9.3 FAULT CODE DESCRIPTION****Machine Faults and Solutions**

The machine has a display screen at the ground controller and platform controller respectively for displaying machine parameter information and fault types.

**Table 9-3 Machine Faults and Solutions (Sinoboom Control System)**

| Code | Description                                   | Restricted functions | Recommended solution                                                                                                                                                                                                                                                       |
|------|-----------------------------------------------|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 01   | System Initialization Failure                 | All functions        | Possible ECU error, please consider replacing the ECU.                                                                                                                                                                                                                     |
| 02   | System Communication Failure                  | All functions        | Check communication cable connections between platform and chassis. If this does not solve the problem, please try replacing the PCU or the ECU.                                                                                                                           |
| 04   | Drive heartbeat lost                          | All functions        | Check the connections between the MC and ECU, check that the configuration options of the MC in the ECU are correct. If this does not solve the problem, please try to replace the MC.                                                                                     |
| 06   | Multi-angle Sensor Heartbeat Lost             | All functions        | Check whether the wiring between the multi-angle sensor terminal and the ECU terminal is disconnected. Also check that the multi-angle sensor terminal configuration options are correct. If this does not solve the problem, please try replacing the multi-angle sensor. |
| 07   | Platform Highest Position Warning OH          | Lift and travel      | Check the communication lines for short or open circuits, and check whether the relevant parameter settings are correct.                                                                                                                                                   |
| 08   | Multi-angle Sensor Fault                      | All functions        | Check whether the wiring between the multi-angle sensor terminal and the ECU terminal is disconnected. Also check that the multi-angle sensor terminal configuration options are correct. If this does not solve the problem, please try replacing the multi-angle sensor. |
| 09   | GPS Communication Fault                       | All functions        | Check the communication line between the GPS and ECU. If the problem still exists, check the connection or replace the GPS module.                                                                                                                                         |
| 10   | Indoor Models – Activating Outdoor Mode Fault | All functions        | Switch outdoor mode to indoor mode                                                                                                                                                                                                                                         |

**Table 9-3 Machine Faults and Solutions (Sinoboom Control System) (continued)**

| Code | Description                                             | Restricted functions                         | Recommended solution                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|------|---------------------------------------------------------|----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 12   | Power-up ECU Key Fault                                  | Limits all operations on the ECU             | Check whether any ECU buttons have been pressed or pushed-down. If this does not solve the problem, please try to replace the ECU.                                                                                                                                                                                                                                                                                                                                    |
| 18   | Pothole Guard Fault                                     | Lift and travel                              | Carry out checks in the following sequence: <ul style="list-style-type: none"> <li>• Check whether the pothole guard plate is deployed into its normal operating position;</li> <li>• Check whether the pothole guard plate limit switch and its wiring are in good operating condition;</li> <li>• Check whether the lower limit switch and its wiring are in good operating condition, and check whether the lower limit device is functioning normally.</li> </ul> |
| 20   | BMS Fault                                               | Lift and travel                              | Check the connection of the communication line between the ECU and BMS. If this does not solve the problem, please contact Sinoboom aftersales staff.                                                                                                                                                                                                                                                                                                                 |
| 21   | Lithium Battery Excessive Discharge Temperature Fault 1 | Alarm only                                   | Discharge Temperature Level-1 Fault: Inform the BMS factory to check battery temperature, or contact the Sinoboom aftersales staff.                                                                                                                                                                                                                                                                                                                                   |
| 22   | Lithium Battery Discharge Current High Fault 1          | Alarm only                                   | Discharge Current High Fault 1: Inform the BMS factory to check battery current, or contact the Sinoboom aftersales staff.                                                                                                                                                                                                                                                                                                                                            |
| 23   | Lithium Battery Total Voltage Low 1                     | Lift limited, travel restricted to low speed | Total Voltage Low Fault 1 Inform the BMS factory to check battery voltage, or contact the Sinoboom aftersales staff.                                                                                                                                                                                                                                                                                                                                                  |
| 24   | Lithium battery Cell Voltage Low Fault 1                | Lift limited, travel restricted to low speed | Cell Voltage Low Fault 1: Inform the BMS factory to check battery voltage, or contact the Sinoboom aftersales staff.                                                                                                                                                                                                                                                                                                                                                  |
| 25   | Total Machine Voltage Low 2                             | Lift and travel                              | Cell Voltage Low Fault 2: Inform the BMS factory to check battery voltage, or contact the Sinoboom aftersales staff.                                                                                                                                                                                                                                                                                                                                                  |
| 26   | Large Difference in Voltage                             | Lift and travel                              | Inform the BMS factory to check battery voltage, or contact the Sinoboom aftersales staff.                                                                                                                                                                                                                                                                                                                                                                            |
| 27   | Large Difference in Temperature                         | Lift and travel                              | Inform the BMS factory to check battery temperature, or contact the Sinoboom aftersales staff.                                                                                                                                                                                                                                                                                                                                                                        |
| 28   | Discharge Current High 2                                | Lift and travel                              | Discharge Current High Fault 2: Inform the BMS factory to check battery current, or contact the Sinoboom aftersales staff.                                                                                                                                                                                                                                                                                                                                            |
| 29   | Discharge Temperature High 2                            | Lift and travel                              | Discharge Temperature Fault 2: Inform the BMS factory to check battery temperature, or contact the Sinoboom aftersales staff.                                                                                                                                                                                                                                                                                                                                         |
| 30   | GPS Lock 1                                              | Alarm only                                   | Please contact Sinoboom aftersales staff.                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 31   | Pressure Sensor 1 Fault                                 | All functions                                | Check whether the sensor and its wiring are in normal operating state. Check that the ECU sensor configuration options are correct. If this does not solve the problem, please try replacing the sensor.                                                                                                                                                                                                                                                              |

Table 9-3 Machine Faults and Solutions (Sinoboom Control System) (continued)

| Code | Description                                                            | Restricted functions                         | Recommended solution                                                                                                                                                                                                                |
|------|------------------------------------------------------------------------|----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 32   | Angle Sensor Fault                                                     | All functions                                | Check whether the sensor and its wiring are in normal operating state. Check that the ECU sensor configuration options are correct. If this does not solve the problem, please try replacing the sensor.                            |
| 33   | PCU Key Fault                                                          | All functions                                | Check whether any PCU buttons have been pressed or pushed down during the start-up procedure. If this does not solve the problem, please try to replace the PCU.                                                                    |
| 35   | Pressure Sensor 2 Fault                                                | All functions                                | Check whether the sensor and its wiring are in normal operating state. Check that the ECU sensor configuration options are correct. If this does not solve the problem, please try to replace the sensor.                           |
| 36   | Low battery level alarm                                                | Lift limited, travel restricted to low speed | Shows that battery charge is low, charge the battery immediately.                                                                                                                                                                   |
| 38   | GPS Lock 2 pre-warning                                                 | Alarm only                                   | Please contact Sinoboom aftersales staff.                                                                                                                                                                                           |
| 39   | GPS Lock 2                                                             | Raising                                      | Please contact Sinoboom aftersales staff.                                                                                                                                                                                           |
| 40   | GPS Lock 3 pre-warning                                                 | Alarm only                                   | Please contact Sinoboom aftersales staff.                                                                                                                                                                                           |
| 41   | GPS Lock 3                                                             | All functions                                | Please contact Sinoboom aftersales staff.                                                                                                                                                                                           |
| 42   | Left turn button of the handle was pressed when turning on the power.  | Alarm only                                   | Check whether the left turn button has been erroneously pushed or pressed. If this does not solve the problem, please try replacing the handle or PCU.                                                                              |
| 43   | Right turn button of the handle was pressed when turning on the power. | Alarm only                                   | Check whether the right turn button has been erroneously pushed or pressed. If this does not solve the problem, please try replacing the handle or PCU.                                                                             |
| 45   | Excessive Difference in Oil Pressure                                   | Lift and travel                              | Check whether the oil pressure sensor is installed properly. Check whether the oil pressure sensor configuration options in the ECU are correct. If this does not solve the problem, please try to replace the oil pressure sensor. |
| 46   | Platform Enable Switch ON at Power-up                                  | Limits all operations on the PCU             | Check whether any enable switches have been pressed or pushed-down erroneously. Check whether the zero parameter settings are correct. If this does not solve the problem, please try replacing the handle or PCU.                  |
| 47   | Joystick Not In Neutral at Power-up                                    | Lift and travel                              | Check whether the handle is in the zero position (vertical position). Check whether the zero position parameter settings are correct. If this does not solve the problem, please try replacing the handle or PCU.                   |
| 50   | Input-output Comparison Error                                          | Lift and travel                              | Check whether the circuits at each sensor end and ECU end are open or short-circuited. Check whether the relevant parameters are turned on or off. If this does not solve the problem, please try to replace the ECU.               |
| 52   | Forward Solenoid Valve Fault (Hydraulic Drive)                         | Lift and travel                              | Check whether the wiring of the solenoid valve is correct. If this does not solve the problem, please check the coil valve for open or short circuit. If this                                                                       |

**Table 9-3 Machine Faults and Solutions (Sinoboom Control System) (continued)**

| Code | Description                                    | Restricted functions | Recommended solution                                                                                                                                                                                                                                                                                                                                                                                 |
|------|------------------------------------------------|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      |                                                |                      | still does not solve the problem, please try replacing the solenoid valve.                                                                                                                                                                                                                                                                                                                           |
| 53   | Reverse Solenoid Valve Fault (Hydraulic Drive) | Lift and travel      | Check whether the wiring of the solenoid valve is correct. If this does not solve the problem, please check the coil valve for open or short circuit. If this still does not solve the problem, please try replacing the solenoid valve.                                                                                                                                                             |
| 54   | Lift Up Coil Fault                             | Lift and travel      | Check whether the wiring of the solenoid valve is correct. If this does not solve the problem, please check the coil valve for open or short circuit. If this still does not solve the problem, please try replacing the solenoid valve.                                                                                                                                                             |
| 55   | Lift Down Coil Fault                           | All functions        | Check whether the wiring of the solenoid valve is correct. If this does not solve the problem, please check the coil valve for open or short circuit. If this still does not solve the problem, please try replacing the solenoid valve.                                                                                                                                                             |
| 56   | Right Turn Coil Fault                          | Lift and travel      | Check whether the wiring of the solenoid valve is correct. If this does not solve the problem, please check the coil valve for open or short circuit. If this still does not solve the problem, please try replacing the solenoid valve.                                                                                                                                                             |
| 57   | Left Turn Coil Fault                           | Lift and travel      | Check whether the wiring of the solenoid valve is correct. If this does not solve the problem, please check the coil valve for open or short circuit. If this still does not solve the problem, please try replacing the solenoid valve.                                                                                                                                                             |
| 68   | Low voltage alarm                              | All functions        | Shows that battery voltage is low, charge the battery immediately. If the problem is not solved after fully charging the battery, please try to replace the battery.                                                                                                                                                                                                                                 |
| 69   | High Zero Current Fault (Only Zapi)            | Lift and travel      | When the brake is active, the motor should stop turning, and should have no current. However, if the MC receives a fault message that the brake is active while the motor is turning, this fault will occur. This fault generally appears before other errors. If this error disappears after solving other errors, it can be ignored. If this fault persists, please try replacing the motor or MC. |
| 70   | Steering Input Out of Range (Only Zapi)        | Lift and travel      | Means that the steering input voltage of the ZAPI motor controller is outside the specified range. Please change the relevant parameters of the ZAPI motor controller to solve the problem.                                                                                                                                                                                                          |
| 71   | Motor Controller Main Contactor Fault          | Lift and travel      | Check the main contactor wiring. If this does not solve the problem, please try to replace the main contactor or motor controller.                                                                                                                                                                                                                                                                   |
| 72   | Motor Controller Over Voltage Fault            | Lift and travel      | Check the battery voltage and make sure the battery is not being charged before restarting the machine. If this does not solve the problem, please try replacing the motor controller.                                                                                                                                                                                                               |
| 73   | Motor Controller Overheating Cutoff Fault      | Lift and travel      | Means that the motor may be overheating, please stop operations and let the machine cool down. If this                                                                                                                                                                                                                                                                                               |

Table 9-3 Machine Faults and Solutions (Sinoboom Control System) (continued)

| Code | Description                                | Restricted functions             | Recommended solution                                                                                                                                                                                                                |
|------|--------------------------------------------|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      |                                            |                                  | does not solve the problem, please try restarting the machine. If this does not solve the problem, please try replacing the motor controller.                                                                                       |
| 74   | Motor Controller Over Heat Error           | Lift and travel                  | Check the connections of the motor temperature sensor. If this does not solve the problem, please try replacing the motor controller.                                                                                               |
| 75   | Motor Controller Pump Motor Fault          | Lift and travel                  | After checking to ensure that there are no problems with the pump motor wiring, restart the machine. If this does not solve the problem, please try replacing the motor controller.                                                 |
| 76   | Motor Controller Left Drive Motor Fault    | Lift and travel                  | After checking to ensure that there are no problems with the motor wiring, restart the machine. If this does not solve the problem, please try replacing the motor controller.                                                      |
| 77   | Motor Controller Right Drive Motor Fault   | Lift and travel                  | After checking to ensure that there are no problems with the motor wiring, restart the machine. If this does not solve the problem, please try replacing the motor controller.                                                      |
| 78   | Pump Motor Short Circuit Error             | Lift and travel                  | After checking to ensure that there are no problems with the pump motor wiring, restart the machine. If this does not solve the problem, please try replacing the motor controller.                                                 |
| 80   | Over 80% Load Warning                      | Alarm only                       | This indicates that the platform load has exceeded 80% and is approaching the maximum load capacity. Please try not to increase the load.                                                                                           |
| 81   | Driver Alarm                               | Lift and travel                  | Check the specific fault code of the driver alarm and determine the specific cause based on the fault code.                                                                                                                         |
| 82   | Left Brake Coil Fault                      | Lift and travel                  | Check whether the coil terminal wiring is correct. If this does not solve the problem, please check the coil itself for open or short circuit. If this does not solve the problem, please try replacing the motor controller.       |
| 83   | Right Brake Coil Fault                     | Lift and travel                  | Check whether the coil terminal wiring is correct. If this does not solve the problem, please check the coil itself for open or short circuit. If this does not solve the problem, please try replacing the motor controller.       |
| 84   | Motor Does Not Return Brake Release Signal | Lift and travel                  | Check whether the wiring between the controller and the motor is correct.                                                                                                                                                           |
| 93   | BMS System Fault                           | Lift and travel                  | Check the lithium battery fault code, and contact Sinoboom aftersales personnel.                                                                                                                                                    |
| CL   | Anti-collision switch warning              | Lift and travel                  | This alarm will be generated if the platform contacts an obstacle during lifting triggering the proximity switch. If the proximity switch is not triggered but still generates an alarm, please try replacing the proximity switch. |
| Ft   | Foot Pedal Not Depressed Alarm             | Limits all operations on the PCU | This alarm will occur when using the handle to operate the machine for travel and lifting movements without depressing the foot pedal. If the alarm still                                                                           |

**Table 9-3 Machine Faults and Solutions (Sinoboom Control System) (continued)**

| Code | Description                                        | Restricted functions | Recommended solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|------|----------------------------------------------------|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      |                                                    |                      | occurs if the foot pedal is depressed while operating the handle, please check whether there is a problem with the foot pedal switch.                                                                                                                                                                                                                                                                                                                                                                                               |
| LL   | Machine Tilt Alarm                                 | Lift and travel      | Check whether the machine is tilted. If this alarm sounds when the machine is level, please check the level sensor and its wiring.                                                                                                                                                                                                                                                                                                                                                                                                  |
| OL   | Overloaded Platform Fault                          | All functions        | This indicates that the platform load has exceeded the limit, please remove excess load immediately.                                                                                                                                                                                                                                                                                                                                                                                                                                |
| HE   | Indoor and outdoor travel switch calibration error | Lift and travel      | <p>Carry out checks in the following sequence:</p> <ul style="list-style-type: none"> <li>• Check the installation position of the indoor and outdoor travel switches to ensure that the triggering position is within 0.6 m (1.97 ft) below the outdoor limit height;</li> <li>• Check whether the angle sensor is correctly installed;</li> <li>• Try carrying out height calibration again.</li> </ul> <p>If the above methods still do not solve the problem, please try to replace the indoor and outdoor travel switches.</p> |
| PL   | Overloaded Platform Warning                        | Lift and travel      | This indicates that the platform load has exceeded the limit, please remove excess load immediately.                                                                                                                                                                                                                                                                                                                                                                                                                                |
| SL   | Machine Sleep Mode                                 | Lift and travel      | Means that the machine has entered the sleep mode. Please operate the travel/lift switch button on the PCU to exit the sleep mode.                                                                                                                                                                                                                                                                                                                                                                                                  |

## Charging Faults and Solutions

| Fault code | Cause                                                                                   | Solution                                                                                                                                                                                                                                                     |
|------------|-----------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E01 bAt    | Output not connected to the battery or connected reversely, short circuit, damaged cell | Check whether the battery pack is connected correctly. Check whether the charger is properly connected. Inspect the individual cells in the battery pack for damage.                                                                                         |
| E02 AC     | Abnormal utility supply (voltage)                                                       | Check whether the AC power cable from the AC outlet to the charger is connected properly. Make sure that the AC plug is firmly inserted into the AC outlet.                                                                                                  |
| E03 Hot    | Charger overtemperature cutoff                                                          | The charger's internal or ambient temperature is too high. The charger will shut down and enter the overheat protection mode. Place the charger in a well-ventilated site. Disconnect the charger and wait 15-20 min before starting a new charging process. |
| E04 bAt    | High temperature protection for battery                                                 | When the battery temperature exceeds the preset value, the charger will shut down to prevent overheat. After the battery temperature drops, the charger will restart automatically.                                                                          |
| E05 Err    | Excessively high output current                                                         | Return the battery for repair.                                                                                                                                                                                                                               |
| E06 bAt    | Excessively high battery voltage                                                        | Check and make sure the correct output battery voltage is connected.                                                                                                                                                                                         |

## 9.4 BASIC TROUBLESHOOTING

Table 9-4

| Fault                                                                                                    | Cause                      | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------------------------------------------------------------------------------------------|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Machine has no power                                                                                     | Machine is not powered on. | <ul style="list-style-type: none"> <li>Check whether the ground/platform control selector switch is in the center position.</li> <li>Check whether the emergency stop button on the platform controller or ground controller has been pressed down</li> <li>Check whether the platform controller is malfunctioning.</li> <li>Check whether the ground controller is malfunctioning</li> </ul>                                                                                                                                  |
| Machine communication fault                                                                              | CAN equipment offline      | <ul style="list-style-type: none"> <li>Check whether the power supply cable or communication cables are inserted incorrectly or loosely.</li> <li>Check whether the plug pins of the connecting cable between the platform and chassis are wired incorrectly, or whether the connection is not secure.</li> <li>Check whether the platform controller is malfunctioning.</li> <li>Check whether the controller plug of the ground/platform controller is wired incorrectly, or whether the connection is not secure.</li> </ul> |
| No response to ground controller operations                                                              | /                          | <ul style="list-style-type: none"> <li>Check whether the ground/platform control selector switch has been set to the ground control position.</li> <li>After the software was re-downloaded to the ground controller, the system was not reset (power off/restart).</li> <li>Check whether the ground controller is malfunctioning</li> </ul>                                                                                                                                                                                   |
| No response to platform controller operations                                                            | /                          | <ul style="list-style-type: none"> <li>Check whether the ground/platform control selector switch has been set to the platform control position.</li> <li>After the software was re-downloaded to the platform controller, the system was not reset (power off/restart).</li> <li>Check whether the platform controller is malfunctioning.</li> </ul>                                                                                                                                                                            |
| A tilt alarm occurs with the machine in level position.                                                  | Level sensor error         | <ul style="list-style-type: none"> <li>Check whether the level sensor is inserted incorrectly or loosely.</li> <li>Check whether the level sensor is malfunctioning.</li> </ul>                                                                                                                                                                                                                                                                                                                                                 |
| With the unloaded machine in a level position, the platform cannot be lowered using the ground controls. | Lowering valve malfunction | <ul style="list-style-type: none"> <li>Check whether the digital input plug is inserted properly and firmly</li> <li>Check whether the wiring of the plug switch is malfunctioning</li> <li>Check whether the lowering valve is malfunctioning or whether the lead is connected properly.</li> </ul>                                                                                                                                                                                                                            |

**Table 9-4 (continued)**

| <b>Fault</b>                                                                                                   | <b>Cause</b>                                                                     | <b>Solution</b>                                                                                                                                                                                                                                                                                                                        |
|----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The platform cannot be lowered using the platform controller; no alarm present.                                | Staged lowering function                                                         | <ul style="list-style-type: none"> <li>Reset the handle and perform the lowering operation again.</li> </ul>                                                                                                                                                                                                                           |
| With no load and the platform in its lowest position, the platform cannot be raised using the ground controls. | Height calibration is wrong/the lift valve is malfunctioning                     | <ul style="list-style-type: none"> <li>Check whether the digital input plug is inserted properly and firmly</li> <li>Check whether the wiring of the plug switch is malfunctioning</li> <li>Check whether the lifting valve is malfunctioning or whether the lead is not connected.</li> <li>Repeat the height calibration.</li> </ul> |
| In indoor mode and with no load, the platform cannot be lifted to its maximum height.                          | The height has not been calibrated/the travel switch is incorrectly set.         | <ul style="list-style-type: none"> <li>Carry out height calibration.</li> <li>Change the settings of the travel switch.</li> </ul>                                                                                                                                                                                                     |
| The platform has not reached its maximum height but stops rising further.                                      | The upper limit travel switch is set incorrectly/the machine is in outdoor mode. | <ul style="list-style-type: none"> <li>Check the calibration status of the upper limit travel switch</li> <li>Check whether the machine is in outdoor mode.</li> </ul>                                                                                                                                                                 |
| An overload alarm is present despite the fact that there is no load on the platform.                           | No weight calibration has been carried out yet/first time lifting.               | <ul style="list-style-type: none"> <li>Calibrate weight.</li> </ul>                                                                                                                                                                                                                                                                    |
| Forward traveling function fails without warning                                                               | Forward traveling function problem                                               | <ul style="list-style-type: none"> <li>Check whether the PWM plug of the ground controller is inserted correctly and firmly.</li> <li>Check whether the forward valve has been connected wrongly or is malfunctioning.</li> <li>Check whether the ground controller is malfunctioning</li> </ul>                                       |
| Reverse traveling function fails without warning                                                               | Reverse traveling function problem                                               | <ul style="list-style-type: none"> <li>Check whether the PWM plug of the ground controller is inserted correctly and firmly.</li> <li>Check whether the reverse valve has been connected wrongly or is malfunctioning.</li> <li>Check whether the ground controller is malfunctioning</li> </ul>                                       |
| The machine is overloaded but no overload alarm is present.                                                    | Pressure sensor malfunction                                                      | <ul style="list-style-type: none"> <li>Perform pressure sensor calibration</li> <li>Check the wiring of the pressure sensor for any abnormalities.</li> <li>Check whether the pressure sensor is malfunctioning.</li> </ul>                                                                                                            |

Table 9-4 (continued)

| Fault                                                                            | Cause                                   | Solution                                                                                                                                                                           |
|----------------------------------------------------------------------------------|-----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No continuous machine travel possible (machine travels intermittently).          | Battery level low/incorrect calibration | <ul style="list-style-type: none"> <li>Re-calibrate parameters</li> <li>Check the battery level</li> </ul>                                                                         |
| Parameters after setting could not be saved successfully after several attempts. | Saving error                            | <ul style="list-style-type: none"> <li>Check whether the set parameters are within the threshold values.</li> <li>Check whether the ground controller is malfunctioning</li> </ul> |

## 9.5 ELECTRICAL SYMBOLS

Table 9-5

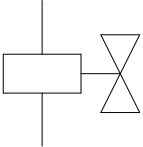
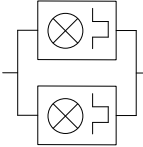
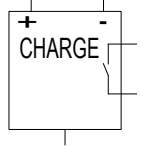
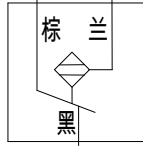
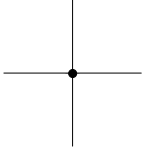
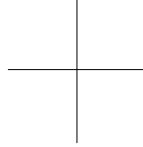
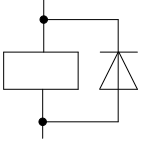
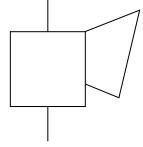
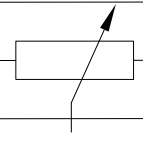
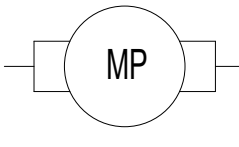
 
 
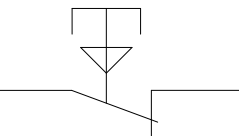
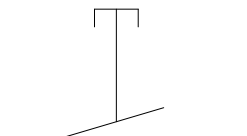
 
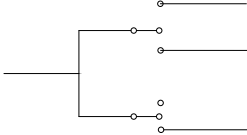
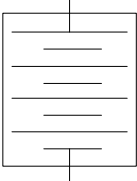
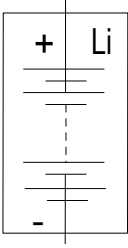
 
| Symbols                                                                             | Description          | Symbols                                                                              | Description              |
|-------------------------------------------------------------------------------------|----------------------|--------------------------------------------------------------------------------------|--------------------------|
|   | Solenoid coil        |   | Warning light            |
|  | Charger              |  | Level switch             |
|  | Two lines, connected |  | Two lines, not connected |
|  | Relay                |  | Horn                     |
|  | Sensor               |  | Pump-controlled motor    |

Table 9-5 (continued)

| Symbols                                                                                  | Description           | Symbols                                                                                       | Description       |
|------------------------------------------------------------------------------------------|-----------------------|-----------------------------------------------------------------------------------------------|-------------------|
| <br>SQ  | Limit switch          | <br>QF      | Main power switch |
|         | Emergency stop button |             | Button            |
| <br>+ - | Buzzer                |             | Key switch        |
|       | AGM battery           | <br>+ Li - | Lithium battery   |
|       | Fuse                  |                                                                                               |                   |

9.6 ELECTRICAL SCHEMATIC  
DIAGRAM

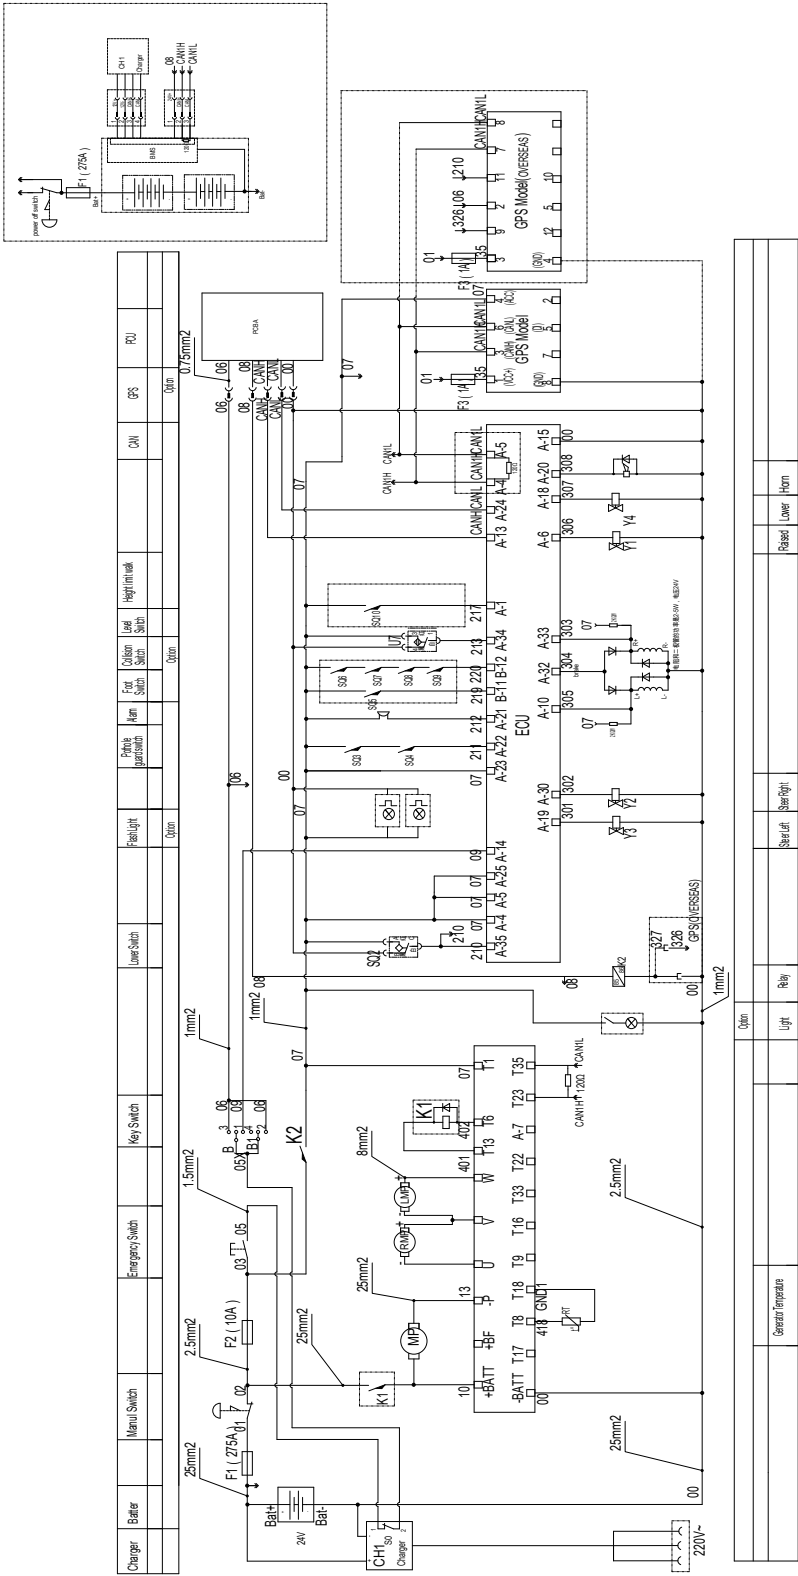


Fig. 2 Electrical Schematic Diagram

# 10 FUNCTIONS AND CONTROLS

## 10.1 MACHINE POSITIONS

The machine positions/states covered in this manual are stowed position, transport position, operating position, and non-operating position. Each position is described in detail below:

- **Stowed position:** The boom is fully retracted.
- **Transport position:** The boom is fully retracted.
- **Operating position (raised):** The boom is raised until it is disengaged from the proximity switch.
- **Non-operating position:** The boom is not disengaged from the proximity switch.

**NOTICE:** When the boom is disengaged from the proximity switch, the platform height (from the ground to the platform floor) is  $0.8 \pm 0.05$  m (31.5±2 in).

## 10.2 DRIVE FUNCTION

Driving at a speed that is appropriate for the given circumstances is essential for ensuring machine safety. The drive function should respond quickly and smoothly to the operator's control inputs. Travel operation should be normal, without vibration, impact, and abnormal noise across the full controllable speed range. To ensure proper functioning of the drive system and to check its condition, it is recommended to check the drive functions every 3 months or every 250 hours of operation.

Select a flat, level, unobstructed and solid surface to perform the following tests with the stowed platform carrying one person:

1. Mark two straight lines on the ground at a distance of 30 m (98.4 ft) from each other as the test start and stop lines.
2. Start the machine.
3. In the travel and steer mode, press and hold the enable button on the joystick and push the joystick forward to the full drive position.
4. Ensure the machine is traveling at high speed when the front wheels touch the test start line, start timing.
5. Keep the machine running at high speed. Stop the timer when the front wheel touches the test stop line.
6. Calculate the travel speed using the measured data, and compare it with the specified maximum travel speed in stowed position.

### NOTICE

*If the result exceeds the maximum stowed travel speed by 10 % or more, turn off and tag the machine, and contact a qualified service technician for inspection and repair.*

## 10.3 BRAKE FUNCTION

Proper functioning of the brakes is essential for the safe operation of the machine. The brakes should respond to the operator's control inputs quickly and smoothly without any abnormal noise. To ensure proper brake functioning and to check their condition, it is recommended to check the brakes every 3 months or every 250 hours of operation.

Ensuring the machine's braking distance is within the normal range is an important indicator of the braking function being normal. Select a flat, level, unobstructed and solid surface to perform the following tests with the stowed platform carrying one person:

1. Verify that the machine's brakes have not been released.
2. Mark a test line on the ground as a reference.
3. Start the machine.
4. In the travel and steer mode, press and hold the enable button on the joystick and push the joystick forward to the full drive position.
5. Ensure the machine is traveling at high speed when the front wheels touch the test start line, then release the joystick quickly.
6. Measure the horizontal distance between the test line and the contact point between the front wheel and the ground, which is the braking distance.
7. Compare the measured distance with specified braking distance at full travel speed.

### NOTICE

*If the measured distance exceeds the specified maximum braking distance, immediately lower the platform to the stowed position, turn off and mark the machine, and contact a qualified service technician for inspection and repair.*

## 10.4 POTHOLE PROTECTION DEVICE

Function of pothole protection device: when the platform rises to a certain height, the pothole protection device will extend to a vertical position and move close to the ground. When the machine is driven into a pothole the plate on the pothole protection device will support on the ground and prevent the machine from tipping over. It is recommended to check the pothole protection device every 3 months or after 250 hours of work.

Select a flat, level, unobstructed and solid surface to perform the following tests:

1. Start the machine.
2. When raising the platform from the stowed position to the operating position, the pothole protection devices on the left and right sides of the chassis should be fully extended to be perpendicular to the ground.
3. Forcefully push the pothole protection device from the outside inwards – it should not be flipped.
4. When the platform is lowered to the non-operating position, the pothole protection device will retract.
5. Place a 50 mm (2 in) high wooden block under the pothole protection device on the left side of the chassis.
6. Raise the platform to the operating position, the buzzer will sound, and the display will show the pothole protection fault code "18", the platform lift and traveling/steering functions will be disabled, and only platform lowering will be permitted.
7. Lower the platform to the stowed position and remove the wooden block from under the pothole protection device on the left side of the chassis.
8. Perform the same test from step 5 on the pothole protection device on the right side of the chassis.

### NOTICE

*If the pothole protection device is found to be not working properly during the test, immediately lower the platform to the stowed position, turn off and tag the machine, and contact a qualified service technician for inspection and repair.*

## 10.5 TILT PROTECTION FUNCTION

The proper functioning of the tilt sensing system is essential for the safe operation of the machine. It is recommended to check the tilt sensing system every 3 months or after 250 hours of operation.

Select a flat, level, unobstructed and solid surface to perform the following tests:

1. Start the machine.
2. Drive the machine so the two wheels on the left (or right) side travel on a slope with an angle greater than 1.5°.
3. From the ground using the platform controller, lift the platform to operating position. Once the machine has reached the operating position, the buzzer sounds, the display shows the machine tilt fault code "LL", the lifting and driving functions are restricted, and the platform can only be lowered.
4. After lowering the platform to a non-operating position, drive the machine off the slope.
5. Drive the machine so that the two front (or rear) wheels are positioned on a slope with an angle greater than 3°.
6. From the ground using the platform controller, lift the platform to operating position. Once the machine has reached the operating position, the buzzer sounds, the display shows the machine tilt fault code "LL", the lifting and driving functions are restricted, and the platform can only be lowered.
7. After lowering the platform to a non-operating position, drive the machine off the slope.

### NOTICE

*If during the test it is found that the machine's movements are not restricted as expected, lower the platform to the stowed position, shut down the machine, tag it accordingly, and contact qualified maintenance technicians for inspection and repair.*

## 10.6 OVERLOAD LIMIT FUNCTION

The rated load capacity of the platform is clearly specified in the **Machine Specifications** section of this manual. Machine operation should be restricted if the platform is overloaded.

The overload limit function is essential for the safe operation of the machine. Any malfunction may affect the stability of the machine. It is recommended to check the overload limit function every 3 months or after 250 hours of operation.

Select a flat, level, unobstructed and solid surface to perform the following tests with no load on the platform:

1. Start the machine.
2. Fully raise and lower the platform twice from the ground controls to ensure that the machine displays no obvious vibration or abnormalities, and is properly lubricated.

3. After lowering the platform to the stowed position, gradually apply load to the platform based on the machine's rated load capacity.
4. As long as the weight on the platform is less than or equal to the rated load capacity the platform can be lifted to its highest position.
5. When the platform load weight exceeds 1.25 times the platform's rated load capacity, the platform lifting action is restricted. Once the excess load is removed, lifting will resume normal.

## NOTICE

*If during the test it is found that the machine's movements are not restricted as expected, lower the platform to the stowed position, shut down the machine, tag it accordingly, and contact qualified maintenance technicians for inspection and repair.*

## NOTICE

*Low temperature will increase the viscosity of hydraulic oil; thicker oil will significantly impact the pressure detection. If the temperature difference between the place of delivery and the manufacturer's facilities exceeds 10° C (50° F), or if the temperature of the hydraulic oil is less than 15° C (59° F) the machine may not be able to lift a platform that is loaded to the rated capacity.*

## 10.7 STAGED LOWERING FUNCTION

In order to reduce the risk of crushing and collision with obstacles while lowering the platform, the machine is equipped with a staged lowering function to be used while lowering the platform from the platform controls. It is recommended to check the staged lowering function every 3 months or after 250 hours of operation.

Select a flat, level, unobstructed and solid surface to perform the following tests:

1. Start the machine and raise the platform to the highest position.
2. Activate the platform lift mode from the ground using the platform controller, press and hold the enable button on the joystick and pull the joystick back. The platform will lower.
3. Once the platform is lowered to the non-operating position, the machine will stop lowering automatically.
4. Release the joystick to the neutral position.

5. Repeat step 2 to re-activate the platform lowering function, the platform will continue lowering 5 sec later.

## NOTICE

*If during testing it is found that the staged lowering function is not working, immediately lower the platform to the stowed position, turn off and mark the machine, and contact a qualified service technician for inspection and repair.*

## 10.8 EMERGENCY LOWERING FUNCTION

When the power unit fails, the emergency lowering function can be used to lower the platform into place. It is recommended to check the emergency lowering function every 3 months or after 250 hours of operation.

Test the emergency lowering function as per the **Emergency Lowering** section in the Operation Manual.

## NOTICE

*If the emergency lowering function is found to not be working properly, immediately lower the platform to the stowed position, turn off and tag the machine, and contact a qualified service technician for inspection and repair.*

**This Page Intentionally Left Blank**

# 11 CONTROL SYSTEM



## DANGER

All operations in this section must be performed by authorized and qualified personnel who have undergone professional training by Sinoboom. Not meeting this requirement bears significant risk.



## WARNING

### Unsafe Operation Hazard



- The machine has been programmed before delivery. It's forbidden to modify the system settings and/or update the software without authorization from Sinoboom.

Due to different machine configurations, certain descriptions below may not apply to your machine. If questions arise during operation of the machine in accordance with the manual please hold the operation and contact Sinoboom after sales personnel in time.

- Not operating the machine properly may result in death, serious injury or machine damage.

## NOTICE

*PCU, ECU, sensors, etc. are precisely adjusted and have received protective treatment before delivery. Therefore, persons who have not been professionally trained and authorized by Sinoboom may not disassemble the respective housings, otherwise moisture and dust ingress may affect proper functioning of these devices.*

## 11.1 SINOBROOM MAIN CONTROL SYSTEM

This section is applicable to machines configured with Sinoboom main control system and right chassis door with wide panel.

### System Interface

Pull out the emergency stop button at the ground controls to the ON position and turn the key switch to ground control position. Press the Enter key on the main interface of the ground controls to enter the ECU menu selection mode. Select and enter different function interfaces by pressing the PgUp /PgDn keys. The system interface is described in the figure below:

NOTICE: some interfaces can only be accessed with a password (the password can only be provided to personnel professionally trained and authorized by Sinoboom).



**Fig. 1 System interface**

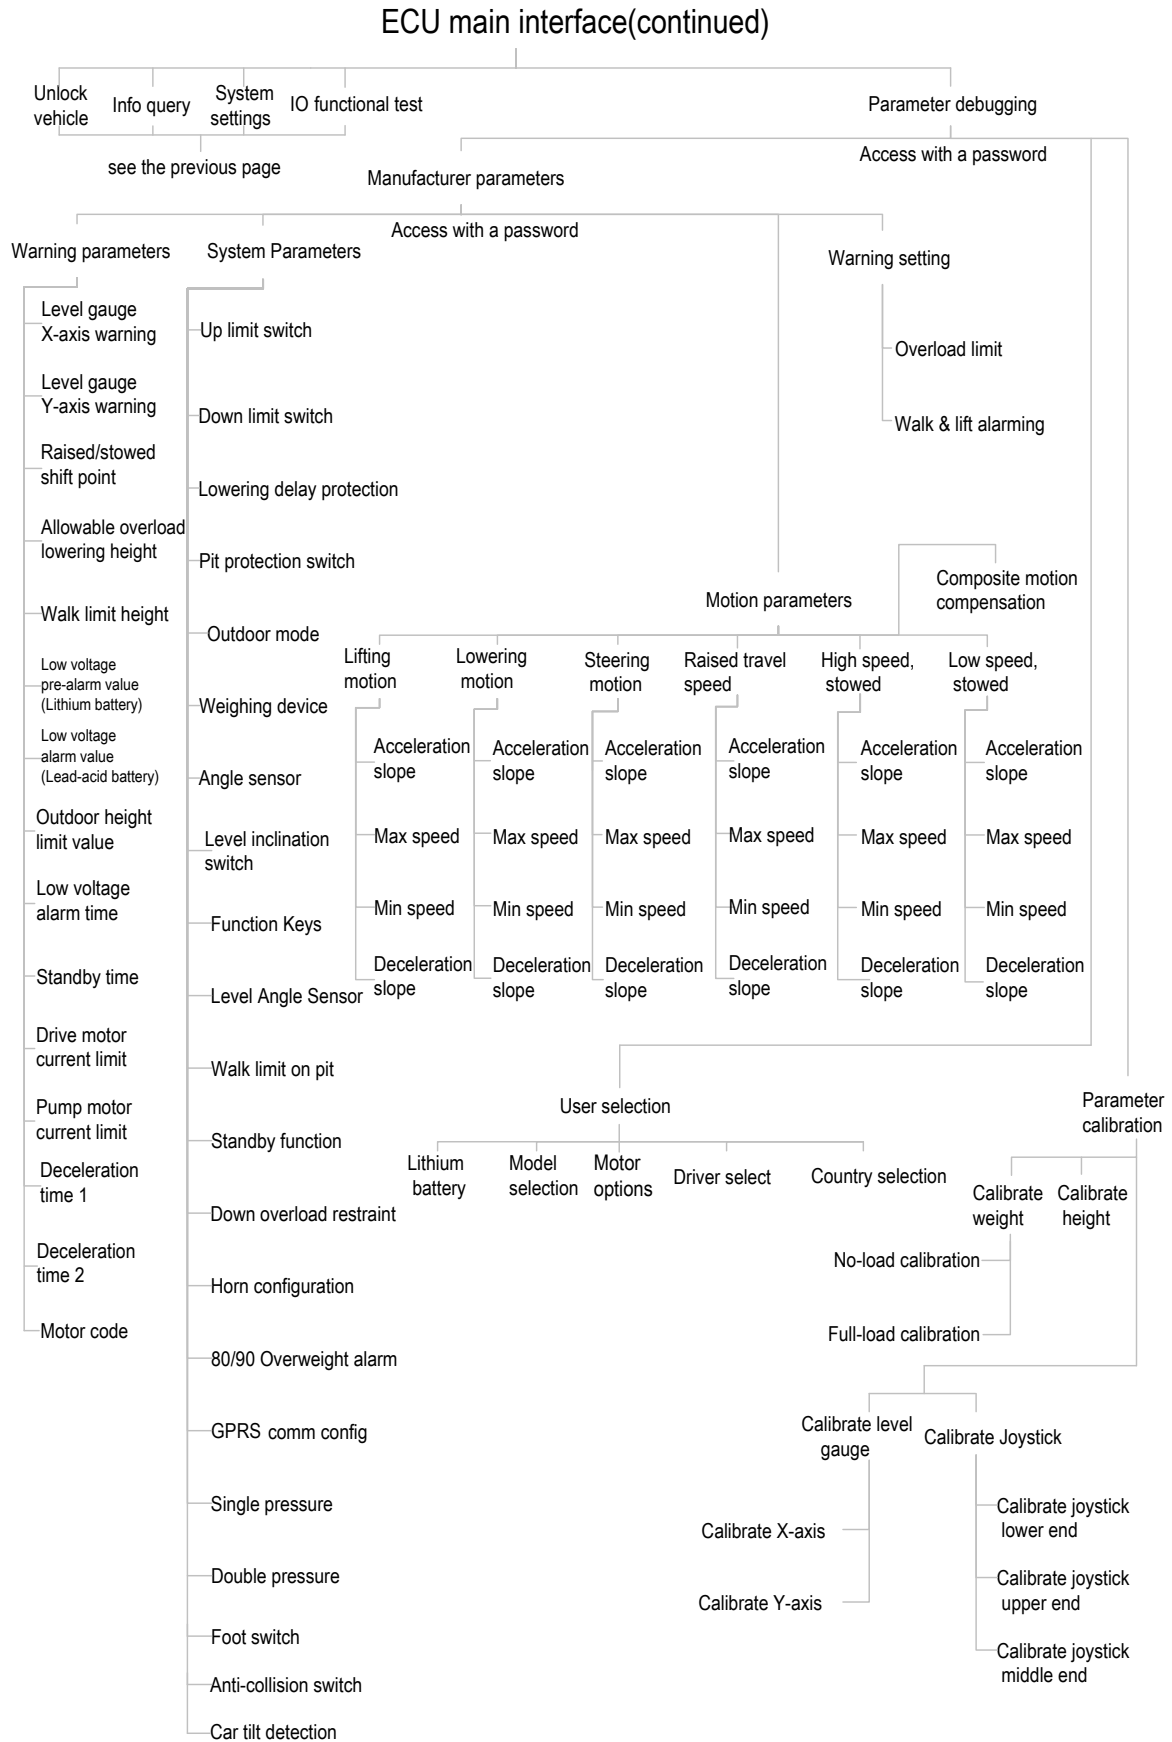


**Fig. 2 System interface (continued)**

## Updating the Program

### WARNING

Updating the program will restore the system parameters set by the original owner/user/ Sinoboom to the original parameters set by the control system manufacturer. Updating the program without prior authorization from Sinoboom is strictly forbidden. Please contact SINOBOOM after-sales personnel if you wish to update the program.

1. Prepare a 4-32 GB USB flash drive in FAT32 file system format.
2. Upload the ECU program to the root directory of the USB flash drive: ECU\_MAIN.bin.  
**Note:** Please contact Sinoboom after-sales personnel if you wish to obtain the program.
3. Turn off the machine, and insert the USB flash drive into the program updating port (protected by a rubber plug) at the back of ECU.
4. Press and hold the Esc key on the ECU panel while powering on the machine. Release the Esc key 5 sec after power-on; the program will be updated automatically.
5. After the program is updated, power off the machine.

## Checking the Program Version

After entering the ECU menu selection mode, select and the System Settings interface, then select System Version to identify the current program version.

## Query Interface

In the Query Interface, users can query GPS information, PCU information, battery pack information, Curtis driver information and fault code information (for fault code causes and solutions please refer to **Fault Codes** section).

## Brake Release

Only electric models are equipped with a brake release function.

1. Place the machine on solid level ground and secure the wheels with chocks to prevent the machine from moving inadvertently.
2. Make sure that the machine is in stowed without loose or unsecured objects, and there are no people or tools in the platform and no obstacles in the surrounding area.

3. Enter the ECU menu selection mode, then select and enter the “Brake Release” interface and press the Enter key for 5 sec.

 


Fig. 3

4. The buzzer will sound, and the message “Brake Is Released” will be shown on the display, indicating that the brakes have been released successfully.

 


Fig. 4

5. The machine can now be towed or dragged by external force.
6. Return to the main interface through the Esc key, and power off the machine as needed. The setting will reset automatically after power-off and restart.

## Calibrate Parameters

The parameters (weight, height, level gauge and joystick) of the machine can be calibrated in the Parameter Calibration menu of Parameter Debugging.

### Joystick Calibration

#### NOTICE

**The joystick calibration includes calibrating the joystick upper end, middle end and lower end. Please perform the calibration with the ECU panel within one cycle as per the following procedure.**

1. Enter the ECU menu selection mode.
2. **Calibrate joystick upper end:** push the joystick to the uppermost end and hold it, select and enter Calibrate Joystick Upper End (as shown in the figure below), then press and hold the enter key. Once “OK” is displayed in the lower right corner of the screen, the joystick upper end is successfully calibrated. Press the Esc key to return to the Joystick Calibration interface.

 


Fig. 5

3. **Calibrate joystick middle end:** push the joystick to the middle position and hold it, select and enter Calibrate Joystick Middle End (as shown in the figure below), then press and hold the enter key. Once "OK" is displayed in the lower right corner of the screen, the joystick middle end is successfully calibrated. Press the Esc key to return to the Joystick Calibration interface.

Calibrate joystick  
middle end

Fig. 6

4. **Calibrate joystick lower end:** push the joystick to the lowermost end and hold it, select and enter Calibrate Joystick Lower End (as shown in the figure below), then press and hold the enter key. Once "OK" is displayed in the lower right corner of the screen, the joystick lower end is successfully calibrated.

Calibrate joystick  
lower end

Fig. 7

5. Return to the main interface through the Esc key, and power off the machine as needed.

## Weight Calibration

### NOTICE

- To ensure the accuracy of the weight calibration, a height calibration must be performed in advance.
- Weight calibration includes no-load and full-load calibration. Please complete the calibration using the ECU panel within one cycle as per the following procedures.

#### • No-load calibration

1. Lower the platform to the stowed position. Make sure there is sufficient overhead space to allow the platform to be lifted to the maximum height safely.
2. Make sure that no heavy objects are placed on the platform.
3. Enter the ECU menu selection mode, then select and enter No-load Calibration interface, press the Enter key to start automatic calibration.

No-load calibration

Fig. 8

4. The platform will raise and lower twice automatically: it will raise to the highest position and lower to the stowed position.
5. Once the screen displays "No-load Calibration Complete", the no-load calibration was successful.

No-load calibration  
complete

Fig. 9

6. Return to the Weight Calibration interface through the Esc key.

#### • Full-load calibration

1. Place heavy objects on the platform that have the same weight as the rated load of the machine.
2. Select and enter the Full-load calibration interface, then press the Enter key to start automatic calibration.

Full-load calibration

Fig. 10

3. The platform will raise and lower twice automatically: it will raise to the highest position and lower to the stowed position.
4. When the screen displays "Full-load calibration complete!", the full-load calibration was successful.

Full-load calibration  
complete

Fig. 11

5. Return to the main interface through the Esc key, and power off the machine as needed.

## Height Calibration

1. Lower the platform to the stowed position. Make sure there is sufficient overhead space to allow the platform to be lifted to the maximum height safely.
2. Make sure that no heavy objects are placed on the platform.
3. Enter the ECU menu selection mode, then select and enter the Calibrate Height interface and press the Enter key.

Calibrate height

Fig. 12

4. The platform will automatically raise to the highest position, and then lower to the stowed position.
5. When the screen displays “Height Calibration Done”, the height calibration was successful.

Height calibration done

Fig. 13

6. Return to the main interface through the Esc key, lower the platform to the stowed position, and power off the machine as needed.

## User Selection Setting

- Users can select the applicable country, driver and model of the machine in the User Selection menu of Parameter Debugging.
- The lithium battery of the machine can be configured (if necessary) in the User Selection menu of Parameter Debugging.

## Parameters Setting



**DANGER**

**Modifying the options in the parameter settings (including alarm parameters, functional configurations, speed parameters, and alarm settings, etc.) must be carried out only by authorized and qualified personnel who have undergone professional training by Sinoboom. Not meeting this requirement bears significant risks.**

## Warning Parameters

In the Warning Parameters menu of Parameter Debugging, the following parameters can be set: level gauge X-axis warning, level gauge Y-axis warning, raised/stowed shift point, allowable overload lowering height, low speed limit height, low voltage pre-alarm value, low voltage alarm value, outdoor height limit value, low voltage alarm time, standby time, drive motor current limit, pump motor current limit, deceleration time 1, deceleration time 2 and motor serial number.

NOTICE:

- The input angle setting value needs to be multiplied by 10. For example, if the input value is 20, the actual angle value is 2°.
- The height setting value is in decimeter (dm).
- The input voltage setting value needs to be multiplied by 10. For example, if the input value is 20, the actual voltage value is 2 volts (V).
- The setting value of low voltage alarm time is in seconds (s); the setting value of the standby time is in minutes (min).

## System Parameters

In the System Parameters menu of Parameter Debugging, the following can be set: up and down limit switches, pothole protection switch, lowering delay switch, outdoor mode configuration, weighing device, angle sensor, level inclination switch, function keys, level angle sensor, pothole guard speed limit, standby function, dual pressure configuration, single pressure configuration, lowering overload limit, horn configuration, GPRS communication configuration, foot switch configuration, anti-collision switch configuration, 80/90 overweight alarm and vehicle tilt detection.

## Motion Parameters

In the Motion Parameters menu of Parameter Debugging, the following parameters can be set: lifting motion, lowering motion, steering motion, raised travel speed, high speed (stowed) and low speed (stowed).

# 12 APPENDIX

## 12.1 MAJOR MODIFICATION AND REPAIR RECORD

| Major Modification and Repair Record |                        |                             |            |
|--------------------------------------|------------------------|-----------------------------|------------|
| Model                                |                        |                             |            |
| Serial No.                           |                        |                             |            |
| Date                                 | Modified/Repaired Item | Machine Status after Change | Technician |
|                                      |                        |                             |            |
|                                      |                        |                             |            |
|                                      |                        |                             |            |
|                                      |                        |                             |            |
|                                      |                        |                             |            |
|                                      |                        |                             |            |
|                                      |                        |                             |            |
|                                      |                        |                             |            |
|                                      |                        |                             |            |
|                                      |                        |                             |            |
|                                      |                        |                             |            |
|                                      |                        |                             |            |
|                                      |                        |                             |            |
|                                      |                        |                             |            |
|                                      |                        |                             |            |
|                                      |                        |                             |            |
|                                      |                        |                             |            |

### Major Modification and Repair Record

**Note:**

1. A major modification/repair is a modification/repair of the entire machine or its components that affects the stability, strength or performance of the machine.
2. A major modification/repair to the machine should be documented using the form below. This record should be retained until the machine is taken out of service or as required by the machine owner/company.
3. The machine must be inspected and verified after major modifications/repairs, with the inspection items including but not limited to all items in the Inspection and Preventative Maintenance Schedule. Once inspection and verification are complete the machine can be put back into service.

## 12.2 INSPECTION AND PREVENTIVE MAINTENANCE SCHEDULE

Inspection intervals are based on the use of the machine under normal operating conditions. The intervals should be shortened accordingly when operating in harsh environmental conditions.

Perform inspection and preventive maintenance for the items in the table below at the specified intervals. Maintenance and inspection intervals are calculated based on the months of service or the “accumulated operating hours” (cumulative working time) displayed on the ground controls (whichever comes first).

**Table 12-1 Inspection and Preventive Maintenance Schedule**

| Item                              | Interval                                                    |                           |                       |
|-----------------------------------|-------------------------------------------------------------|---------------------------|-----------------------|
|                                   | Before each delivery <sup>1</sup> or quarterly <sup>2</sup> | Semiannually <sup>3</sup> | Annually <sup>4</sup> |
| <b>Platform assembly</b>          |                                                             |                           |                       |
| Platform                          | 1                                                           | 1                         | 1                     |
| Guardrails and floor              | 2                                                           | 2                         | 2                     |
| Access gate                       | 1, 2, 3                                                     | 1, 2, 3                   | 1, 2, 3               |
| Platform fasteners                | 1, 2                                                        | 1, 2                      | 1, 2                  |
| Safety belt anchorage point       | 1, 2, 7                                                     | 1, 2, 7                   | 1, 2, 7               |
| <b>Boom assembly</b>              |                                                             |                           |                       |
| Boom weldment                     | 1, 2                                                        | 1, 2                      | 1, 2                  |
| Wear pads                         | 1, 2, 5, 12                                                 | 1, 2, 5, 12               | 1, 2, 5, 12           |
| Bearings                          | 1, 2, 5, 12                                                 | 1, 2, 5, 12               | 1, 2, 5, 12           |
| Fasteners                         | 1, 2                                                        | 1, 2                      | 1, 2                  |
| <b>Chassis assembly</b>           |                                                             |                           |                       |
| Chassis                           | 2                                                           | 2                         | 2                     |
| Tires                             | 1, 2                                                        | 1, 2                      | 1, 2                  |
| Wheel nuts                        | 1 <sup>50</sup>                                             | 1 <sup>50</sup>           | 1 <sup>50</sup>       |
| Traveling and steering components | 1, 2, 5                                                     | 1, 2, 5                   | 1, 2, 5               |

Table 12-1 Inspection and Preventive Maintenance Schedule (continued)

| Item                                                       | Interval                                                    |                           |                       |
|------------------------------------------------------------|-------------------------------------------------------------|---------------------------|-----------------------|
|                                                            | Before each delivery <sup>1</sup> or quarterly <sup>2</sup> | Semiannually <sup>3</sup> | Annually <sup>4</sup> |
| Bearings                                                   | 1, 2, 5, 12                                                 | 1, 2, 5, 12               | 1, 2, 5               |
| Left compartment, right compartment                        | 1, 2, 3                                                     | 1, 2, 3                   | 1, 2, 3               |
| Drive or drive motor                                       | 1, 5, 6                                                     | 1, 5, 6                   | 1, 5, 6               |
| Brake and brake release device                             | 1, 5, 6                                                     | 1, 5, 6                   | 1, 5, 6               |
| Lift motor                                                 | 1, 2, 3, 6                                                  | 1, 2, 3, 6, 13            | 1, 2, 3, 6, 13        |
| Gear pump                                                  | 1, 2, 3, 6                                                  | 1, 2, 3, 6                | 1, 2, 3, 6            |
| Safety strut                                               | 1, 2, 3                                                     | 1, 2, 3                   | 1, 2, 3               |
| <b>Hydraulic System</b>                                    |                                                             |                           |                       |
| Hydraulic pump                                             | 1, 2, 3, 6                                                  | 1, 2, 3, 6                | 1, 2, 3, 6            |
| Hydraulic cylinder                                         | 1, 2, 3, 5, 6                                               | 1, 2, 3, 5, 6             | 1, 2, 3, 5, 6         |
| Hydraulic valves                                           | 1, 2, 3, 5, 6                                               | 1, 2, 3, 5, 6             | 1, 2, 3, 5, 6         |
| Hydraulic hoses, pipes and fitting                         | 1, 2, 6                                                     | 1, 2, 6                   | 1, 2, 6               |
| Hydraulic tank and vent                                    | 1, 2, 3, 5, 6                                               | 1, 2, 3, 5, 6             | 1, 2, 3, 5, 6         |
| Hydraulic oil filter                                       | 1, 5, 6                                                     | 1, 5, 6                   | 1, 5, 6, 11           |
| Hydraulic oil                                              | 5, 6                                                        | 5, 6                      | 5, 6, 11              |
| <b>Electrical system</b>                                   |                                                             |                           |                       |
| Electrical harness, connectors                             | 1, 2                                                        | 1, 2                      | 1, 2                  |
| Battery                                                    | 1, 2, 6, 9, 12                                              | 1, 2, 6, 9, 12            | 1, 2, 6, 9, 12        |
| Electrolyte                                                | 6                                                           | 6                         | 6                     |
| Charging function                                          | 3                                                           | 3                         | 3                     |
| Instruments, gauges, switches, lamps, horn                 | 1, 3                                                        | 1, 3                      | 1, 3                  |
| <b>Functions and controls</b>                              |                                                             |                           |                       |
| Platform controller                                        | 1, 3, 4, 7, 10                                              | 1, 3, 4, 7, 10            | 1, 3, 4, 7, 10        |
| Ground controller                                          | 1, 3, 4, 7, 10                                              | 1, 3, 4, 7, 10            | 1, 3, 4, 7, 10        |
| Function control lock, secondary guarding device and brake | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| Emergency stop button (ground and platform)                | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| Limit switches and power switch                            | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| Tilt alarm                                                 | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| Pothole protection device                                  | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| Emergency lowering device                                  | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |

Table 12-1 Inspection and Preventive Maintenance Schedule (continued)

| Item                                                 | Interval                                                    |                           |                       |
|------------------------------------------------------|-------------------------------------------------------------|---------------------------|-----------------------|
|                                                      | Before each delivery <sup>1</sup> or quarterly <sup>2</sup> | Semiannually <sup>3</sup> | Annually <sup>4</sup> |
| Overload limit function                              | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| Staged lowering function                             | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| Drive function                                       | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| Brake function                                       | 1, 3, 10                                                    | 1, 3, 10                  | 1, 3, 10              |
| <b>Other</b>                                         |                                                             |                           |                       |
| Operation Manual in the manuals compartment          | 10                                                          | 10                        | 10                    |
| All decals/labels complete, clear and secure         | 10                                                          | 10                        | 10                    |
| Annual inspection date of the machine                | /                                                           | /                         | 10                    |
| No unapproved changes or additions                   | 10                                                          | 10                        | 10                    |
| All safety publications taken into account           | 10                                                          | 10                        | 10                    |
| General structural components and weldments          | 2                                                           | 2                         | 2                     |
| All fasteners, pins, protective guards and covers    | 1, 2                                                        | 1, 2                      | 1, 2                  |
| Greasing and lubricating according to specifications | 10                                                          | 10                        | 10                    |
| Functional test of all systems                       | 10                                                          | 10                        | 10                    |
| Paint and appearance                                 | 5                                                           | 5                         | 5                     |
| Inspection date stamped on the chassis               | /                                                           | /                         | 10                    |
| Notify Sinoboom of machine ownership (change)        | /                                                           | /                         | 10                    |

Table 12-1 Inspection and Preventive Maintenance Schedule (continued)

| Item                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Interval                                                    |                           |                       |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|---------------------------|-----------------------|
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Before each delivery <sup>1</sup> or quarterly <sup>2</sup> | Semiannually <sup>3</sup> | Annually <sup>4</sup> |
| <p>NOTICE:</p> <p><sup>1</sup> Before each sale, lease or shipment delivery;</p> <p><sup>2</sup> In service for 3 months or 250 hours; or out of service for more than 3 months;</p> <p><sup>3</sup> In service for 6 months or 500 hours;</p> <p><sup>4</sup> Once a year and no later than 13 months from the date of the previous annual machine inspection;</p> <p><sup>50</sup> The first inspection shall be performed once the machine reaches 50 hours in service for the first time. This occurs only once in the service life of the machine.</p> <p><sup>250</sup> The first inspection shall be performed once the machine reaches 250 hours in service for the first time. This occurs only once in the service life of the machine.</p> <p>NO. 1 Before the machine is put into service for the first time, or before the first use after the oscillating cylinder or counterbalance valve has been replaced.</p> |                                                             |                           |                       |
| <p>Inspection activity (numerical codes):</p> <ol style="list-style-type: none"> <li>1. Check for correct installation (accurate position, firmly installed, tightened to the specified torque)</li> <li>2. Visual inspection for damage (cracks, cracked welds, deformation, wear, corrosion, excessive wear, gouges, abrasions and exposed threads)</li> <li>3. Check for normal function</li> <li>4. Check for normal return to neutral or "off" position (self-resetting switches return to neutral or "off" position after released)</li> <li>5. Clean and free of foreign objects</li> <li>6. Check for correct level, sealing and leaks</li> <li>7. Labels complete, clear and secure</li> <li>8. Check for appropriate tolerances</li> <li>9. Fully charged</li> <li>10. Verify/perform</li> <li>11. Replace the oil or filter element</li> <li>12. Correctly lubricated</li> </ol>                                     |                                                             |                           |                       |

**This Page Intentionally Left Blank**

# Always for Better Access Solutions



## Hunan Sinoboom Intelligent Equipment Co., Ltd.

No.128, East Jinzhou Avenue, Ningxiang High-tech Industrial Park, Changsha, Hunan, China

☎ 0086-0731-87116222 (Sales) & 0086-0731-87116333 (Service)

✉ [sales@sinoboom.com](mailto:sales@sinoboom.com)

🏠 [www.sinoboom.com](http://www.sinoboom.com)

### North American Subsidiary

Sinoboom North American LLC

310 Mason Creek Drive  
unit #100

Katy, TX 77450, US

Tel: (281) 729-5425

E-mail: [info@sinoboom.us](mailto:info@sinoboom.us)

### Europe Subsidiary

Sinoboom B.V.

Nikkelstraat 26, NL-2984 AM Ridderkerk,  
The Netherlands

Tel: +31 180 225 666

E-mail: [info@sinoboom.eu](mailto:info@sinoboom.eu)

### Korea Subsidiary

Sinoboom Korea Co., Ltd.

95, Docheong-ro, Yeongtong-gu, Suwon-si,  
Gyeonggi-do, Republic of Korea

Tel: 010-8310-8026

E-mail: [ka1@sinoboom.com](mailto:ka1@sinoboom.com)

### Australia Subsidiary

Sinoboom Intelligent Equipment Pty Ltd.

50/358 Clarendon St, South Melbourne VIC  
3205, Australia

E-mail: [au@sinoboom.com](mailto:au@sinoboom.com)

### Singapore Subsidiary

Star Access Solutions Pte. Ltd.

112 Robinson Road #03-01 Robinson 112  
Singapore 068902

### Poland Subsidiary

Sinoboom Poland sp. z o.o.

Ul. Bolesława Krzywoustego 74A  
61-144 Poznań, Poland