

Maintenance Manual


Manual No: 504030110002-EN

Manual Version:D

December 2025

Translated version

AB15J Plus/AB480J Plus

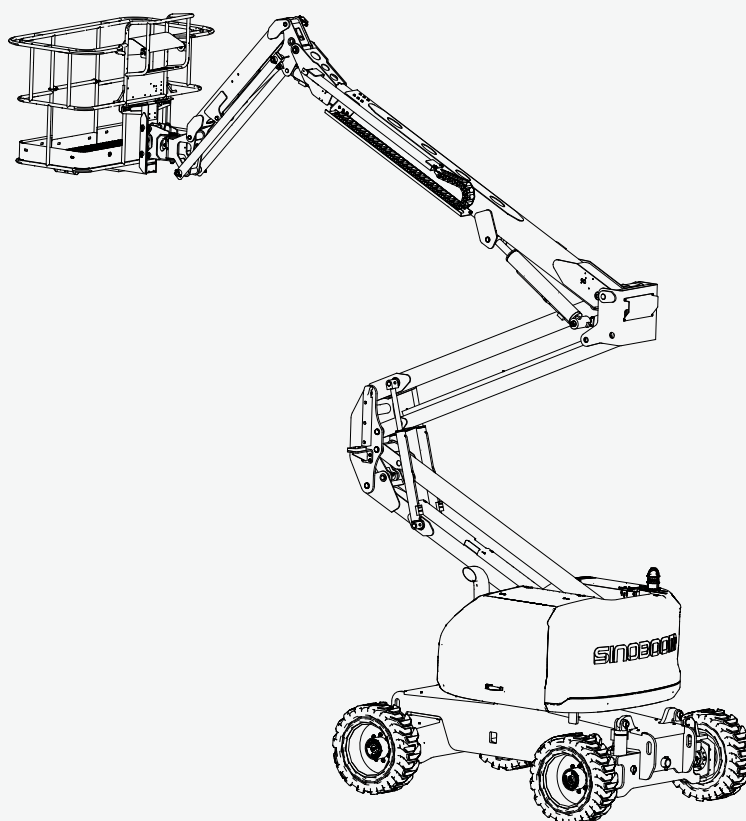

CE  AS/NZS  GB EAC

SINOBOOM



WARNING

Operating, servicing and maintaining this vehicle or equipment can expose you to chemicals including engine exhaust, carbon monoxide, phthalates and lead, which are known to cause cancer and birth defects or other reproductive harm. To minimize exposure and avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle or equipment in a well-ventilated area and wear gloves or wash your hands frequently when servicing.

For disposal, please comply with local regulations.

SINOBOOM



星邦智能

星邦

All of the above are registered trademarks of **Hunan Sinoboom Intelligent Equipment Co., Ltd.**

Contact us:

Website: www.sinoboom.com.cn (China) / www.sinoboom.com (outside China)

Sales Tel: 400-601-5828 (China) / 0086-0731-87116222 (outside China)

Service Tel: 400-608-1289 (China) / 0086-0731-87116333 (outside China)

E-mail: info@sinoboom.com (China) / sales@sinoboom.com (outside China)

Address: No.128, East Jinzhou Avenue, Ningxiang High-tech Industrial Park, Changsha, Hunan, China

Postal code: 410600

Copyright©Hunan Sinoboom Intelligent Equipment Co., Ltd.

Hunan Sinoboom Intelligent Equipment Co., Ltd. retains the right of final interpretation of the manual.

To Users

Thank you for choosing and using the machinery of **Hunan Sinoboom Intelligent Equipment Co., Ltd.**

Use this machine only to transport tools to work locations and for performing tasks on the work platform. Only authorized personnel who have received appropriate MEWP training may operate this machine. Before using the machine, carefully read and fully understand this manual and strictly follow its relevant instructions. Different countries, regions, or governments may have equipment relevant regulations that conflict with this manual. The stricter safety regulations should be followed. Our company will not be liable for any adverse consequences arising from the failure to operate and use the machine in accordance with this manual or other relevant regulations.

This manual provides necessary safety precautions and maintenance instructions for users. This manual covers the basic configuration information of one or more models. Please refer to the information applicable to your machine model. Treat this manual as an integral part of the machine and keep it with the machine at all times. This manual may not be copied, distributed, sold, or altered without written permission from Sinoboom.

Due to continuous improvement and upgrading of product design and different product models covered, some charts and textual content in the manual may be not applicable to your machine. Our company reserves the right to revise the contents of this manual due to technological improvements. Changes will be made without prior notice. Contact Sinoboom to obtain the most current version of the manual.

Please go to www.sinoboom.com to download your desired Operation Manual, Maintenance Manual and Parts Manual.

If you have any questions, contact **Hunan Sinoboom Intelligent Equipment Co., Ltd.**

Manual Revision History:

[illegible]

Applicability

The manual applies to the following models and serial numbers:

Model	Metric Trade Name	Imperial Trade Name	Serial No.
AB15J Plus	AB15J Plus	AB480J Plus	0403000240 to current (excluding LTV) 0403600100 to current (LTV) PL0403000100 to current MX0403000100 to current

Notes:

- Check the machine model and serial number on the machine nameplate. The location of the nameplate can be found in the **Decals Diagram** section of the Operation Manual.
- Product model numbers are indicated on the nameplates to distinguish products with different main technical parameters.
- Product trade names (product commercial codes) are used for marketing purposes and machine decals for the differentiation of products with different main technical parameters. Product trade names are categorized as metric and imperial trade names: metric trade names are applicable to regions/countries using the metric system or as specifically requested by customers; imperial trade names are applicable to regions/countries using the imperial system or as specifically requested by customers.
- "LTV" stands for "Low Temperature Version," referring to the low-temperature configuration model of the machine. Contents marked with "LTV" in the text apply only to low-temperature configuration models. Unmarked sections apply to all configurations of this model.
- Prefix-to-manufacturing location correspondence:
 - "PL" prefix: manufactured in Poland
 - "MX" prefix: manufactured in Mexico
 - Absence of the above prefixes: manufactured in China

Manufacturer's Declaration

This product may be manufactured in multiple configurations, each independently produced by the following manufacturers in accordance with the same technical standards:

Manufacturer Name	Manufacturer Address
Hunan Sinoboom Intelligent Equipment Co., Ltd.	No.128, East Jinzhou Avenue, Ningxiang High-tech Industrial Park, Changsha, Hunan, China
Sinoboom Poland sp.z o.o.	ul. Feliksa Tychowskiego 5A 61-248 Poznań, Poland
SINOBOOM LATIN AMERICA, S. DE R. L. DE C. V.	Camino a Napoles Km. 2+370(LI) entronque a brecha Km.1(LI) del Ejido San Miguel del Arenal, Silao de la Victoria, Gto.

Notes:

- In accordance with EU regulations, the Chinese manufacturer Hunan Sinoboom Intelligent Equipment Co., Ltd. designates Sinoboom B.V. (Registered address: Nikkelstraat 26, NL-2984 AM Ridderkerk, The Netherlands) as its EU Authorized Representative.
- For models intended for the EU market, the operation manual includes sample Declarations of Conformity provided by each manufacturer. Customers should refer to the declaration file corresponding to the actual manufacturer of the purchased product.
- Each manufacturer strictly adheres to relevant EU or North American regulations and assumes full compliance and legal responsibility for its respective products. For after-sales service, please contact the corresponding manufacturer's support channels based on the manufacturer information indicated on the product's nameplate.
- This manual applies to the same model produced by the above manufacturers, with consistent technical parameters and operational guidelines.

CONTENTS

1	Safety Warning Symbols and Signs	1
2	Maintenance Safety Precautions	5
2.1	General	5
2.2	Instructions Before Maintenance..	5
	Requirements for Maintenance Personnel.....	5
	Precautions before Maintenance	5
2.3	Maintenance Safety	7
2.4	Considerations after Maintenance	11
3	Technical Characteristics	13
3.1	Machine Specifications	13
3.2	Specifications of Major Components	15
	Engine	15
	Reducer.....	16
	Motor	16
	Battery	17
	Hydraulic pump	17
	Power unit	18
3.3	Function Speed	18
3.4	Weight of Major Components	19
3.5	Pressure Settings	20
3.6	Oil Specifications.....	20
3.7	Torque Specifications	22
	Special Torque Requirements	22
	Hydraulic Fitting Torque	23
	Fastener Torque Specifications.....	25
	Hydraulic Hose Torque	26
4	Maintenance Instructions	29
4.1	Inspection and Preventive Maintenance Schedule.....	29
	Pre-delivery Inspection	29
	Pre-operation Inspection	29
	Regular Inspections	29
	Annual Inspection.....	29
	Preventive Maintenance	29
	Responsible Persons and Qualifications for Performing Inspection and Maintenance	30
	Inspection and Preventive Maintenance Schedule	30
4.2	General Maintenance Instructions.....	34
4.3	Major Modification and Repair ...	38
5	Chassis and Turntable Assembly	39
5.1	Chassis and Turntable System... 39	
	Chassis Inclination Sensing System .	39
	Travel Drive System	39
	Travel Speed Reduction System	39
	Reverse Drive Confirmation System.	39
	Chassis Oscillating System.....	40
5.2	Tire and Wheel Assembly	40
	Check Wheel Nuts.....	40
	Replacement Requirements.....	40
	Replace Tire and Wheel Assembly ..	42
5.3	Travel Drive Device	43
	Check Travel Reducer Disconnect Cap	44

Check the Oil Level in Travel Reducer.....	44
Replace the Gear Oil in Travel Reducer.....	44
Travel Reducer and Drive Motor.....	45
5.4 Slewing mechanism.....	46
Lubricate Slewing Bearing.....	47
Check Slewing Bearing Bolts.....	47
Disassembly and Installation.....	49
5.5 Hydraulic generator (if equipped)	51
Installation.....	51
Commissioning.....	53
5.6 Counterweight.....	54
5.7 Battery.....	54
5.8 Cold Weather Heating Package (for LTV Model Only).....	55
Notes.....	55
Electrical Schematic Diagram.....	56

6 Boom and Platform

Assembly 57

6.1 Boom and Platform System.....	57
Platform Control Enable System.....	57
Transport Position Sensing System ..	57
Load Sensing System.....	57
6.2 Platform and Jib.....	57
Platform Controller.....	58
Platform Assembly.....	58
Jib assembly.....	58
Swing Cylinder.....	59
Upper Leveling Cylinder.....	59
6.3 Boom.....	60
Cable track assembly.....	60
Lower Leveling Cylinder.....	60
Main boom lift cylinder.....	61
Main Boom Assembly.....	62
Telescoping section and telescoping cylinder.....	63

Articulating boom lift cylinder.....	64
Articulating Boom Assembly.....	65
Boom wear pads.....	66

7 Power system..... 69

7.1 Kubota 05-E4B Series.....	69
7.2 Kubota Engine V2403-CR-TIE4..	77
7.3 Kubota Engine V2403BM-DI-CT04.....	87
7.4 Auxiliary Power System.....	96

8 Hydraulic system..... 97

8.1 Layout of Hydraulic Elements....	97
8.2 Function Valve Manifold.....	98
8.3 Hydraulic tank.....	120
Air Filter.....	120
Oil Return Filter.....	120
Oil Suction Filter.....	120
8.4 Hydraulic Oil.....	120
Check the Oil Level.....	120
Check the Cleanliness of the Hydraulic Oil.....	121
Change the Hydraulic Oil.....	121
8.5 Hydraulic oil high-pressure filter	121
8.6 Leveling Cylinder Bleeding.....	121
8.7 Bleed the Oscillating Cylinder..	122
8.8 Oscillating Function Check.....	122
Check Counterbalance Valve Locking.....	122
Check the Tie Rod of the Oscillating Multi-way Valve.....	122
Oscillating Axle Function Test....	122
8.9 Cylinder Drift Inspection.....	122
8.10 Hydraulic Symbols.....	123
8.11 Hydraulic Schematic Diagram	124

9 Electrical system..... 127

9.1 Layout of Electrical Elements ..	128
--------------------------------------	-----

9.2	Maintenance-free Lead-acid Battery	129
9.3	Electrical Symbols	129
9.4	Electrical Schematic Diagram..	131

10 Troubleshooting Guide 135

10.1	Faults Description	135
10.2	Engine Fault Codes.....	140
10.3	Basic Troubleshooting	141

11 Functional Test 147

11.1	Machine Positions	147
11.2	Drive Function	147
11.3	Braking Function.....	147
11.4	Tilt Protection Function	148
11.5	Working Envelope Limit and Overload Limit Functions.....	148

12 Control System..... 151

12.1	Display Interface Navigation ..	151
12.2	Main Interface after Booting ..	152
12.3	Configuration	153
	LANGUAGE	153
	Machine Information	153
	TEST-RUN INFO	155
	Advanced Setting.....	160
	Temporary Unlocking	166
12.4	System Information	166
	Time Setting	166
	Sensor Information	166
	Digital Input.....	167
	Digital Output Information	167
	Proportional Valve	168
	Engine Information	168
	Override Operation Query	171
	Motor Driver Information.....	171
12.5	Turntable Panel Information ..	171
12.6	Platform Information	172
12.7	Machine Information	172
12.8	Alarm Information.....	173

13 Appendix..... 175

13.1	Accessory Device Weight Table	175
13.2	Major Modification and Repair Record	176
13.3	Inspection and Preventive Maintenance Schedule.....	177

1 SAFETY WARNING SYMBOLS AND SIGNS

The safety warning symbols used on the machine and in the manuals have the following meanings:



Safety warning symbol. This symbol is used to alert you to potential hazards. Observe all safety instructions following a symbol to avoid possible injuries.



DANGER

Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.



WARNING

Indicates an imminently hazardous situation that, if not avoided, could result in death or serious injury or serious damage to the machine.



 
 
 
 







CAUTION







Indicates an imminently hazardous situation that, if not avoided, could result in minor or moderate injury or machine damage.

NOTICE

Indicates information directly or indirectly related to personal safety, machine damage, or property loss.

The safety signs used on the machine and in the manuals have the following meanings:

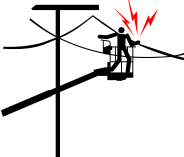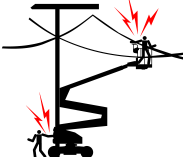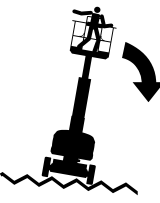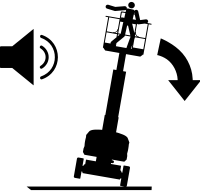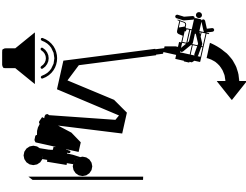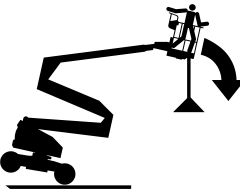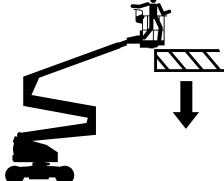 Refer to the Maintenance Manual	 Anchor point only for 1 person	 Wind speed	 Chemical burns hazard	 Chock the wheels
 Refer to the Operation Manual	 Add lubricant	 Crushing hazard—safety shoes required	 Danger of hot, high-pressure fluid spray	 Horn
 Noise level	 Burn hazard	 Keep a safe distance from high temperatures	 Pull out – ON Press – OFF	 Alarm sounding
 Depress – ON Release – OFF	 Hydraulic oil level low	 Hydraulic oil level high	 Temperature	 Replace with tires of the same specification
 Only qualified maintenance personnel may access the compartment	 Electrocution hazard on platform	 Electrocution hazard on the ground and platform	 Tipping hazard—avoid uneven ground	 Tipping hazard—avoid uneven ground
 Tipping hazard – never use machine in strong, gusty winds	 Tipping hazard—never use machine in strong, gusty winds	 Tipping hazard—never push or pull objects outside the platform	 Tipping hazard—never suspend objects from the platform	 Tipping hazard – never place ladders and scaffolding on the platform
				

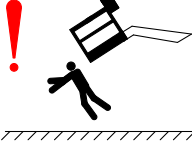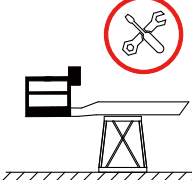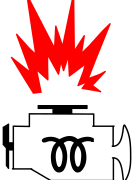   Collision hazard – keep the platform clear of obstacles below when lowering the platform	Collision hazard – keep head clear of overhead obstacles when raising platform	Crushing hazard – keep hands clear from overhead obstacles when raising platform	Fall hazard – never climb on platform guardrails	Fall hazard – never climb on the boom
				
Crushing and collision hazard—Do not stand under platform	Place supports under boom during maintenance	Keep clear from the rotating platform	Engine preheating explosion hazard	Never use ether or other starting additives for machines equipped with a glow plug
				
Fuel explosion hazard	Lateral force	Electrocution hazard	Battery explosion hazard	No smoking or open flames/sparks
				
No smoking or open flames/sparks	Lifting point	Lashing point	Tire ground pressure	Hydraulic oil filler
				
Platform load capacity	Do not use damaged power cords	Tool or weight	Fast/high speed	Slow/low speed
				
Only qualified maintenance personnel may perform maintenance work	Wear protective clothing and safety goggles			

This Page Intentionally Left Blank

2 MAINTENANCE SAFETY PRECAUTIONS

2.1 GENERAL

This chapter covers safety precautions that must be taken when servicing the mobile elevating work platform. Before carrying out any repair work, maintenance personnel must carefully read and understand all warnings and precautions, and follow the instructions in this manual when performing maintenance on the mobile elevating work platform.



WARNING

It is forbidden to alter or modify the machine or any components without the written permission of Hunan Sinoboom Intelligent Equipment Co., Ltd.

2.2 INSTRUCTIONS BEFORE MAINTENANCE

Requirements for Maintenance Personnel

Maintenance personnel is responsible for maintaining the machine so that it can be operated safely and normally. Before performing inspection and maintenance work on this machine, maintenance personnel should read, understand and comply with all applicable regulations and requirements of employers, local authorities, and governments related to the operation of this machine. Maintenance personnel must also read and fully understand this manual.

Maintenance personnel shall:

- obtain appropriate qualification and authorization
- be experienced professional technicians or engineers
- be licensed electricians to install and connect high-voltage electrical equipment;
- be familiar with the machine and its associated risks
- receive appropriate training, including but not limited to training on the use of special equipment

- be familiar with the safety precautions and related operating procedures for maintenance work on this machine.

NOTICE

- *Only authorized personnel who have received appropriate training and obtained qualifications may repair this machine.*
- *Individuals who have consumed alcohol or medication, who experience physical or mental fatigue or are unwell may not carry out any work on the machine.*

Precautions before Maintenance

Before and during inspection and maintenance procedures personnel shall use caution and take measures to avoid dangerous situations. Those measures include, but are not limited to, the following:

1. Choose an appropriate location for the maintenance procedures.
 - Always park the machine on level, firm ground for maintenance, and ensure that the maintenance area is clean and unobstructed.
 - If the machine uses the engine as the main power source, ensure that the maintenance site is open and well ventilated. The exhaust gases from the engine contain chemicals that may cause suffocation or poisoning, so forced ventilation measures must be taken if it is necessary to start the engine in a restricted indoor area. A hose can be connected to the exhaust pipe to discharge the exhaust gases to the outside, and the doors and windows shall be opened for air circulation.
2. Choose appropriate safety equipment.
 - Maintenance personnel must identify risks in conjunction with inspection and maintenance work, and select appropriate safety equipment that is suitable for the type of work and the work place conditions, such as safety helmets, protective masks, protective gloves, goggles, protective clothing, safety belts and safety shoes.
 - For maintaining high-voltage equipment, the maintenance personnel must wear insulated protective supplies (insulated clothing, insulated gloves, insulated shoes, etc.).

- Before carrying out inspection and maintenance work, check that the safety equipment is in good condition and is used correctly.
 - Safety equipment must be inspected regularly and needs to be replaced in case of damage.
3. Choose appropriate repair tools.
- Before conducting any inspection and/or maintenance work, maintenance personnel shall prepare appropriate tools as required for the type of work, such as wrenches, screwdrivers, pliers, multimeter, pressure gauge, lubrication device, jack and lifting equipment.
 - For maintaining high-voltage equipment, it is necessary to use insulated tools with an insulating handle that can withstand a voltage of over 1000V.
 - Verify that the load capacity of jacks or lifting equipment is suitable for the planned task. Refer to the **Weight of Major Components** section to select a device with sufficient load capacity.
 - Service tools must be kept clean and in good condition.
4. After the machine is parked, use blocks (such as triangular wedges) to secure the wheels to prevent the machine from moving accidentally.
5. Do not perform inspection and/or maintenance work after the machine has been started.
- Before performing inspection and/or maintenance work, make sure the machine has turned off, remove the key and set the power-off switch to OFF position. If the machine is equipped with high-voltage lithium batteries, the lithium battery service switch needs to be disconnected. An "Out of Service" warning sign can be placed next to the turntable control box and platform control box. No one is allowed to start the machine or reset a removed fuse.

voltage lithium batteries, the lithium battery service switch must be disconnected.

7. The machine should be cleaned before carrying out inspection and/or maintenance work. Avoid letting dust or debris enter internal machine components during the maintenance process, as this can affect the machine's performance.

The above listed requirements must be adhered to strictly during maintenance/inspection work. In addition, all other appropriate measures must be taken to ensure safety during maintenance work, taking account of the working environment.

WARNING

Inadvertently starting the machine during inspection or maintenance may cause machine damage or personal injury/death.

- If inspection or maintenance work must be carried out while the machine is running at least two people should work together. One person must be close to the turntable control panel or platform control panel so as to be able to turn off the machine any time if necessary while a second person carries out inspection or maintenance work, both persons shall maintain close contact with each other at all times.
6. Before carrying out maintenance work on electrical components, always set the power-off switch to OFF position. If the machine is equipped with high-

2.3 MAINTENANCE SAFETY

Unsafe Maintenance Hazards

WARNING



- Before performing any adjustment or service operations, power off all control units and ensure that all moving parts are safely secured and cannot move unintentionally.
- Before performing any adjustment or service operations, ensure that the boom is stowed. Never work under a raised platform/boom. If it becomes necessary to work under the raised platform/boom, the platform and boom must be supported with appropriate safety supports.
- When lifting or moving heavy components of the machine, use equipment with sufficient capacity for assistance, and it should be operated by professionals with the qualifications. The lifting or moving operation shall be done gently, and pay attention to objects on the ground to prevent tripping or falling. Lift the components smoothly and at a constant speed to avoid vibration or shock, and do not allow the components to overturning or remain suspended for a long time. After moving, do not place heavy components at an unstable position.
- Before vertical lifting, ensure that all components of the assembly are securely fastened with screws. It is strictly forbidden to unscrew the fasteners of the components in the assembly.
- When machine parts are lifted by other equipment, ensure that there are no persons under and/or around the equipment.
- When striking brass rods with a mallet, make sure to wear eye protection.
- If you need to replace parts, use only original parts specified by Sinoboom. Parts replaced during maintenance should be the same or equivalent to the original machine's components.
- Do not wash the machine with water. The machine contains

WARNING

electronic components such as solenoid valves and sensors, which may fail or operate erratically after water ingress. If it is necessary to wash with water, turn off the emergency stop switch and power switch before proceeding. Only turn the power back on after ensuring the machine is completely dry.

- Make sure the machine is turned off before using flushing equipment (such as a high-pressure water gun) to clean the machine. Do not direct water or steam ejected from the flushing equipment at electrical components, as this may cause short-circuits or electrical shocks.
- After maintenance is completed, thoroughly clean up any spilled hydraulic oil, and avoid allowing it to be spilled on the ground.
- After maintenance is completed, immediately wash off any hydraulic oil that may have come into contact with your skin.
- Waste hydraulic fluids, fuels, coolants and refrigerants must be recycled or disposed as per local regulations.

High Temperature and High Pressure Hazards

WARNING



- While the machine is in operation or after running for a period of time, components may generate high surface temperatures, which can cause burns upon contact. Do not touch any hot parts!
- It is forbidden to repair or tighten hydraulic hoses or seals while the machine is operating or when the oil system is under pressure.
- Before loosening or disassembling hydraulic parts (especially the counterbalance valve on the cylinder), the hydraulic pressure of all hydraulic lines should be released and the hydraulic oil should completely cool down.
- After the hydraulic pressure has been released, take protective measures first, and then disassemble the hydraulic components slowly to prevent the hydraulic oil from splashing and causing injuries.
- Never check for hydraulic leaks by hand. Use a piece of cardboard or stiff paper to locate leaks, and wear gloves to protect your hands from spraying hydraulic fluid.
- Do not operate the machine in case of hydraulic or air leaks. Oil or air leakage from the hydraulic system may penetrate and burn the skin.
- Never plug hydraulic leaks by hand. If there is a leak, the pressure of the hydraulic system should be released first, maintenance/repair should be carried out after the hydraulic oil has cooled down.
- If the machine is equipped with a radiator, do not attempt to unscrew the radiator cover or touch the radiator while the coolant is still at high temperature.
- If injury occurs due to high temperature and/or high pressure, seek immediate medical attention. If treatment is not carried out

WARNING

immediately, serious complications may result.

Welding and Grinding Operation Hazards

WARNING



- When performing welding operations on the machine body or using this machine to transport personnel for external structural work (such as welding, grinding, or polishing), all applicable local safety procedures must be followed.
- If welding on the machine body, disconnect both the positive and negative battery terminals first, and ensure proper grounding of the structure to be welded.
- Before performing welding, grinding and polishing operations on external structures, turn off the machine's power, and ensure that all wires or cables are connected correctly.
- When conducting welding, grinding, or similar operations on external structures, never use the machine as a ground connection.
- Always make sure that all power tools are placed completely within the perimeter of the platform. Do not hang the cords of power tools on the guardrail of the platform or in any work area outside the platform, and do not hang the power tools directly by their cords.

Fire and Explosion Hazards

WARNING



- Do not operate the machine, charge the battery or refuel the machine in places where potentially flammable or explosive gases may be present.
- Refueling and charging should be carried out in a well-ventilated place without flames, sparks, and other hazards that may cause fire or explosion.
- For engine-powered machines, do not refuel the machine while the engine is running.
- Never spray ether or other starting agents into glow-plug-equipped engines (engine-powered machines).
- The electrolyte in the battery can produce explosive gases. Avoid any actions that may produce flames or sparks near the battery. Never touch the battery terminals or cable clamps with tools that can generate sparks.
- Never reverse the positive and negative terminals of the batteries.
- Only approved non-flammable cleaning solutions should be used on the machine.
- In case the machine catches fire, do not use the "water drenching method"; use a "dry powder extinguisher" to extinguish the fire.

Battery Hazard

WARNING



- Be sure to read and adhere to the battery manufacturer's recommendations on proper battery use and maintenance procedures.



- Individuals without adequate professional qualification should not repair and maintain the battery system, otherwise this may cause personal injury or damage to the battery system.



- Individuals without adequate professional qualification should not modify parameters, signal lights, etc. during the operation of the battery system, otherwise this may cause personal injury or damage to the battery system.



- When the BMS issues an alarm, do not use the machine. Ensure that the fault has been resolved before the machine can be used.



- Always wear goggles, protective gloves and protective clothing, and remove all rings, watches and other accessories before servicing the battery. Contact with live circuits may result in death or serious injury.

- Before replacing the battery, be sure to select an appropriate number of personnel and suitable lifting methods.

- It is forbidden to modify or dismantle the battery system without approval to avoid serious accidents.

- When maintaining electrical components, the battery should be disconnected.

- Do not short-circuit the battery terminals by connecting them with tools or other metal objects.

- The battery charger can only be connected to a grounded three-wire AC power outlet. Make sure the charger is working properly before charging. Do not connect the battery directly to a power outlet.

- If the battery becomes hot, deformed, leaks, emits an unusual smell, or produces smoke during

WARNING

use, stop using the battery immediately and report to the relevant maintenance personnel promptly.

- Batteries contain sulfuric acid and can produce explosive mixtures of hydrogen and oxygen. Keep any materials (including cigarette/smoking materials) that can cause sparks or flames away from batteries to prevent explosion.
- It is strictly prohibited to expose the battery to extremely high temperatures or to throw it into a fire.
- Never touch the battery terminals or cable clamps with tools that can generate sparks.
- Never charge the battery in direct sunlight. The battery should be charged in a well-ventilated place.

CAUTION



- Avoid spilling battery acid or allowing it to come into contact with unprotected skin. If battery acid spills, use water mixed with bicarbonate (baking soda) to neutralize the acid. In case of contact with battery acid, rinse the acid off immediately with plenty of water and seek medical attention promptly.
- Always keep the battery upright. If the battery is placed on its side or at an angle, liquid may spill from the battery.
- Discarded batteries can be hazardous, and must not be treated like regular waste. If you need to discard them, please contact a battery recycling company.

NOTICE



- Please use the charger provided by the manufacturer to charge the battery.
- The charging process must be completed in full. Frequent intermittent charging can damage the battery.
- The battery is only suitable for use with the equipment it was provided with at the time of manufacture. Do not use the battery for other purposes.
- Do not reverse the positive and negative terminals of the battery for use.
- Do not short-circuit the positive and negative terminals of the battery system.
- Do not place objects or tools on the battery to prevent short circuiting it.
- Do not strike, throw, step on, or hit the battery with sharp objects.
- Do not immerse the battery in water, acidic, alkaline or salty solutions, and protect the battery from rain.
- The battery should be fully charged immediately after each use of the machine. During charging, keep the power-off switch closed.

2. After maintenance, all maintained parts must be checked for abnormal operation, oil leakage, loose bolts and other problems.
3. The safety protective device needs to be restored or reinstalled, and if necessary, be recalibrated.
4. After maintenance, clear up the tools and equipment for maintenance, remove the replaced parts and loose objects, and clean up the site.
5. Record inspections and maintenance as required.

NOTICE

All maintenance work must include a verification that the machine is operating properly.



WARNING

- Waste liquids must not be dumped or disposed of randomly. Waste liquids shall be discharged into appropriate containers.
- Waste hydraulic fluids, fuels, coolants and refrigerants must be recycled or disposed as per local regulations.

NOTICE

Battery over-discharge (continued use of battery with levels of less than 10 %) or battery under-voltage caused by long-term non-charging (battery with levels of less than 10 % not charged for more than three days), resulting in battery capacity attenuation and failure, are not covered by the warranty.

2.4 CONSIDERATIONS AFTER MAINTENANCE

1. Check the machine functions so that faults such as oil leakage or poor operation can be detected as early as possible.

This Page Intentionally Left Blank

3 TECHNICAL CHARACTERISTICS

3.1 MACHINE SPECIFICATIONS

Table 3-1 Specifications

Item	Metric	Imperial
Product Category		
Power type	Diesel engine-powered	
Axle type	Oscillating axle	
Dimensions		
Maximum platform height	14.7 m	48 ft 3 in
Maximum working height	16.7 m	54 ft 9 in
Maximum horizontal reach	8.5 m	27 ft 11 in
Maximum horizontal working envelope	9.1 m	29 ft 10 in
Maximum up and over height	7.3 m	23 ft 11 in
Overall length (stowed)	7.49 m	24 ft 7 in
Overall length (transport)	5.75 m	18 ft 10 in
Overall width (stowed)	2.3 m	7 ft 7 in
Overall width (transport)	2.3 m	7 ft 7 in
Overall height (stowed)	2.28 m	7 ft 6 in
Overall height (transport)	2.66 m	8 ft 9 in
Wheelbase	2.3 m	7 ft 7 in
Ground clearance	0.355 m	1 ft 2 in
Platform dimensions (L×W×H)	1.83×0.85×1.1 m	6 ft×2 ft 9 in×3 ft 7 in
Performance		
Rated platform capacity	300 kg	661 lb
Maximum number of occupants	2 persons	
Travel speed (stowed)	0 – 4.5 km/h	0 – 2.8 mph
Travel speed (elevated)	0 – 1.0 km/h	0 – 0.6 mph
Gradeability (4WD)	40%	
Turntable slewing (angle/continuity)	360°/continuous 355°/noncontinuous (optional)	
Platform rotation angle	180°	
Maximum allowable inclination	5°	
Turning radius (inside/outside)	1.82 m/4.78 m	6 ft/15 ft 8 in

Table 3-1 Specifications (continued)

Item	Metric	Imperial
Turntable tailswing	0.1 m	4 in
Tire (spec/type)	33×12D610 (foam-filled) 33×12-20 (solid)	
Maximum operating noise level	104 dB	
IP rating	IP54	
Maximum total vibration on the platform	2.5 m/s²	
Maximum whole body vibration value (WBV)	0.5 m/s²	
Power		
Drive × steer	4WD×2WS	
Engine (power/rpm/spec/brand/emission standard)	18.2 kW/3000 rpm/D1105-EF02–CN4/Kubota/EU stage V, China IV 43.2 kW/2400 rpm/V2403-CR-TIE4B-SBM-2/Kubota/EPA Tier 4 36 kW/2600 rpm/V2403BM-DI-CT04/Kubota/China IV	
Hydraulic tank capacity	112 L	24.6 gal (UK)/29.6 gal (US)
Hydraulic oil refueling volume	95 L	20.9 gal (UK)/25.1 gal (US)
Diesel tank capacity	55 L	12.1 gal (UK)/14.5 gal (US)
Hydraulic system pressure	28 MPa	4061 Psi
Battery (voltage, capacity)	12 V, 100 Ah (engine power=18.2kW)/200 Ah (engine power≥36kW)	
System voltage	12 VDC	
Control voltage	12 VDC	
Weight		
Gross weight	7700 kg (engine power=18.2 kW) 8070 kg (engine power≥36 kW)	16976 kg (engine power=18.2kW) 17791 lb (engine power≥36kW)
Ground Bearing Data		
Maximum tire load	4320 kg	9523 lb
Ground pressure	1512 kPa	219 Psi
Environment		
Maximum allowable lateral force (restricted/unrestricted)	400 N	90 lbf
Maximum allowable wind speed	12.5 m/s	28 mph
Maximum allowable altitude	1000 m	3280 ft
Allowable ambient temperature range (excluding LTV)	-20°C–40°C	-4°F–104°F
Allowable ambient temperature range (LTV)	-30°C–40°C (complete cold weather heating package)	-22°F–104°F (complete cold weather heating package)
Maximum allowable relative humidity	90 %	

Table 3-1 Specifications (continued)

Item	Metric	Imperial
Storage environment (excluding LTV)	Store at -20°C to 50°C (-4°F to 122°F) in a well-ventilated environment with 90% relative humidity (max.) (20°C [68°F]), protected from rain, sun, corrosive gas, flammable or explosive materials.	
Storage environment (LTV)	Store at -30°C to 50°C (-22°F to 122°F) in a well-ventilated environment with 90% relative humidity (max.) (20°C [68°F]), protected from rain, sun, corrosive gas, flammable or explosive materials.	

Note:

1. The platform height plus the operator height (assumed to be 2 m/6 ft 7 in) equals the working height.
2. The maximum horizontal reach plus the arm length of the operator (assumed to be 0.6 m [1 ft 11 in]) is the maximum horizontal working envelope.
3. The ground bearing information is approximate, without considering different options, thus it is applicable only when taking an adequate safety factor into account.
4. Different regions should use hydraulic oil, engine oil, coolant, fuel, lubricating oil, etc., that are suitable for the environmental temperature requirements.
5. In cold weather, auxiliary devices are needed to start the machine.
6. Rated platform load capacity refers to the maximum allowable load on the platform, including the weight of persons, materials, tools, accessories and other objects. The mass of one person shall be taken as 80 kg (176 lb).

3.2 SPECIFICATIONS OF MAJOR COMPONENTS

Engine

Table 3-2 Kubota Engine D1105-EF02-CN4

Type	Vertical, water-cooled, 4-stroke
Number of cylinders	3
Cylinder bore	78 mm (3.07 in)
Stroke	78.4 mm (3.09 in)
Total displacement	1.123 L 0.247 gal (Imperial) 0.297 gal (US)
Output power	18.2 kW@3000 rpm
Torque	71.5 Nm (52.8 ft-lb)@2200 rpm
Engine oil capacity	5.1 L 1.122 gal (Imperial) 1.347 gal (US)
Idle speed	1000 rpm
Maximum no-load speed	3220 rpm

Table 3-3 Kubota Engine V2403BM-DI-CT04

Type	Vertical, water-cooled, 4-stroke
Number of cylinders	4
Cylinder bore	87 mm (3.42 in)
Stroke	102.4 mm (4.03 in)
Total displacement	2.434 L 0.54 gal (Imperial) 0.64 gal (US)
Output power	36.5 kW@2600 rpm
Torque	158.6 Nm (117.1 ft-lb)@1600 rpm
Engine oil capacity	9.5 L 2.09 gal (Imperial) 2.51 gal (US)
Idle speed	1100 rpm
High speed	2820 rpm

Table 3-4 Kubota Engine V2403-CR-TIE4B-SBM-2

Type	Vertical, water-cooled, 4-stroke
Number of cylinders	4
Cylinder bore	87 mm (3.42 in)
Stroke	102.4 mm (4.03 in)

Table 3-4 Kubota Engine V2403-CR-TIE4B-SBM-2 (continued)

Total displacement	2.434 L 0.54 gal (Imperial) 0.64 gal (US)
Output power	43.2 kW@2400 rpm
Torque	198.5 Nm (146.5 ft-lb)@1500 rpm
Engine oil capacity	9.5 L 2.09 gal (Imperial) 2.51 gal (US)
Idle speed	1000 rpm
High speed	2400 rpm

Reducer

Table 3-5 Travel Reducer (PN.204020000026)

Model	IFT007T2B048A
Maximum output torque	7000 Nm (5163 ft-lb)
Speed ratio	47.6
Braking torque	250 Nm (184 ft-lb)
Brake Starting pressure	1.8 – 2 MPa (261 – 290 psi)

Table 3-6 Travel Reducer (PN.204020003102)

Model	OBB0748R615H1EJ-16
Maximum input speed	4500 rpm
Maximum output torque	7000 Nm (5163 ft-lb)
Speed ratio	47.7
With brake	No

Table 3-7 Slewing Reducer (PN.204020000015)

Model	SE17-102-25H-R-1037
Type	Worm gear reducer
Output torque (Max)	10000 Nm (7375 ft-lb)
Output RPM	< 2.5 rpm
Tip-over moment (Max)	135600 Nm (100005 ft-lb)

Table 3-7 Slewing Reducer (PN.204020000015) (continued)

Holding moment	72300 Nm (53321 ft-lb)
Reduction ratio	102:1

Table 3-8 Slewing Reducer (PN.204020000045)

Model	SE17-102-H-25R-WY
Type	Worm gear reducer
Output torque (Max)	10000 Nm (7375 ft-lb)
Output RPM	≤1 rpm (rated) ≤2.5 rpm (Max.)
Overturning moment (Max.)	135600 Nm (100005 ft-lb)
Holding moment	72300 Nm (53321 ft-lb)
Reduction ratio	102:1

Motor

Table 3-9 Travel Motor (PN.202020003094)

Type	Swash plate variable-displacement motor
Model	HM3V38NS2RNNF1130-TTX1
Maximum displacement	38 ml/r
Rated pressure	21 MPa (3045 psi)
Rated speed	3600 rpm (with maximum displacement)

Table 3-10 Cycloidal Hydraulic Motor (PN.202020000014)

Model	255130A6312BAAAA
Displacement	130cc/r

Table 3-11 Cycloidal Hydraulic Motor (PN.202020003090)

Model	HRD130A24S2ABAA04
Displacement	125 ml/r
Maximum continuous speed	481 rpm
Maximum continuous flow rate	60 L/min

**Table 3-11 Cycloidal Hydraulic Motor
(PN.202020003090) (continued)**

Maximum continuous differential pressure	20 MPa (2901 psi)
Maximum continuous torque	332 Nm (245 ft-lb)

**Table 3-12 Cycloidal Hydraulic Motor
(PN.202020003114)**

Model	GR125A2S1G1ACA
Displacement	125 ml/r
Maximum continuous speed	475 rpm
Maximum continuous flow rate	60 L/min
Maximum continuous differential pressure	20 MPa (2901 psi)
Maximum continuous torque	330 Nm (244 ft-lb)

Battery

**Table 3-13 Maintenance-free AGM Battery
(PN.203100003158)**

Rated voltage	12 V
Rated capacity	100 Ah
Low-temperature starting current	830 A @ -18°C (0°F)

**Table 3-14 Maintenance-free AGM Battery
(PN.203100003293)**

Rated voltage	12 V
Capacity	125 Ah
Cold starting current	950CCA

**Table 3-15 Maintenance-free AGM Battery
(PN.203100003337)**

Rated voltage	12.8 V
Rated capacity	100 Ah
Low-temperature starting current	825A@-18°C (0°F)

Hydraulic pump

**Table 3-16 Open-circuit Variable Pump
(PN.202010000048)**

Type	Plunger pump
Displacement	28 ml/r
Maximum speed	3000 rpm
Rated pressure	28 MPa (4060 psi)

**Table 3-17 Open-circuit Variable Pump
(PN.202010003140)**

Type	Plunger pump
Displacement	28 ml/r
Rated speed	3000 rpm
Rated pressure	25 MPa (3625 psi)

**Table 3-18 Closed-circuit Variable Pump
(PN.202010000045)**

Type	Plunger pump
Displacement	46 ml/r
Oil charging pump displacement	13.8 ml/r
Rated speed	3300 rpm
High-pressure pressure-relief valve setting pressure	32 MPa (4641 psi)
Pressure shut-off valve setting pressure	30 MPa (4351 psi)

**Table 3-19 Closed-circuit Variable Pump
(PN.202010000054)**

Type	Plunger pump
Displacement	45.9 ml/r
Oil charging pump displacement	13.9 ml/r

**Table 3-19 Closed-circuit Variable Pump
(PN.202010000054) (continued)**

Rated speed	3000 rpm
Rated pressure	28 MPa (4060 psi)

Power unit

Table 3-20 Auxiliary Power Unit (PN.202010000041)

Electric motor	
Power	2.2 kW
Voltage	DC 12V
Current	300 A
Pump	
Displacement	4.3 ml/r
Rated operating pressure	15 MPa (2176 psi)
Maximum operating pressure	25 MPa (3626 psi)
Speed	500 – 4000 rpm

**Table 3-21 Emergency Power Unit
(PN.202010003090)**

Electric motor	
Power	2.2 kW
Voltage	DC 12V
Current	300 A
Speed range	500 – 4000 rpm
Pump	
Displacement	4.2 ml/r
Rated operating pressure	16 MPa (2321 psi)
Maximum operating pressure	25 MPa (3626 psi)
Speed	600 – 4000 rpm

3.3 FUNCTION SPEED

Table 3-22

Item	Parameter
Raise main boom	30 – 40 s
Lower main boom	35 – 45 s
Raise articulating boom	40 – 55 s
Lower articulating boom	30 – 40 s
Turntable slewing (355°) – Main boom fully retracted	70 – 90 s
Turntable slewing (355°) – Main boom not fully retracted	100 – 120 s
Turntable slewing (360°) – Main boom fully retracted	75 – 95 s
Turntable slewing (360°) – Main boom not fully retracted	105 – 125 s
Extend the main boom	26 – 32 s
Retract the main boom	24 – 30 s
Rotate platform (180°)	18 – 22 s
Level platform upward	50 – 60 s
Level platform downward	40 – 50 s
Raise jib	30 – 38 s
Lower jib	25 – 32 s
Travel at high speed	21 – 27 s
Travel at operating speed	98 – 120 s
Braking distance	≤1.2 m (3.9 ft)

Note:

1. The function speed depends on the start and end point of the movement rather than the controls/ switches.
2. The travel speed test results will vary with tires of different specifications.
3. All speed tests should be conducted from the platform controller. Test results will differ if tested from the ground controller.
4. All tests should be conducted with the hydraulic oil temperature higher than 50 – 60 °C (122 – 140 °F). If the hydraulic oil temperature is too low, the test results will be affected.
5. Each item shall be tested twice, and the result of any single test must fall within the specified range to be considered functional.

Test requirements

Raise/lower main boom : For this test, the articulating boom must be fully lowered, the telescopic section of the boom must be fully retracted. Raise the main boom from the lowest to the highest position, and lower it again from the highest to the lowest position. Perform these maneuvers for two times.

Raise/lower articulating boom : Raise the articulating boom from the lowest to the highest position, and lower it again from the highest to the lowest position. Perform these maneuvers for two times.

Rotate turntable : Run the engine at low speed, position the boom in center position, rotate the turntable through one full cycle for two times.

Extend/retract main boom : With the main boom horizontally positioned, extend the main boom from the fully retracted to the fully extended position, and retract it from the fully extended to the fully retracted position again. Perform this maneuver for two times.

Rotate platform : With the platform horizontal, rotate the platform from the leftmost to the rightmost, and rotate the platform from the rightmost to the leftmost for two times.

Level the platform : Level the platform upward from the lowest to the highest position, and level the platform downward from the highest to the lowest position. Perform this maneuver for two times.

Raise/lower the jib : With the platform horizontal, raise the jib from the lowest to the highest position, and lower the jib again from the highest to the lowest position. Perform this maneuver for two times.

Travel in high-speed mode : The test shall be done on a level surface. With the machine in stowed position, switch to the high engine speed and high travel speed, and push the travel joystick to maximum travel distance to drive forward and reverse for 30m (98.4ft) separately for two times.

Travel at operating speed : The test shall be done on a level surface. With the machine in operating position, switch to high engine speed, and push the travel joystick to maximum travel distance to drive forward and reverse for 30m (98.4ft) separately for two times.

Braking distance : As described in the “travel in high-speed mode” test requirements, once the machine reaches the maximum travel speed, immediately release the joystick (starting timing) until the machine stops. Perform this maneuver for two times.

3.4 WEIGHT OF MAJOR COMPONENTS



WARNING

- **Never attempt to move heavy components without the assistance of mechanical equipment.**
- **Never place heavy components at an unstable position.**

Table 3-23

Component	Metric (kg)	Imperial (lb)
Chassis assembly	2553	5628
Turntable assembly	2916	6429
Boom assembly	831	1832
Base boom	179	395
Telescopic boom section	92	203
Jib assembly	148	326
Cable track system	26	57
Platform (medium size)	149	328
Platform (small size)	158	345
Platform (with 1.83 m [6 ft] swing gate)	159	350
Platform (1.45 m [4.6 ft])	145	320
Counterweight	1804	3977
Slewing mechanism	133	293
Telescopic cylinder	60	132

Table 3-23 (continued)

Component	Metric (kg)	Imperial (lb)
Upper Leveling Cylinder	22	49
Lower Leveling Cylinder	20	44
Main lift cylinder	74	163
Articulating boom lift cylinder	32	71
Jib cylinder	26	57
Swing cylinder	32	71
Travel motor	17	37
Travel reducer	50	110
Tire and Wheel Assembly	160	353
Slewing reducer	105	231
Engine V2403-CR-TIE4B	232	511
Engine D1105	93	205
Engine V2403BM-DI-CT04	184	406

Note: The weight of certain components will vary with the machine's option configuration.

3.5 PRESSURE SETTINGS

Table 3-24

Movement	Maximum pressure
Steering	11 MPa (1595 psi)
Upward/downward platform leveling	21 MPa (3046 psi)
Main boom lowering	24 MPa (3481 psi)
Articulating boom lowering	8.5 MPa (1233 psi)
Boom extending	14.5 MPa (2103 psi)
Turntable slewing	12 MPa (1740 psi)

3.6 OIL SPECIFICATIONS

NOTICE

- Please choose suitable oil according to the ambient temperature and local regulations; the use of unsuitable oil will damage the machine components.
- Oils of different grades or viscosities should not be mixed. When refilling oil, the oil being added must be of the same grade and viscosity as that of the oil currently in use in the machine.
- To fill with oil with a different grade or viscosity, the remaining oil in the circuit must be drained out completely.
- The oil recommendations in this manual are for general operating conditions. For special environments or special operating requirements please contact Sinoboom for special oil.

WARNING

- Before refilling oil, wait until the temperature of the machine drops to room temperature, otherwise it may cause splashes, burns or other personal injury.
- The use of inferior oils is strictly prohibited. Using inferior oil may damage the machine, and faults caused by this are not covered by Sinoboom's warranty.

Hydraulic Oil

Factory-filled hydraulic oil is usually based on the ambient temperature of the delivery place or as specified by customers. If the factory-filled hydraulic oil is not applicable for the machine operating environments, change to other hydraulic oil suitable for actual operating environment. The following table shows the recommended hydraulic oil grade for different ambient temperature ranges:

Table 3-25

Ambient temperature range	Hydraulic oil grade
> 40°C (104°F)	HM-68
0°C–40°C (32°F–104°F)	HM-46
-15°C–25°C (5°F–77°F)	HV-32
-22°C–25°C (-7.6°F–77°F)	L-HS32
< -22°C (-7.6 °F)	AE-VX

Gear Oil

This machine is filled with heavy-duty vehicle gear oil (GL-5). Choose the oil viscosity grade that suits your region's ambient temperature. The following table shows the recommended ambient temperature for different viscosity grades of gear oil:

Table 3-26

Viscosity grade	Recommended ambient temperature
75W-90	-35 – 40°C (-31 – 104°F)
80W-90	-25 – 40°C (-13 – 104°F)
85W-90	-12 – 50°C (10.4 – 122°F)

Note: Sinoboom recommends Mobil gear oil.

Fuel oil

WARNING

- The machine should be refueled in a well-ventilated place with no flames, sparks, and other hazards that may cause fire or explosion.
- Do not refuel the machine while the engine is running.

This machine uses diesel oil as the fuel, and only a small amount of diesel oil is left in the fuel tank when the machine leaves the factory. The user needs to fill diesel oil timely with appropriate grade according to the ambient temperature and emission regulations. The following table shows the recommended ambient temperature for different grades of diesel oil:

Table 3-27

Grade	Recommended ambient temperature
0#	0 – 40°C (32 – 104°F)
-35#	-30 – 25°C (-22 – 77°F)

NOTICE

- Please go to a certified gas station to purchase qualified fuel oil. It is recommended prepare an oil storage tank with fuel filter and store the fuel oil in the tank for more than two days to precipitate impurities and water before use.
- When using an engine equipped with an after-treatment system, please use low-sulfur fuel.

Engine Oil

Engine oil should be selected based on the engine type and the local ambient temperature. The table below shows the recommended engine oil for different types of engine:

Table 3-28

Engine type	Recommended service category*	Recommended viscosity grade**
China III engine	CH-4	5W-40/15W-40
Yanmar engines meeting CHN Stage III emission standards	CJ-4	5W-40/15W-40
China IV, Euro V and US Tier 4 engine	CJ-4/CK-4	5W-40/15W-40

* The letters "H", "J" and "K" represent engine oil service category, and the oil specifications become more severe as the letters climb the alphabet. Select engine oil according to the recommendations in the table above, at least not below the service category of oil recommended in the table.

**The number before the "W" indicates the oil's fluidity at low temperatures, and subtracting 35 from it gives the minimum ambient temperature for use. For example, the minimum ambient temperature for use of 15W oil is -20°C (-4°F). Choose the oil viscosity grade according to your region's lowest ambient temperature.

Antifreeze

Factory-filled antifreeze is based on engine brand:

Table 3-29

Engine brand	Antifreeze type
Deutz	-45°C antifreeze
Yanmar	-40°C antifreeze
Other brands (except Deutz, Yanmar)	-35°C antifreeze

The antifreeze types above could meet the requirements of areas with ambient temperature above -35°C (-31°F). If the machine is to be operated in environments with temperature below -35°C (-31°F), contact Sino-boom for appropriate antifreeze.

3.7 TORQUE SPECIFICATIONS

Special Torque Requirements

Please refer to the table below for special torque requirements:

Table 3-30 Special torque requirements

No.	Description	Torque value
1	Wheel nut	300 Nm (221 ft-lb)
2	Travel reducer bolt	300 Nm (221 ft-lb)
3	Rear axle tightening bolt (at the connection with chassis weldment)	300 Nm (221 ft-lb)
4	Slewing bearing fastening bolt (at the connection with chassis)	300 Nm (221 ft-lb)
5	Slewing bearing fastening bolt (at the connection with turntable)	300 Nm (221 ft-lb)
6	Counterweight fastening bolt	730 Nm (538 ft-lb)
7	Swing cylinder top bolt M10	70 Nm (52 ft-lb)
8	Swing cylinder bottom nut M22	630 Nm (465 ft-lb)
9	Cable fastening nut M8	9–11 Nm (6.6–8.1 ft-lb)
10	Cable fastening nut M10	18–23 Nm (13.2–17 ft-lb)

Hydraulic Fitting Torque

The hydraulic fittings with metric thread must be installed with the following torques.

Table 3-31 Hydraulic Fitting Torque – Metric

Thread size	Installed with aluminum	Installed with steel	
	ED, O-ring + Circlip	ED, O-ring + Circlip	O-ring seal
L (light-duty)			
M10×1	18 ± 1 Nm (13 ± 1 ft-lb)	20 ± 2 Nm (15 ± 2 ft-lb)	18 ± 1 Nm (13 ± 1 ft-lb)
M12 × 1.5	30 ± 2 Nm (22 ± 2 ft-lb)	35 ± 2 Nm (26 ± 2 ft-lb)	30 ± 2 Nm (22 ± 2 ft-lb)
M14 × 1.5	42 ± 3 Nm (31 ± 2 ft-lb)	48 ± 4 Nm (35 ± 3 ft-lb)	35 ± 2 Nm (26 ± 2 ft-lb)
M16 × 1.5	55 ± 4 Nm (41 ± 3 ft-lb)	60 ± 4 Nm (44 ± 3 ft-lb)	40 ± 3 Nm (30 ± 3 ft-lb)
M18 × 1.5	75 ± 5 Nm (55 ± 4 ft-lb)	75 ± 5 Nm (55 ± 4 ft-lb)	45 ± 3 Nm (33 ± 4 ft-lb)
M22 × 1.5	90 ± 6 Nm (66 ± 4 ft-lb)	130 ± 8 Nm (96 ± 6 ft-lb)	60 ± 4 Nm (44 ± 3 ft-lb)
M27 × 2	120 ± 8 Nm (89 ± 6 ft-lb)	185 ± 12 Nm (136 ± 9 ft-lb)	100 ± 7 Nm (74 ± 5 ft-lb)
M30 × 2	140 ± 8 Nm (103 ± 6 ft-lb)	245 ± 15 Nm (181 ± 11 ft-lb)	135 ± 8 Nm (100 ± 6 ft-lb)
M33 × 2	180 ± 10 Nm (133 ± 7 ft-lb)	320 ± 20 Nm (236 ± 15 ft-lb)	160 ± 10 Nm (118 ± 7 ft-lb)
M42 × 2	240 ± 15 Nm (177 ± 11 ft-lb)	450 ± 25 Nm (332 ± 18 ft-lb)	210 ± 13 Nm (155 ± 10 ft-lb)
M48 × 2	280 ± 20 Nm (207 ± 15 ft-lb)	540 ± 30 Nm (398 ± 22 ft-lb)	260 ± 15 Nm (192 ± 11 ft-lb)
S (heavy-duty)			
M12 × 1.5	33 ± 2 Nm (24 ± 2 ft-lb)	43 ± 3 Nm (32 ± 2 ft-lb)	35 ± 2 Nm (26 ± 2 ft-lb)
M14 × 1.5	42 ± 3 Nm (31 ± 2 ft-lb)	50 ± 4 Nm (37 ± 3 ft-lb)	45 ± 3 Nm (33 ± 2 ft-lb)
M16 × 1.5	55 ± 4 Nm (41 ± 3 ft-lb)	75 ± 5 Nm (55 ± 4 ft-lb)	55 ± 4 Nm (41 ± 3 ft-lb)
M18 × 1.5	75 ± 5 Nm (55 ± 4 ft-lb)	95 ± 6 Nm (70 ± 4 ft-lb)	70 ± 5 Nm (52 ± 4 ft-lb)
M22 × 1.5	90 ± 6 Nm (66 ± 4 ft-lb)	140 ± 8 Nm (103 ± 6 ft-lb)	100 ± 10 Nm (74 ± 7 ft-lb)
M27 × 2	120 ± 8 Nm (89 ± 6 ft-lb)	185 ± 12 Nm (136 ± 9 ft-lb)	160 ± 10 Nm (118 ± 7 ft-lb)
M30 × 2	140 ± 8 Nm (103 ± 6 ft-lb)	245 ± 15 Nm (181 ± 11 ft-lb)	210 ± 13 Nm (155 ± 10 ft-lb)
M33 × 2	180 ± 10 Nm (133 ± 7 ft-lb)	320 ± 20 Nm (236 ± 15 ft-lb)	260 ± 15 Nm (192 ± 11 ft-lb)
M42 × 2	240 ± 15 Nm (177 ± 11 ft-lb)	450 ± 25 Nm (332 ± 18 ft-lb)	330 ± 20 Nm (243 ± 15 ft-lb)
M48 × 2	280 ± 20 Nm (207 ± 15 ft-lb)	540 ± 30 Nm (398 ± 22 ft-lb)	420 ± 25 Nm (310 ± 18 ft-lb)

The hydraulic pipe fittings with British Standard Pipe (BSP) thread must be installed with the following torques.

Table 3-32 Hydraulic Fitting Torque – British Standard Pipe (BSP)

Thread size	Installed with aluminum	Installed with steel	
	ED, O-ring + Circlip	ED, O-ring + Circlip	O-ring seal
L (light-duty)			
G1/8A	20 ± 1 Nm (15 ± 1 ft-lb)	20 ± 1 Nm (15 ± 1 ft-lb)	-
G1/4A	35 ± 2 Nm (26 ± 2 ft-lb)	40 ± 2 Nm (30 ± 2 ft-lb)	-
G3/8A	50 ± 3 Nm (37 ± 2 ft-lb)	75 ± 5 Nm (55 ± 2 ft-lb)	-

Table 3-32 Hydraulic Fitting Torque – British Standard Pipe (BSP) (continued)

Thread size	Installed with aluminum	Installed with steel	
	ED, O-ring + Circlip	ED, O-ring + Circlip	O-ring seal
G1/2A	75 ± 5 Nm (55 ± 2 ft-lb)	95 ± 6 Nm (70 ± 4 ft-lb)	-
G3/4A	120 ± 8 Nm (89 ± 6 ft-lb)	185 ± 12 Nm (136 ± 9 ft-lb)	-
G1A	180 ± 10 Nm (133 ± 7 ft-lb)	320 ± 20 Nm (236 ± 15 ft-lb)	-
G1-1/4A	240 ± 15 Nm (177 ± 11 ft-lb)	450 ± 25 Nm (332 ± 18 ft-lb)	-
G1-1/2A	280 ± 20 Nm (207 ± 15 ft-lb)	540 ± 30 Nm (398 ± 22 ft-lb)	-
S (heavy-duty)			
G1/4A	40 ± 3 Nm (30 ± 2 ft-lb)	43 ± 3 Nm (32 ± 2 ft-lb)	-
G3/8A	55 ± 3 Nm (41 ± 2 ft-lb)	85 ± 5 Nm (63 ± 4 ft-lb)	-
G1/2A	80 ± 5 Nm (59 ± 4 ft-lb)	120 ± 8 Nm (89 ± 6 ft-lb)	-
G3/4A	120 ± 8 Nm (89 ± 6 ft-lb)	185 ± 12 Nm (136 ± 9 ft-lb)	-
G1A	180 ± 10 Nm (133 ± 7 ft-lb)	320 ± 20 Nm (236 ± 15 ft-lb)	-
G1-1/4A	240 ± 15 Nm (177 ± 11 ft-lb)	450 ± 25 Nm (332 ± 18 ft-lb)	-
G1-1/2A	280 ± 20 Nm (207 ± 15 ft-lb)	540 ± 30 Nm (398 ± 22 ft-lb)	-

The hydraulic pipe fittings with Unified Thread Standard (UNC/UNF) thread must be installed with the following torques.

Table 3-33 Hydraulic Fitting Torque – Unified Thread Standard (UNC/UNF)

Thread size	Installed with aluminum	Installed with steel
	O-ring seal	O-ring seal
L (light-duty)		
7/16-20	21 ± 2 Nm (15 ± 2 ft-lb)	21 ± 2 Nm (15 ± 2 ft-lb)
9/16-18	34 ± 2 Nm (25 ± 2 ft-lb)	35 ± 2 Nm (26 ± 2 ft-lb)
11/16-12	40 ± 3 Nm (30 ± 2 ft-lb)	50 ± 4 Nm (37 ± 3 ft-lb)
3/4-16	50 ± 3 Nm (37 ± 2 ft-lb)	65 ± 4 Nm (48 ± 3 ft-lb)
7/8-14	75 ± 5 Nm (55 ± 4 ft-lb)	110 ± 8 Nm (81 ± 6 ft-lb)
1-1/16-12	110 ± 8 Nm (81 ± 6 ft-lb)	140 ± 10 Nm (103 ± 7 ft-lb)
1-5/16-12	160 ± 10 Nm (118 ± 7 ft-lb)	210 ± 15 Nm (155 ± 11 ft-lb)
S (heavy-duty)		
7/16-20	21 ± 2 Nm (15 ± 2 ft-lb)	23 ± 2 Nm (17 ± 2 ft-lb)
9/16-18	34 ± 2 Nm (25 ± 2 ft-lb)	40 ± 3 Nm (30 ± 2 ft-lb)
11/16-12	40 ± 3 Nm (30 ± 2 ft-lb)	65 ± 4 Nm (48 ± 3 ft-lb)
3/4-16	50 ± 3 Nm (37 ± 2 ft-lb)	80 ± 6 Nm (59 ± 4 ft-lb)
7/8-14	75 ± 5 Nm (55 ± 4 ft-lb)	125 ± 10 Nm (92 ± 7 ft-lb)

Table 3-33 Hydraulic Fitting Torque – Unified Thread Standard (UNC/UNF) (continued)

Thread size	Installed with aluminum	Installed with steel
	O-ring seal	O-ring seal
1-1/16-12	110 ± 8 Nm (81 ± 6 ft-lb)	185 ± 15 Nm (136 ± 11 ft-lb)
1-5/16-12	160 ± 10 Nm (118 ± 7 ft-lb)	280 ± 20 Nm (207 ± 15 ft-lb)

Fastener Torque Specifications

Torque metric bolts to the values specified in the table below unless special torque requirements are stated in this manual or other instructions.

Table 3-34 Fastener torque specifications—metric

Nominal diameter (mm)	Pitch (mm)	Class 8.8	Class 10.9	Class 12.9
5	0.8	7 Nm (5 ft-lb)	9 Nm (7 ft-lb)	10 Nm (7 ft-lb)
6	1	12 Nm (9 ft-lb)	15 Nm (11 ft-lb)	18 Nm (13 ft-lb)
8	1.25	30 Nm (22 ft-lb)	35 Nm (26 ft-lb)	42 Nm (31 ft-lb)
	1	30 Nm (22 ft-lb)	37 Nm (27 ft-lb)	45 Nm (33 ft-lb)
10	1.5	55 Nm (41 ft-lb)	75 Nm (55 ft-lb)	85 Nm (63 ft-lb)
	1.25	56 Nm (41 ft-lb)	77 Nm (57 ft-lb)	87 Nm (64 ft-lb)
	1	60 Nm (44 ft-lb)	80 Nm (59 ft-lb)	92 Nm (68 ft-lb)
12	1.75	95 Nm (70 ft-lb)	125 Nm (92 ft-lb)	150 Nm (111 ft-lb)
	1.5	100 Nm (74 ft-lb)	130 Nm (96 ft-lb)	155 Nm (114 ft-lb)
	1.25	105 Nm (77 ft-lb)	135 Nm (100 ft-lb)	160 Nm (118 ft-lb)
14	2	150 Nm (110 ft-lb)	200 Nm (148 ft-lb)	230 Nm (170 ft-lb)
	1.5	165 Nm (122 ft-lb)	210 Nm (155 ft-lb)	250 Nm (184 ft-lb)
16	2	230 Nm (170 ft-lb)	300 Nm (221 ft-lb)	360 Nm (266 ft-lb)
	1.5	250 Nm (184 ft-lb)	320 Nm (236 ft-lb)	380 Nm (280 ft-lb)
18	2.5	320 Nm (236 ft-lb)	420 Nm (310 ft-lb)	500 Nm (369 ft-lb)
	1.5	360 Nm (266 ft-lb)	470 Nm (345 ft-lb)	550 Nm (406 ft-lb)
20	2.5	450 Nm (332 ft-lb)	600 Nm (443 ft-lb)	700 Nm (516 ft-lb)
	1.5	500 Nm (369 ft-lb)	650 Nm (479 ft-lb)	770 Nm (568 ft-lb)
22	2.5	600 Nm (443 ft-lb)	800 Nm (590 ft-lb)	980 Nm (723 ft-lb)
	2	650 Nm (479 ft-lb)	850 Nm (627 ft-lb)	1050 Nm (774 ft-lb)
24	3	750 Nm (553 ft-lb)	1050 Nm (774 ft-lb)	1250 Nm (923 ft-lb)
	2	800 Nm (590 ft-lb)	1100 Nm (811 ft-lb)	1300 Nm (959 ft-lb)
27	3	1150 Nm (848 ft-lb)	1500 Nm (1106 ft-lb)	1800 Nm (1327 ft-lb)
30	3.5	1500 Nm (1106 ft-lb)	2000 Nm (1475 ft-lb)	2400 Nm (1770 ft-lb)

Unless special torque requirements are specified in this manual or other instructions, torque Unified Thread Standard bolts (label: UNC) to the values specified in the table below.

Table 3-35 Fastener torque specifications—Unified Thread Standard (UNC)

Nominal diameter (in)	Opposite nut size (s)	Class 5	Class 8
1/4-20	7/16"	10 Nm (7 ft-lb)	14 Nm (10 ft-lb)
5/16-18	1/2"	21 Nm (15 ft-lb)	29 Nm (21 ft-lb)
3/8-16	9/16"	37 Nm (27 ft-lb)	51 Nm (38 ft-lb)
7/16-14	5/8"	60 Nm (44 ft-lb)	82 Nm (60 ft-lb)
1/2-13	3/4"	90 Nm (66 ft-lb)	130 Nm (96 ft-lb)
9/16-12	13/16"	130 Nm (96 ft-lb)	180 Nm (133 ft-lb)
5/8-11	15/16"	178 Nm (131 ft-lb)	250 Nm (184 ft-lb)
3/4-10	1-1/8"	315 Nm (232 ft-lb)	445 Nm (328 ft-lb)
7/8-9	-	509 Nm (375 ft-lb)	715 Nm (527 ft-lb)

Unless special torque requirements are specified in this manual or other instructions, torque Unified Thread Standard bolts (label: UNF) to the values listed in the table below.

Table 3-36 Fastener torque specification—Unified Thread Standard bolts (UNF)

Nominal diameter (in)	Opposite nut size (s)	Class 5	Class 8
1/4-28	7/16"	11.5 Nm (8 ft-lb)	16 Nm (11 ft-lb)
5/16-24	1/2"	23 Nm (17 ft-lb)	32 Nm (24 ft-lb)
3/8-24	9/16"	41 Nm (30 ft-lb)	58 Nm (43 ft-lb)
7/16-20	5/8"	65 Nm (48 ft-lb)	92 Nm (68 ft-lb)
1/2-20	3/4"	100 Nm (74 ft-lb)	145 Nm (107 ft-lb)
9/16-18	13/16"	145 Nm (107 ft-lb)	200 Nm (148 ft-lb)
5/8-18	15/16"	200 Nm (148 ft-lb)	280 Nm (207 ft-lb)
3/4-16	1-1/8"	350 Nm (258 ft-lb)	495 Nm (365 ft-lb)
7/8-14	-	560 Nm (413 ft-lb)	780 Nm (575 ft-lb)

Hydraulic Hose Torque

The hydraulic hoses must be installed with the following torques.

Table 3-37 Hydraulic Hose Torque

Metric thread	L (light-duty)	S (heavy-duty)
M12 × 1.5	19 ± 1 Nm (14 ± 1 ft-lb)	
M14 × 1.5	26 ± 2 Nm (19 ± 2 ft-lb)	
M16 × 1.5	40 ± 3 Nm (30 ± 2 ft-lb)	
M18 × 1.5	50 ± 4 Nm (37 ± 3 ft-lb)	
M20 × 1.5	-	60 ± 4 Nm (44 ± 3 ft-lb)

Table 3-37 Hydraulic Hose Torque (continued)

Metric thread	L (light-duty)	S (heavy-duty)
M22 × 1.5	70 ± 5 Nm (52 ± 4 ft-lb)	-
M24 × 1.5	-	85 ± 6 Nm (63 ± 4 ft-lb)
M26 × 1.5	90 ± 6 Nm (66 ± 4 ft-lb)	-
M30 × 2	120 ± 8 Nm (89 ± 6 ft-lb)	140 ± 10 Nm (103 ± 7 ft-lb)
M36 × 2	150 ± 12 Nm (111 ± 9 ft-lb)	180 ± 12 Nm (133 ± 9 ft-lb)
M42 × 2	-	260 ± 16 Nm (192 ± 12 ft-lb)
M45 × 2	240 ± 15 Nm (177 ± 11 ft-lb)	-
M52 × 2	250 ± 16 Nm (184 ± 12 ft-lb)	280 ± 18 Nm (207 ± 13 ft-lb)

This Page Intentionally Left Blank

4 MAINTENANCE INSTRUCTIONS

4.1 INSPECTION AND PREVENTIVE MAINTENANCE SCHEDULE

This section provides safety and other vital information for machine operators. To extend the service life of the machine and ensure safe operation, all necessary inspections and maintenance work must be completed before the machine is put into service.

It is crucial to develop and adhere to a comprehensive inspection and preventive maintenance program. This manual outlines the regular inspections and maintenance procedures recommended by Hunan Sinoboom Intelligent Equipment Co., Ltd. Consult your national, regional or local regulations for aerial work platforms. The frequency of the inspection and maintenance must be increased as required by environmental conditions, requirements and frequency of usage.

Pre-delivery Inspection

The pre-delivery inspection shall be performed by qualified Sinoboom technicians.

A pre-delivery inspection shall be performed before each sale, lease or rental delivery.

Refer to the **Inspection and Preventive Maintenance Schedule** for items requiring a pre-delivery inspection. Refer to the corresponding section of this manual to perform inspection and maintenance procedures.

Pre-operation Inspection

A pre-operation inspection must be performed before each start or restart of work, change of operator, and after each maintenance operation. Refer to the pre-operation inspection section of the Operation Manual for detailed information. The Operation Manual must be entirely read and understood before performing the pre-operation inspection.

Regular Inspections

Regular inspections shall be performed by qualified Sinoboom technicians.

Regular inspections must be performed after the machine has been in service for 3 months or 250 hours, whichever comes first, or if it has been out of service for more than 3 months. The frequency of the inspection and maintenance must be increased as required by environmental conditions, requirements and frequency of usage.

The items included in the regular inspections are identical to the pre-delivery inspection.

Annual Inspection

An annual machine inspection must be performed once a year and no later than 13 months from the date of the previous annual inspection. Hunan Sinoboom Intelligent Equipment Co., Ltd. recommends this task be performed by a factory-trained service technician, a person recognized by Sinoboom as one who, by qualification, certificate and training, has successfully demonstrated the ability and proficiency to service, repair and maintain the Sinoboom model in question.

Refer to the **Inspection and Preventive Maintenance Schedule** for items requiring annual inspection, and refer to the corresponding section of this manual to perform inspection and maintenance procedures.

Preventive Maintenance

Preventive maintenance procedures shall be performed by qualified Sinoboom technicians. The frequency of the inspection and maintenance must be increased as required by environmental conditions, requirements and frequency of usage.

Refer to the **Inspection and Preventive Maintenance Schedule** for items requiring a preventive maintenance. Refer to the corresponding section of this manual to perform inspection and maintenance procedures.

Responsible Persons and Qualifications for Performing Inspection and Maintenance

Table 4-1

Inspection Type	Inspection Frequency	Primary Responsible Persons	Service Qualifications
Pre-operation Inspection	Before starting/restarting work, change of user, after each maintenance activity.	User or operator	Properly trained user or operator
Pre-delivery Inspection	Before each sale, lease or rental delivery	Owner, dealer or user	Qualified Sinoboom technician
Regular Inspections	In service for 3 months or 250 hours (whichever comes first) or out of service for more than 3 months	Owner, dealer or user	Qualified Sinoboom technician
Annual Inspection	Once a year and no later than 13 months from the date of the previous annual inspection	Owner, dealer or user	Factory-trained service technician
Preventive Maintenance	At intervals specified in the <i>Inspection and Preventive Maintenance Schedule</i>	Owner, dealer or user	Qualified Sinoboom technician

Inspection and Preventive Maintenance Schedule

Perform inspection and preventive maintenance for the items in the table below at the specified intervals. Maintenance and inspection intervals are calculated based on the months of service or the “accumulated operating hours” displayed on the turntable controls (whichever comes first).

Inspection intervals are based on the use of the machine under normal operating conditions. The intervals should be shortened accordingly when operating in harsh environmental conditions.

Table 4-2 Inspection and Preventive Maintenance Schedule

Item	Interval		
	Before each delivery ¹ or quarterly ²	Semiannually ³	Annually ⁴
Chassis assembly			
Chassis	2	2	2
Tires	1, 2	1, 2	1, 2
Wheel nuts	1 ⁵⁰	1 ⁵⁰	1 ⁵⁰
Drive motor	1, 6	1, 6	1, 6
Travel reducer	1, 2, 6	1, 2, 6	1, 2, 6, 11
Steering components	1, 2	1, 2	1, 2
Axles/extending axles (if equipped)	1, 2, 3	1, 2, 3	1, 2, 3
Bearings	1, 2, 5, 12	1, 2, 5, 12	1, 2, 5, 12
Turntable assembly			

Table 4-2 Inspection and Preventive Maintenance Schedule (continued)

Item	Interval		
	Before each delivery ¹ or quarterly ²	Semiannually ³	Annually ⁴
Turntable	2	2	2
Slewing bearing or slewing reducer	1 ⁵⁰ , 2, 6, 12	1 ⁵⁰ , 2, 6, 12	1 ⁵⁰ , 2, 6, 8, 12
Slewing reducer (if equipped)	1, 2, 6	1, 2, 6	1, 2, 6, 11
Central rotary joint	6	6	6
Slewing motor	1, 6	1, 6	1, 6
Turntable slewing pin (if equipped)	1, 2, 3	1, 2, 3	1, 2, 3
Turntable cover assembly	1, 2, 3	1, 2, 3	1, 2, 3
Hydraulic generator (if equipped)	1, 3, 6, 10 ^{NO.1}	1, 3, 6, 10 ^{NO.1}	1, 3, 6, 10 ^{NO.1}
Boom assembly			
Boom weldment	1, 2	1, 2	1, 2
Hose, wire rope bracket	1, 2	1, 2	1, 2
Pulley and wear pad assembly	1, 2	1, 2	1, 2
Bearings	1, 2, 5, 12	1, 2, 5, 12	1, 2, 5, 12
Cover or protective guard (if equipped)	1, 2	1, 2	1, 2
Cable track or wire rope system (if equipped)	1, 2, 3, 5	1, 2, 3, 5	1, 2, 3, 5
Pivot pins and retaining rings	1, 2	1, 2	1, 2
Platform assembly			
Guardrails	2	2	2
Access gate	1, 2, 3	1, 2, 3	1, 2, 3
Floor	2	2	2
Swing cylinder	1, 2, 5, 6	1, 2, 5, 6	1, 2, 5, 6
Safety belt anchorage point	1, 2, 7	1, 2, 7	1, 2, 7
Power system			
Refer to the machine's maintenance manual for inspection and preventive maintenance schedule, and the engine manual provided with the machine for detailed instructions.			
Hydraulic system			
Hydraulic pump	1, 2, 6	1, 2, 6	1, 2, 6
Hydraulic cylinder	1, 2, 5, 6	1, 2, 5, 6	1, 2, 5, 6
Bleeding the oscillating cylinder (if equipped)	10 ^{NO.1}	10 ^{NO.1}	10 ^{NO.1}
Hydraulic valves	1, 2, 5, 6	1, 2, 5, 6	1, 2, 5, 6
Counterbalance valve, check of the locking function (if equipped)	10 ^{NO.1}	10 ^{NO.1}	10 ^{NO.1}

Table 4-2 Inspection and Preventive Maintenance Schedule (continued)

Item	Interval		
	Before each delivery ¹ or quarterly ²	Semiannually ³	Annually ⁴
Hydraulic hoses, pipelines and fittings	1, 2, 6	1, 2, 6	1, 2, 6
Hydraulic tank	1, 2, 3, 5, 6	1, 2, 3, 5, 6	1, 2, 3, 5, 6
Hydraulic tank suction filter	1, 5, 6	1, 5, 6	1, 5, 6, 11
Hydraulic tank return filter	1, 5, 6, 11 ⁵⁰	1, 5, 6, 11 ⁵⁰	1, 5, 6, 11 ⁵⁰
Hydraulic tank air filter	1, 5, 6	1, 5, 6, 11	1, 5, 6, 11
Hydraulic oil high-pressure filter	1, 5, 6, 11	1, 5, 6, 11	1, 5, 6, 11
Hydraulic oil	5, 6	5, 6	5, 6, 11
Electrical system			
Electrical harness, connectors	1, 2	1, 2	1, 2
Battery	1, 2, 6, 9, 12	1, 2, 6, 9, 12	1, 2, 6, 9, 12
Electrolyte	6	6	6
Charging function	3	3	3
Instruments, gauges, switches, lamps, horn, contactor, relay	1, 3	1, 3	1, 3
Functions and controls			
Platform controller	1, 3, 4, 7, 10	1, 3, 4, 7, 10	1, 3, 4, 7, 10
Turntable controller	1, 3, 4, 7, 10	1, 3, 4, 7, 10	1, 3, 4, 7, 10
Function control lock, secondary guarding device and brake	1, 3, 10	1, 3, 10	1, 3, 10
Foot switch	1, 3, 10	1, 3, 10	1, 3, 10
Emergency stop switch (ground and platform)	1, 3, 10	1, 3, 10	1, 3, 10
Limit switches and power-off switch	1, 3, 10	1, 3, 10	1, 3, 10
Pothole protection device (if equipped)	1, 3, 10	1, 3, 10	1, 3, 10
Overload limit system	1, 3, 10	1, 3, 10	1, 3, 10
Tilt alarm	1, 3, 10	1, 3, 10	1, 3, 10
Drive brake	1, 3, 10	1, 3, 10	1, 3, 10
Slewing brake	1, 3, 10	1, 3, 10	1, 3, 10
Others			
Operation Manual in the manuals compartment	10	10	10
All decals/labels complete, clear and secure	10	10	10

Table 4-2 Inspection and Preventive Maintenance Schedule (continued)

Item	Interval		
	Before each delivery ¹ or quarterly ²	Semiannually ³	Annually ⁴
Annual inspection date of the machine	/	/	10
No unapproved changes or additions	10	10	10
All safety publications taken into account	10	10	10
General structural components and weldments	2	2	2
All fasteners, pins, protective guards and covers	1, 2	1, 2	1, 2
Greasing and lubricating according to specifications	10	10	10
Functional test of all systems	10	10	10
Paint and appearance	5	5	5
Inspection date stamped on the chassis	/	/	10
Notify Sinoboom of machine ownership (change)	/	/	10

Table 4-2 Inspection and Preventive Maintenance Schedule (continued)

Item	Interval		
	Before each delivery ¹ or quarterly ²	Semiannually ³	Annually ⁴
Note: ¹ Before each sale, lease or shipment delivery; ² In service for 3 months or 250 hours; or out of service for more than 3 months; ³ In service for 6 months or 500 hours; ⁴ Once a year and no later than 13 months from the date of the previous annual machine inspection; ⁵⁰ The first inspection shall be performed once the machine reaches 50 hours in service for the first time. This occurs only once in the service life of the machine. ²⁵⁰ The first inspection shall be performed once the machine reaches 250 hours in service for the first time. This occurs only once in the service life of the machine. NO.1 Before the machine is put into service for the first time, or before the first use after the oscillating cylinder or counterbalance valve has been replaced.			
Inspection activity (numerical codes): 1. Check for correct installation (accurate position, firmly installed, tightened to the specified torque) 2. Check for damage (cracks, cracked welds, deformation, wear, corrosion, excessive wear, gouges, abrasions and exposed threads) 3. Check for normal function 4. Return to neutral position or “off” position normally (the self-reset switch can return to neutral position or “off” position after released) 5. Clean and free of foreign objects 6. Check for correct level, sealing and leaks 7. Labels complete, clear and secure 8. Check for appropriate tolerances 9. Fully charged 10. Verify/perform 11. Replace the oil or filter element 12. Correctly lubricated			

4.2 GENERAL MAINTENANCE INSTRUCTIONS

Safety and Operating Standards

The following precautions should be taken before carrying out adjustment and repair work on the machine:

1. Disconnect the power source to prevent inadvertent start up of the machine and tag the machine accordingly.
2. All controls should be turned off to avoid accidental actuation of the control system.

3. If possible, lower the work platform to the lowest position. If this is not possible, secure the work platform to prevent it from falling.

4. Before loosening or removing hydraulic components, the oil pressure in the hydraulic lines should be released.

Some maintenance work may require the machine to be in a state other than the ones described in 1–4 above. Such work should be carried out in accordance with the specific safety measures listed in the Operation Manual and this manual.

Safety of personnel always has the highest priority, also when performing maintenance work on the machine. Always take the weight of components into consideration, and never attempt to move heavy parts without the assistance of mechanical equipment. Never place heavy objects in an unstable position. Before lifting any machine components, ensure the parts are sufficiently supported.

Cleaning

1. To extend the service life of the machine it is crucial to prevent dirt or impurities from entering critical components of the machine. A number of protective measures have been taken to prevent such ingress. Protective plates, covers, seals, and filters are installed to keep intake air, fuel and oil clean. Such protective devices must be serviced/maintained at prescribed intervals to ensure their proper function.
2. When air, fuel, or oil lines are disconnected, their adjacent areas, openings and fittings should be cleaned. Openings should be covered immediately to prevent foreign objects from entering.
3. During repair or maintenance, all components should be cleaned and inspected, make sure all pipes/tubes and openings are unobstructed. Cover all parts to keep them clean. All parts must be clean before installation. New parts should be stored in containers before use.

Components Disassembly and Installation

1. A safe and appropriate plan for the installation of machine components should be developed based on this manual, taking the site conditions into account.
2. Personnel carrying out disassembly and installation work must be appropriately qualified and must be able to use safety equipment correctly.
3. Before carrying out installation work, qualified personnel should inspect the ground, concealed foundations and anchors, or review reliable documentation verifying that the manufacturer's requirements are met.
4. Wind speed at the installation site must not exceed 8.3 m/s (18.6 mph).
5. Before installation, check the site conditions such as power supply and ground conditions to make sure the installation requirements are met.
6. All components should be inspected prior to installation to verify they are in good condition.
7. High-strength bolts should be tightened in strict accordance with the requirements of this manual.
8. Requirements for the acceptance of onsite machine installation work:

- 1) Relevant inspections and functional tests should be carried out to confirm that the components have been installed correctly, that specific functional requirements are met and that all safety devices are operating properly.
- 2) Static and dynamic load tests should follow and comply with the relevant standards.
- 3) Before putting the machine into service, a qualified person shall issue a handover certificate confirming the integrity of the machine. All test/inspection results should be recorded and an inspection report should be prepared (including the inspector's name, title, company, and inspection date).
9. Disassembly work should meet the same safety requirements as installation work.
10. If lifting tools are required to dis-assemble the machine, use the correct lifting points, lifting equipment and additional tools. Only use tested and certified tools and equipment.
11. If the lifting gear strands have to be attached at an angle of less than 90° when lifting a component exercise special caution since the eye bolt or similar bracket cannot provide adequate lateral support.
12. If components are difficult to be removed check that all nuts, bolts, cables, brackets, wiring, etc. have been removed, and that adjacent components are not obstructing the removal.

Components Disassembly and Reassembly

When disassembling or reassembling components, follow the steps one by one. If assembly/disassembly of a certain component has not been completed, do not proceed with another component. Always check the disassembly/assembly operation to make sure nothing is missing. No adjustments (unless recommended) may be made without prior approval.

Storage

Please follow the recommendations below to ensure best performance of the cylinders and to avoid corrosion during long-term storage (indoor/outdoor):

- The machine should be stored in stowed position with the wheels aligned.
- Fully raise and lower the platform, and steer left and right to the full steering angle twice a week in order to keep the respective cylinder components lubricated.

Disposal of Structural Components

- Major structural components that no longer meet the requirements for safe use due to corrosion, wear or other reasons should be repaired, reinforced, or replaced and discarded.
- Load-bearing structural components that are permanently deformed and cannot be repaired must be replaced and discarded.
- Load-bearing structural components that have lost overall stability and cannot be repaired must be replaced and discarded.
- Cracks in structural components or welds should be analyzed to understand the cause. The components/welds should be reinforced as appropriate considering the load and the characteristics of the cracks. Continued use is only allowed if the structural component/weld meet the original design requirements; otherwise they should be discarded.

Pressure-fit and Mating Parts

When assembling pressure-fit and mating parts, use anti-seize or molybdenum disulfide-based compounds to lubricate the mating surface.

Bearings

1. Cover bearings that have been removed from the machine to keep the bearing clean from dust and abrasives. Use non-flammable cleaning solvent to clean bearings and allow them to dry in a shaded area. Compressed air may be used but the bearings should not be rotated.
2. If the races and balls (or rollers) display pits, notches or burn marks, the bearing should be replaced and discarded.
3. If the bearing is still serviceable, apply a coat of oil and wrap it in clean paper (or wax paper). Do not unwrap reusable bearings or new bearings until they are ready for installation.
4. Lubricate new or serviceable bearings before installation. When pressing the bearing into the retainer or bore, pressure should be applied only to the outer race. If the bearing is to be installed on a shaft, pressure should be applied only to the inner race.

Gaskets

Check if the opening in the gasket is aligned with the opening in the component that is to be sealed.

Bolt Use and Torque Requirements

NOTICE

Self-locking fasteners such as nylon inserts and thread locking nuts must not be reinstalled after removal.

1. Always use a new self-locking fastener when installing locking fasteners. Use bolts of appropriate lengths. If a bolt is too long it may be pressed against the adjacent part before being properly tightened. If the bolt is too short it is likely to not have enough thread area to properly secure the parts. Replacement bolts must be of the same or equivalent size as the original bolt.
2. In addition to the specific torque requirements provided in this manual, standard torque values should be used on heat-treated bolts, studs, and steel nuts in accordance with recommended factory practice (see **Fastener Torque Specifications**).

Hydraulic Pipeline and Electrical Wiring

When unplugging or removing hydraulic hoses and electrical wires from the machine, the hydraulic hoses and electrical wires and their sockets should be clearly marked so that their reinstallation will be correct.

Hydraulic Hose and Fitting Tightening Procedures

The following requirements apply when installing hydraulic hoses and fittings:

1. Before installation, check the seals on hoses and fittings, and replace the seal or even the hose assembly and the fitting if the seal is found to be damaged or oil spills out of the seal. Clean hoses and fittings before installation.
2. If a seal is to be replaced, lubricate the replacement seal before installation.
3. To install a hose nut and fitting, align the fitting, hose and hose nut, and tighten the nut with the torque specified in **Hydraulic Hose Torque** and **Hydraulic Fitting Torque** . If the tightening torque of a fitting or hose exceeds the specified value its seal cannot be reused.
4. After installation, test all machine functions and check to ensure the hose, fitting and related components are free from leaks.

Application of Insulating Silicone Grease to Electrical Connections

Insulating silicone grease should be applied to all electrical connections for the purpose of:

- Avoiding oxidization of the connecting points between the male pin and female pin.
- Avoiding electrical failure due to low conductivity between the pins in humid environments.

The following instructions should be observed when applying insulating silicone grease to the electrical connections. This procedure applies to all plug connections installed outside the distribution cabinet. The silicone grease is not suitable for the connectors with a sealed outer surface.

1. Prior to the machine assembling, apply silicone grease around the male and female pins of the connectors to prevent oxidization. A grease syringe may be used for this procedure.

NOTICE

Oxidization that is allowed to progress over a certain period will increase the resistance of the connectors and eventually lead to electrical failure.

2. Silicone grease should be applied to each electrical cord that is exposed outside the connectors to prevent short circuit. Silicon grease should also be applied to the connecting points of male and female connectors. Sealing measures should also be applied to other connectors that may be subject to water ingress, such as around strain relief clamps.

NOTICE

Due to the higher conductivity of cleaning solvents compared to water, situations of water ingress are especially likely to occur when cleaning the machine with a pressure washing method.

3. The connectors between battery and charger should be sealed with silicone grease at each contact point.

NOTICE

Solidifying sealants can also be used to prevent short circuits and help maintain cleanliness, but they will make it more difficult to remove the pins later on.

Lubrication

The relevant components should be lubricated at defined intervals using the lubricant of the quantity, type and grade as recommended in this manual. If the recommended lubricant is not available, contact your local supplier who can help you obtaining the recommended lubricant or a satisfactory alternative.

Hydraulic System

1. Contaminants are the primary hazard for the hydraulic system. Contaminants can enter the hydraulic system in various ways, such as improper use of hydraulic oil, moisture, grease, metal chips, sealing elements and sand entering the system during maintenance, or cavitation of the hydraulic pump due to insufficient system preheating or leakage in the pump supply (suction) lines.
2. Oil that appears clouded indicates a high moisture or air content, which contributes to organic growth, leading to oxidation or corrosion. In such case, drain the oil from the hydraulic system, and fill with clean hydraulic oil after rinsing the hydraulic system.
3. Check the filter frequently for the presence of metal particles. Because hydraulic components are designed and manufactured to very tight tolerances, even a small amount of contaminants entering the system can cause wear or damage to hydraulic components and lead to malfunctions. Hydraulic system filters should be inspected, cleaned or replaced as needed at required intervals.
4. Keep the hydraulic system clean. After disconnecting the hydraulic lines, seal the tube ports immediately to prevent contaminants from entering the hydraulic system. If signs of metal or rubber particles are found in the hydraulic system, the hydraulic oil should be drained immediately and the entire system flushed.

NOTICE

Metal particles may appear in the hydraulic oil or filter of a new machine due to wear of new hydraulic components.

5. Disassemble or reassemble parts on clean workbenches. Clean all metal parts using a non-flammable cleaning solvent. Lubricate parts as needed to facilitate assembly.
6. Hydraulic oils of different brands or types should not be mixed. Different oils may contain different essential additives or may have different viscosity. It is recommended to use high-quality mineral oil with a viscosity suitable for the temperature of the environment the machine is operating in.
7. Unless otherwise expressly stated in this manual, the filter element must be replaced at least once a year or every 1000 working hours; the replacement interval should be shorter in harsh working conditions. If hydraulic oil needs to be changed, use hydraulic oil meeting or exceeding the type and specification requirements in this manual. If hydraulic oil of the same type as that supplied with the machine is not available, consult your local supplier to help you select the appropriate hydraulic oil. Do not mix petroleum-based oils with synthetic oils.

8. Take all precautions to keep the hydraulic oil clean. If hydraulic oil must be poured from the original container into another container, ensure that the second container is kept clean and does not contain any contaminants. Make sure to clean the filter screen, and replace the filter element when changing the hydraulic oil.
9. After the machine is shut down, take proper preventive maintenance measures, thoroughly check all hydraulic components, piping, fittings, etc., and perform a function test for each system before putting the machine into service again.

Pins and Composite Bearing

1. The connecting pins should be removed and inspected in case any of the following defects is found:
 - Excessively tilted joint
 - Noise originating from the joint during operation.
2. The composite bearing should be replaced in any of the following conditions:
 - Frayed or separated fiber on the sleeve surface
 - Cracked or damaged sleeve housing
 - Bearing moved or rotated into the housing
 - Debris embedded in the sleeve surface.
3. Replace the pivot pin if any of the following is detected (properly clean the pivot pin before inspection):
 - Wear in the bearing area
 - Flaking, peeling, scratches or abrasions on the pivot pin surface
 - Corroded pivot pin in the bearing area
4. Reassemble the connecting pin and composite bearing
 - Blow off the dirt and debris on the housing. Remove any foreign objects on the bearing and housing.
 - Clean the bearing and pivot pin with a cleaning agent to remove all grease and oil. The composite bearing uses dry coupling which does not require lubrication.
 - During installation and operation, inspect the pivot pin to ensure that there are no burrs, nicks or abrasions that could damage the bearing.

4.3 MAJOR MODIFICATION AND REPAIR

A major modification/repair is a modification/repair of the entire machine or its components that affects the stability, strength or performance of the machine.

Each major modification/repair to the machine by the machine owner/company should be recorded using the **Major Modification/Repair Record** in the attachment to this manual. This record should be retained until the machine is taken out of service or as required by the machine owner/company.

Major modifications/repairs to the machine must be performed by a qualified service technician. The machine must be inspected and verified after major modifications/repairs, the inspection items include but are not limited to all items in the **Inspection and Preventive Maintenance Schedule**. Once inspection and verification are complete the machine can be put back into service.

5 CHASSIS AND TURNTABLE ASSEMBLY

5.1 CHASSIS AND TURNTABLE SYSTEM

Chassis Inclination Sensing System

The chassis inclination sensing system measures the inclination of the chassis relative to the horizontal plane by means of a level sensor mounted in the turntable. The chassis inclination indicator on the platform display panel indicates if the chassis inclination exceeds the maximum allowable tilt angle. When the chassis inclination sensing system detects that the chassis inclination exceeds the maximum allowable tilt angle, the chassis tilt indicator will flash, all movements will be disabled. Refer to **Inclination Protection Function** for details.

Travel Drive System

This machine is equipped with four-wheel drive. The four-wheel drive system consists of one closed-circuit variable-displacement pump, four variable-displacement plunger motors, four drive reducers and one travel control valve. The drive speed depends on the closed-circuit variable-displacement pump, engine speed and motor displacement. Full-time control is applied for traction control. The drive function is limited by the position of the boom, see **Travel Speed Reduction System** for details.

Travel Speed Reduction System

When the boom is in operating position, the travel speed of the machine is automatically limited to the operating travel speed.

Reverse Drive Confirmation System

The reverse drive confirmation system warns the operator of a situation in which the machine travels and steers in the direction opposite to the travel direction of the joystick. The reverse position indicator on the platform controller indicates such situation. When the boom is positioned between the two rear wheels, the system does not impose any restrictions on the travel of the machine. If the boom is positioned beyond any rear wheel while the machine is traveling, the reverse position indicator will flash, and the machine's travel and steer functions will be blocked. To restore the travel and steer functions, press the reverse position travel drive switch at the platform controller. The reverse position indicator will then illuminate, indicating that the machine's actual travel and steer direction is opposite to the travel direction of the joystick.

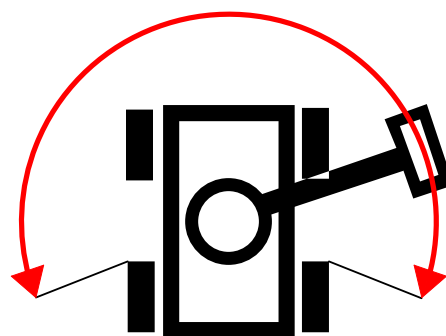


Fig. 1 Reverse position diagram

Chassis Oscillating System

If the machine is equipped with oscillating function, it must have chassis oscillating system. The oscillating system controls the axle's oscillating function. Both the front and the rear axle shafts are connected to the chassis; the telescoping action of the oscillating cylinders on the left and right part of the front axle is controlled by the multi-way oscillating valves at the rear of the chassis. If there is relative displacement between the chassis and the rear axle, the multi-way oscillating valves will be triggered and will control the oscillating cylinder's telescoping movements. This function does not require auxiliary electrical components, nor is it subject to any conditions. The oscillating function operates in all working conditions. With this function the machine's four wheels maintain constant ground contact, even when driving on rough and uneven terrain, which greatly improves maneuverability and operating comfort.

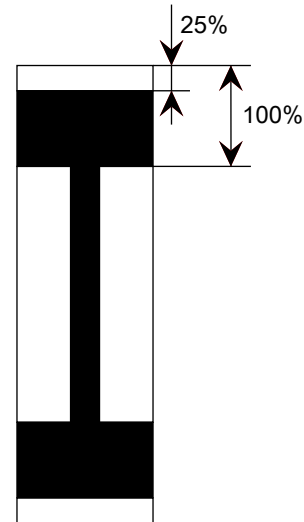


Fig. 2

5.2 TIRE AND WHEEL ASSEMBLY

NOTICE

Non-marking tires shall be used indoor only on ground sufficient to support the total mass of the machine (machine weight + platform load).

Check Tires and Rims

Check the tires and rims daily and replace a tire if any of the following defects is found:

- The tire is severely cracked, broken, deformed or shows other abnormalities.
- The tire ply shows a smooth, uniform cut with a total length of more than 75 mm (3 in).
- The tire ply shows a crack or fissure that exceeds 25 mm (1 in) in either direction.
- The tire has a puncture with a diameter of more than 25 mm (1 in).
- The tire shows severe bulging.
- The wear extent of the tire's ground-supporting surface exceeds 25 %.

Check Wheel Nuts

The wheel nuts should be tightened before the machine is put into service for the first time and after each tire is removed. Check and tighten the wheel nuts to the specified torque every 3 months or 250 operating hours.

Replacement Requirements



WARNING

- **The tires and rims on the machine have been designed and selected according to the overall performance and load stability requirements of the machine. Therefore, the model specifications, rim width, installation center surface, diameter, etc. must not be changed, otherwise this could lead to an unstable and hazardous condition.**
- **Wheel-specific nuts must be used that match the wheel bolts. The wheel nuts must be installed and maintained with the proper tightening torque to prevent loose rims, broken bolts and wheels loosening from the axle. Be sure to only use nuts that match the mounting angle of the rim holes.**

Hunan Sinoboom Intelligent Equipment Co., Ltd. recommends the replacement tire be of the same size, ply rating and brand as the original tire. For the tire part numbers of specific machine models, please refer to the Parts Manual of the corresponding machine. If you choose not to use the replacement tires recommended by Hunan Sinoboom Intelligent Equipment Co., Ltd., the following specifications should be adhered to:

- The ply rating/rated load capacity and size should be the same as the original tire or superior to it.
- The tire tread contact width should be the same as or superior to the original tire.
- The wheel diameter, width, offset dimensions and weight must be the same as the original tires.
- The replacement tire must be approved for the application by the tire manufacturer (including intended purpose, maximum travel speed, maximum tire load, etc.).
- Due to size differences between different tire brands, both tires on the same axle should be of the same brand.
- Different tire types have their own performance characteristics. Random mixing or substitution is prohibited. Tire types can be identified by appearance:
 - Foam-filled tires: The tire body is fully filled and plump. The rim usually has a filling valve, and the tread is equipped with anti-slip screws. There are no ventilation holes on the sidewall. Sinoboom designates tires with black treads as foam-filled tires, while those with other colors (such as gray or white) are designated as foam-filled non-marking tires.



Fig. 3 Filling Valve



Fig. 4 Anti-slip Screw

- Solid tires: The tire body is flat and even. There is no filling valve on the rim, and the tread has no screws. Ventilation holes are usually designed on the sidewall (very few have no ventilation holes). Sinoboom designates tires with black treads as solid tires, while those with other colors (such as gray or white) are designated as solid non-marking tires.



Fig. 5 Ventilation Holes

NOTICE

Unless specifically approved by Sinoboom, do not replace foam-filled tires with pneumatic tires.

Specifically, determining the direction during tire replacement is crucial. The left and right installation positions of the tires can be identified using the following methods:

- Firstly checking the markings on the tire sidewall: If there is a directional arrow indicating the installation direction, the installation direction can be directly determined based on the arrow.
- If there is no clear directional marking, the direction should be determined based on the tread pattern structure: The tip (open end) of the pattern should point in the forward direction of the machine, as indicated by the arrow direction in the figure below.

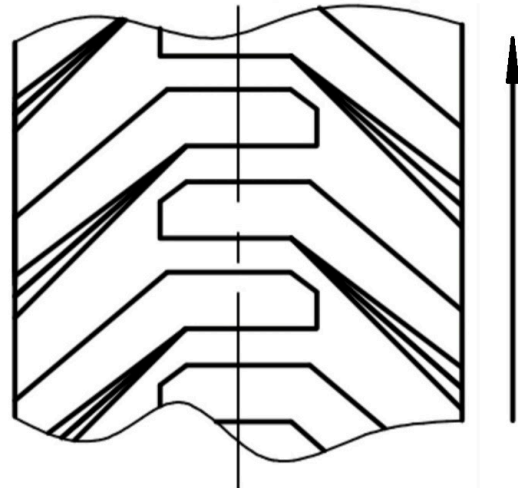


Fig. 6

WARNING

Installing tires incorrectly on the left and right sides during replacement will not only affect the machine's driving performance but also pose serious safety hazards, potentially endangering the operator. Installation must strictly follow the specifications.

Replace Tire and Wheel Assembly**WARNING**

Tighten the wheel nuts to the specified torque to prevent the wheel from loosening. Use a torque wrench to tighten the nuts. If no torque wrench is available use a socket wrench to tighten the nuts and then immediately have a service station or dealer tighten the nuts to the specified torque. Over-tightening will cause the nuts to break or permanently deform the bolt holes in the rims.

Performing tire replacement on flat, level, and solid ground:

1. Make sure the machine is in stowed position.
2. Turn the power-off switch to the OFF position and disconnect all power sources (such as battery charger) connected to the machine. If the machine is equipped with high-voltage lithium batteries, the lithium battery service switch needs to be disconnected.
3. Use a wrench to partially loosen the wheel nuts (leave 2–3 full threads engaged to prevent sudden detachment).

4. Use a jack with sufficient load capacity (rated load ≥ 1.5 times the machine's weight) to steadily lift the machine frame until the tire is about 50 mm (2 in) off the ground. The jacking point is the flat reinforced weld areas near the wheel positions.



WARNING

Always maintain machine balance while jacking. Improper operation may cause tipping hazards.

5. Remove all nuts in a diagonal sequence and then detach the tire.
6. Align the mounting holes of the new tire and wheel assembly with the corresponding mounting holes on the drive reducer.
7. Apply medium-to-high strength threadlocking adhesive to bolt threads, and hand-tighten all bolts to ensure even initial load distribution. Never apply grease to threads or nuts.
8. Then tighten the nuts to the specified torque in three stages using a wrench, following the sequence shown in the diagram below. Refer to the following torque tables.

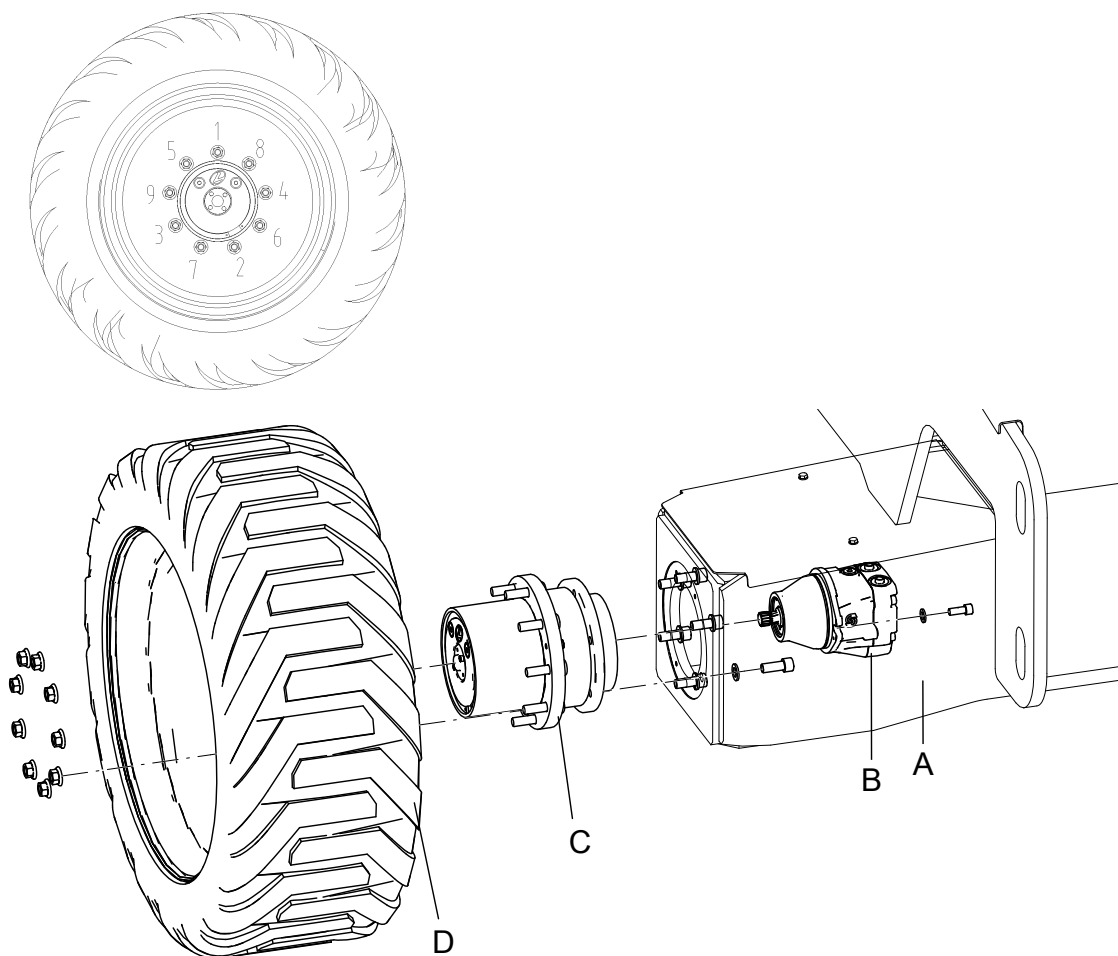


Fig. 7 Diagram – Wheel Nuts Tightening Sequence

Table 5-1 Table of Wheel Nuts Tightening Torque

First step	Second step	Third step
150 Nm (110 ft-lb)	240 Nm (177 ft-lb)	300 Nm (221 ft-lb)

5.3 TRAVEL DRIVE DEVICE

The travel drive device is mainly composed of a drive reducer and a drive motor.

Fig. 8 Travel Drive Device

Table 5-2 Travel Drive Device Components

No.	Description
A	Axle
B	Travel motor
C	Travel reducer
D	Tire

Check Travel Reducer Disconnect Cap

The drive reducer in the drive system can be engaged and disengaged. The two positions can be achieved by mounting the disconnect cap on the side of the drive reducer in the normal or in the reverse position, as shown below.

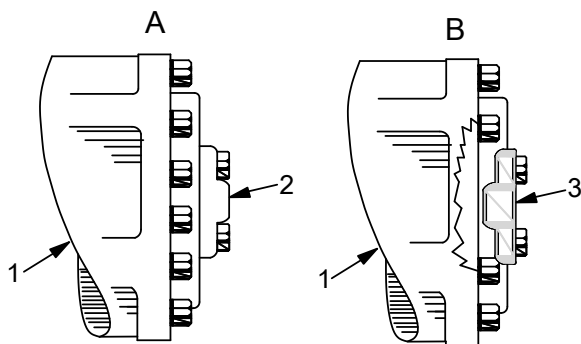


Fig. 9

A Normal position - engaged

B Reverse position - disengaged

1. Drive reducer
2. Disconnect cap (normal position)
3. Disconnect cap (reverse position)

The drive reducer must be engaged for the machine to operate normally. To ensure the normal and safe operation of the machine, check the disconnect cap on the side of the drive reducer visually before operation.

The drive reducer must be disengaged for the machine to be towed or dragged. To ensure safety, check and ensure that the drive reducer is disengaged before towing or dragging, and return the drive reducer to its original position once the towing or dragging procedure is completed.

For detailed procedures of mounting the disconnect cap in normal and reverse position as well as towing and dragging, refer to the section **Emergency Towing** in the Operation Manual.

Check the Oil Level in Travel Reducer

Insufficient gear oil in the travel reducer will lead to degraded machine performance and potential component damage. It's recommended to check the oil level in the drive reducer every 3 months or after 250 operating hours.

1. Drive the machine to rotate one oil port on the reducer to the top (as shown below).
2. Remove the oil plug from the oil port 2, and check the oil level in the reducer, it should be level with the oil port.
3. Add oil as needed, until the oil is level with oil port 2.
4. Check the oil level in the other drive reducers by repeating the above steps.

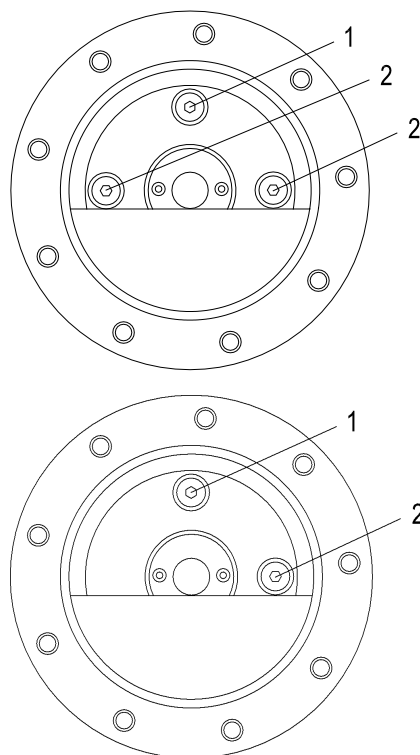


Fig. 10 Diagram – Travel Reducer Gear Oil Check

1. Oil port 1

2. Oil port 2

Replace the Gear Oil in Travel Reducer

Regularly replacing the gear oil in the travel reducer is vital to maintaining machine performance and extending service life of the machine. It's recommended to replace the gear oil in the travel reducer every year or after 1000 working hours.

Replace the gear oil in the travel reducer by draining the oil and filling with clean oil as follows:

Drain oil from the travel reducer:

1. Drive the machine to rotate one oil port on the reducer to the bottom.
2. Place a suitable container under the oil port at the bottom of reducer.
3. Remove the oil plug from the oil port at the bottom to drain the gear oil from the travel reducer into the container.
4. Reinstall the oil plug.

Fill with clean oil:

1. Drive the machine to rotate one oil port on the reducer to the top (as shown above).
2. Remove the oil plug from oil ports 1 and 2.
3. Using an oil gun or oil can, add new gear oil to the oil port 1 until the oil level is even with the oil port 2 (refer to **Oil Specifications** for viscosity grade).
4. Reinstall the oil plug.
5. Clean up any gear oil spills.

Travel Reducer and Drive Motor

Disassembly and installation of the travel reducer and drive motor on flat, level, and solid ground:



WARNING

Always maintain machine balance while jacking. Improper operation may cause tipping hazards.

Disassembly

1. Make sure the machine is in stowed position.
2. Turn the power-off switch to the OFF position and disconnect all power sources (such as battery charger) connected to the machine. If the machine is equipped with high-voltage lithium batteries, the lithium battery service switch needs to be disconnected.
3. Use a jack with sufficient load-bearing capacity (rated load ≥ 1.5 times the machine's weight) to steadily lift the frame on the side to be disassembled until the tire is about 50 mm (2 in) off the ground. The jacking point is the flat reinforced weld areas near the wheel positions.
4. Remove the tire (refer to the **Replace Tire and Wheel Assembly** procedure for detailed steps) and use suitable lifting equipment to place the tire in an appropriate area.
5. Mark and disconnect the hydraulic pipelines on the drive motor and collect the hydraulic oil in the

pipelines with a suitable vessel. Plug the lines and the ports.

6. Remove the drive motor after removing the mounting bolts and washers from the motor.
7. Use suitable lifting equipment to support the travel reducer.
8. Remove the mounting bolts and washers on the drive reducer, and slowly remove the drive reducer from the chassis with the assistance of lifting equipment.

NOTICE


*Each of the four reducers on the chassis is installed in different directions. Mark the direction of each reducer brake oil port before removing the reducer for the convenience of future installation. The position of brake oil port is as indicated by the arrow in the below figure of **Brake Oil Port – Drive Reducer**.*

Installation

1. Use a jack with sufficient load-bearing capacity (rated load ≥ 1.5 times the machine's weight) to firmly support the frame on the side where installation will take place.
2. Align the reducer brake oil port with the marked direction.
3. Place the flat surface of the washer against the mounting surface. Apply medium-to-high-strength thread locker to the bolt threads, then install and pre-tighten them one by one in their respective positions.
4. Then tighten the nuts to the specified torque in three stages using a wrench, following the sequence shown in the **Tightening Sequence of Travel Reducer Bolts**, until the standard torque value is reached. Refer to the **Table of Travel Reducer Bolt Tightening Torques** for specific values.
5. After installation, fill appropriate amount of gear oil (refer to the **Oil Specifications** for the viscosity grade).
6. Install the O-ring on the motor brake port, then engage the motor spline shaft with the internal teeth of the reducer. Slowly rotate the motor housing to ensure:
 - The motor oil port aligns with the reducer brake oil port (see the figure below for the brake oil port position).
 - The motor mounting groove aligns with the mounting holes on the reducer.
7. Place the flat surface of the washer against the mounting surface. Apply medium-to-high-strength thread locker to the bolt threads, then install and pre-tighten them one by one.

8. Tighten the bolts to the specified torque with a torque wrench.
9. Reconnect the hydraulic hoses.

Fig. 11 Brake Oil Port – Travel Reducer

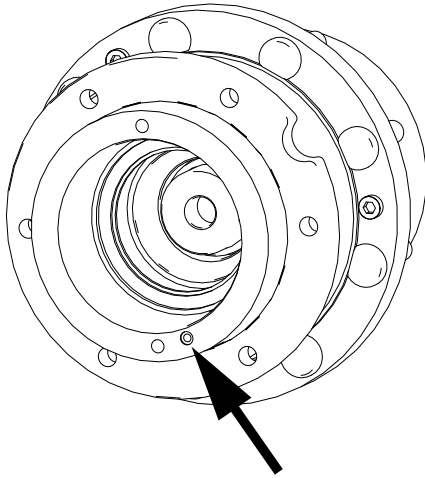

5.4 SLEWING MECHANISM

The slewing mechanism, installed on the turntable, is mainly composed of a slewing bearing (slewing reducer) and a motor, and acts as the drive device for slewing action. The inner ring (worm gear) of the slewing bearing is bolted to the turntable, the outer ring is bolted to the chassis. The reducer drives the inner ring (worm gear) of the slewing bearing through the motor to achieve the rotation of the turntable.

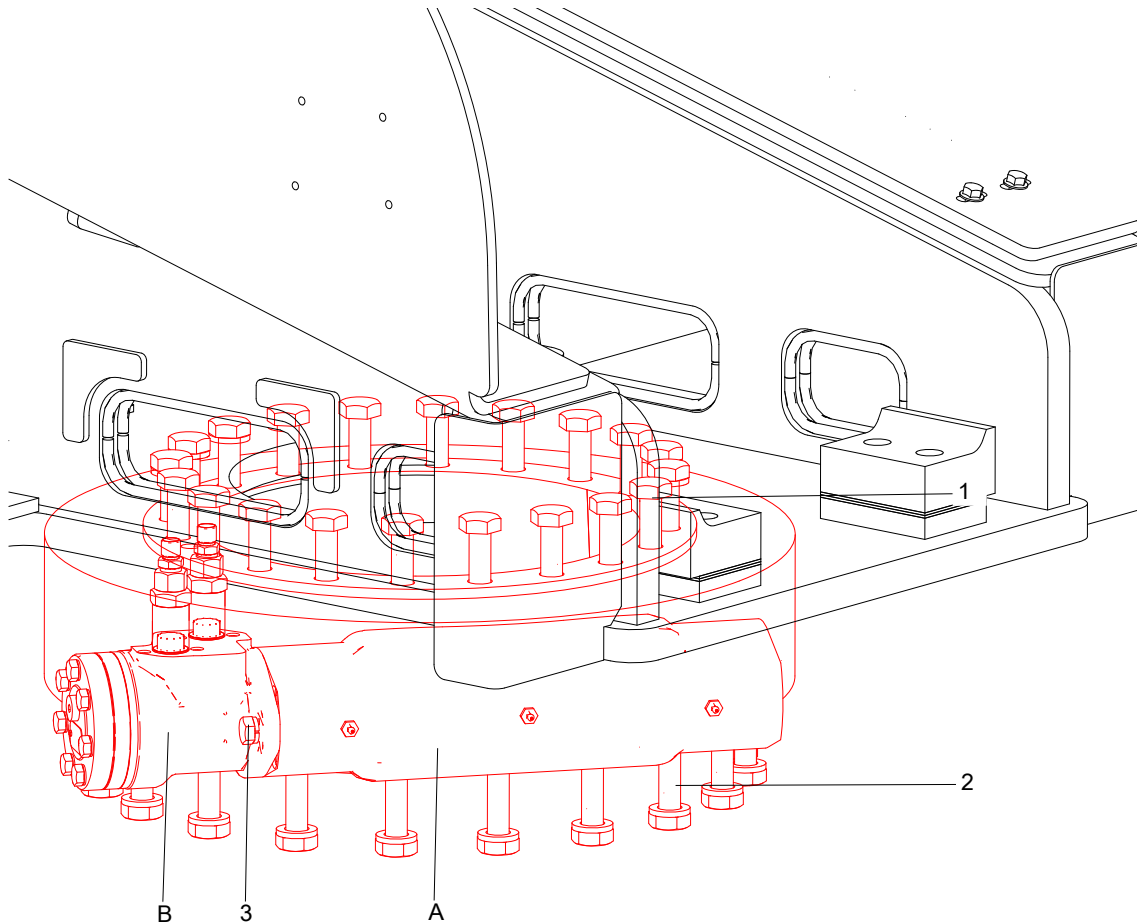


Fig. 12 Slewing Mechanism

Table 5-3 Slewing Mechanism Components

No.	Description
A	Slewing bearing (slewing reducer)
B	Slewing motor

Lubricate Slewing Bearing

Regular lubrication of the slewing bearing is essential for maintaining the machine's normal operation and for ensuring a long service life. Failure to lubricate the slewing bearing regularly may lead to abnormal operation of the machine and premature component damage. It is recommended to lubricate the slewing bearing every 3 months or after 250 hours of operation. When the machine operates in multiple shifts or is exposed to harsh environments, the lubrication frequency and the amount of lubricant should be increased accordingly.

1. As shown in the figure below, connect the grease nipple on the slewing bearing and the nipple at position #1 using a hose.
2. Place the grease gun nozzle on the grease nipple at position #1 and inject ZL-3 lithium-based grease. Through the rubber hose, transfer the grease to the slewing bearing of the turntable.
3. Then, rotate the turntable by 100-130 mm (4-5 in) each time until the whole slewing bearing is fully lubricated.
4. Place the grease gun nozzle on the grease nipple at position #2 and fill with ZL-3 lithium-based grease until the worm gear is fully lubricated.
5. Remove excess grease.

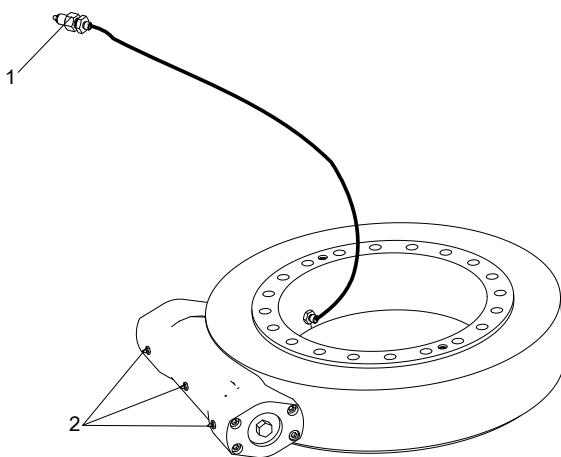


Fig. 13 Slewing Bearing Lubricating Diagram

Check Slewing Bearing Bolts

It is recommended to check the slewing bearing bolts after the first 50 hours of operation, and afterwards every 3 months or 250 hours of operation.

If any bolt is found to be missing or slack, replace it with a new bolt, apply medium-to-high strength threadlocking adhesive to the bolt thread and tighten the bolt with the torque specified in the **Torque Specifications** section. After replacing and tightening the slewing bearing bolt, re-inspect the bolt for tightness.

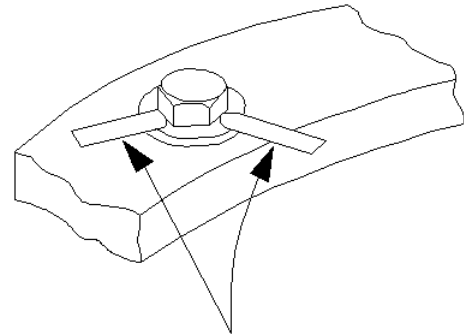


Fig. 14 Instruction for inserting a feeler gauge

Check the connecting bolt between the chassis and the slewing bearing

1. Set the machine to the position shown in the Figure (b) below.
2. Locate the connecting bolt between the chassis and the slewing bearing.
3. As indicated by [Page 47, Instruction for inserting a feeler gauge](#), insert a 0.04 mm (0.0016 in) feeler gauge between the bolt and the washer in the quadrant of the turntable counterweight side.
4. Make sure that the feeler gauge does not penetrate under the bolt head to the bolt shaft.
5. Rotate the turntable 90° to check the bolts in the next quadrant.
6. Rotate the turntable 90° again until all bolts have been inspected.

Check the connecting bolts between the turntable and the slewing bearing

1. Set the machine to the position shown in the Figure (b) below.
2. Locate the connecting bolt between the turntable and the slewing bearing.
3. As indicated by [Page 47, Instruction for inserting a feeler gauge](#), insert a 0.04 mm (0.0016 in) feeler gauge between the bolt and washer in the semi-circle of the turntable counterweight side.
4. Make sure that the feeler gauge does not penetrate under the bolt head to the bolt shaft.

5. Set the machine to the position as shown in the Figure (a) below.
6. As indicated by [Page 47, Instruction for inserting a feeler gauge](#), insert a 0.04 mm (0.0016 in) feeler gauge between the bolt and washer in the other semicircle (opposite to the turntable counterweight side).
7. Make sure that the feeler gauge does not penetrate under the bolt head to the bolt shaft.

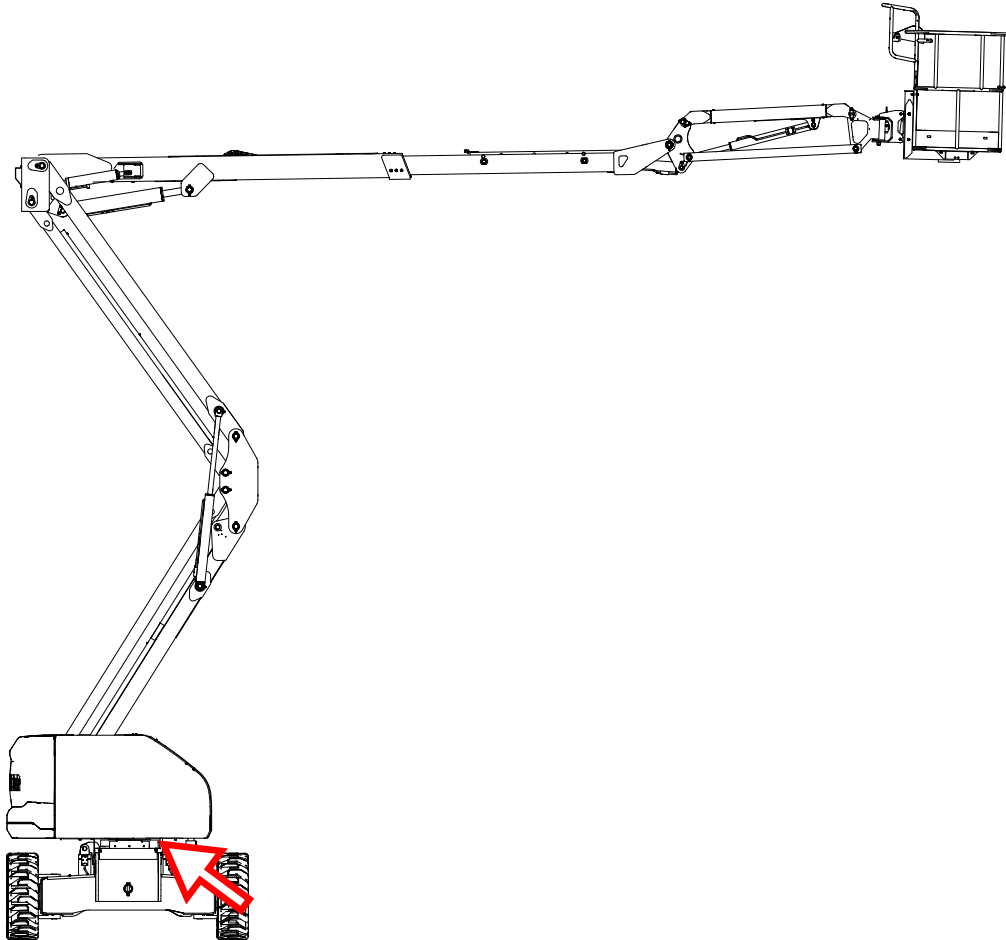


Fig. 15 Check Slewing Bearing Connecting Bolts (a)

1. Articulating boom fully lifted;
2. Main boom lifted to horizontal position;
3. Telescopic boom section fully extended;
4. Jib lifted to horizontal position;
5. Turntable rotated 90°;

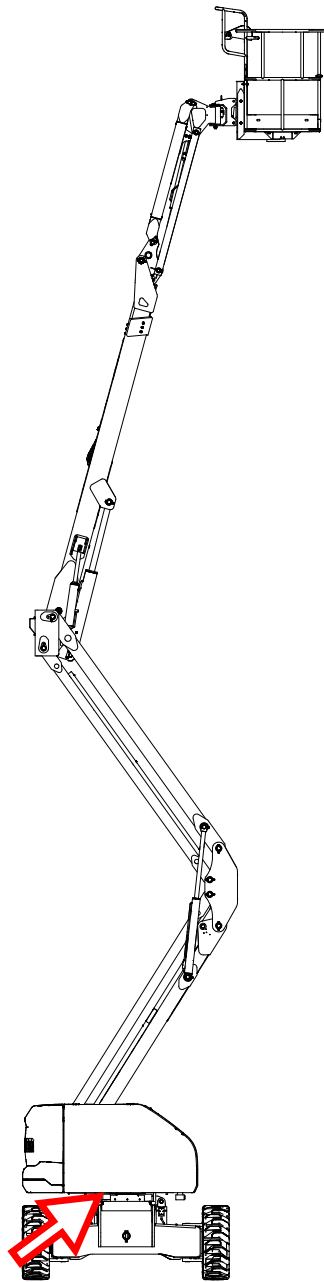


Fig. 16 Check Slewing Bearing Connecting Bolts (b)

1. Articulating boom fully lifted;
2. Main boom fully retracted and lifted;
3. Jib fully lifted;
4. Turntable rotated 90°;

Disassembly and Installation

Disassembling the slewing motor

1. Make sure the turntable is locked (lock the slewing pin if so equipped).
2. Mark and disconnect the hydraulic lines on the slewing motor and collect the hydraulic oil from the lines with a suitable container. Plug the lines and the ports.

3. Remove the slewing motor from the slewing bearing by removing the mounting bolts at position #3.

Disassembling the slewing bearing

1. Use suitable lifting equipment to support the boom.
2. Mark and disconnect the hydraulic lines on the slewing mechanism and collect the hydraulic oil from the lines with a suitable container. Plug the lines and the ports.
3. Use suitable lifting equipment to support the turntable.
4. Use appropriate tools to draw a line on the inner ring of the slewing bearing and at the bottom of the turntable as a mark to align the slewing bearing for installation.
5. Remove the bolts and washers at position #1 that connect the turntable to the inner ring of the slewing bearing.
6. Slowly remove the entire turntable assembly from the slewing bearing with the assistance of lifting equipment and place the turntable on a bracket that provides proper support.

NOTICE

Use caution when removing the turntable to avoid damage to the turntable, the slewing bearing, and other machine components.

7. Use appropriate tools to draw a line on the outer ring of the slewing bearing and on the upper part of the chassis as a mark to align the bearing for mounting.
8. Remove the bolts and washers at position #2 that connect the chassis to the outer ring of the slewing bearing.
9. Remove the slewing bearing from the chassis using suitable lifting equipment, place the slewing bearing in a clean work area that provides proper support.

NOTICE

Bolts and washers must not be reused; they must be replaced with new fasteners instead.

Install slewing bearing

1. Clean the removed slewing ring and use caution as to avoid hampering its sealing properties.
2. Use suitable lifting equipment to lift the slewing bearing onto the mounting surface of the chassis, aligning the outer ring of the slewing bearing with the marking line on the chassis.
3. Check the clearance between the slewing bearing mounting surface and the chassis mounting surface with a feeler gauge, ensuring the clearance ≤ 0.2 mm (0.008 in).

4. Using the special high-strength washers for high-strength bolts, fit the washer face with the mounting surface, and apply medium-to-high strength threadlocking adhesive, then install the bolts one by one by passing it through the chassis and the outer ring of the slewing bearing.

NOTICE

- *Bolts and washers must not be reused; they must be replaced with new fasteners instead.*
- *The slewing bearing is the only structural connection between the chassis and the turntable, its replacement should meet the specification requirements. It is highly recommended that you use only original components.*

5. Tighten the bolts in the sequence shown in the following diagram and follow the steps in the table below.
6. After the bolts are tightened, mark the bolt head and its surrounding material with an appropriate tool to facilitate later inspection of the bolts for looseness.
7. Rotate the inner ring of the slewing bearing by hand to ensure smooth movement.
8. Remove the lifting equipment from the slewing bearing.
9. Lift the turntable assembly to the top of the chassis using suitable lifting equipment, carefully lower the turntable onto the slewing bearing, and align the inner ring of the slewing bearing with the marking line on the turntable. If replacing the slewing bearing with a new one, make sure that the grease nipple joint is positioned at a 90° angle to the left-right symmetrical line of the turntable.
10. Using special high-strength washers for high-strength bolts, fit the washer face with the mounting surface, and apply medium-to-high strength threadlocking adhesive, then install the bolts one by one by passing it through the turntable and the inner ring of the slewing bearing.
11. Tighten the bolts in the sequence shown in the following diagram and follow the steps in the table below.
12. After the bolts are tightened, mark the bolt head and its surrounding material with an appropriate tool to facilitate later inspection of the bolts for looseness.
13. Remove the lifting equipment and reconnect the hydraulic hoses according to the marks applied before disassembly.

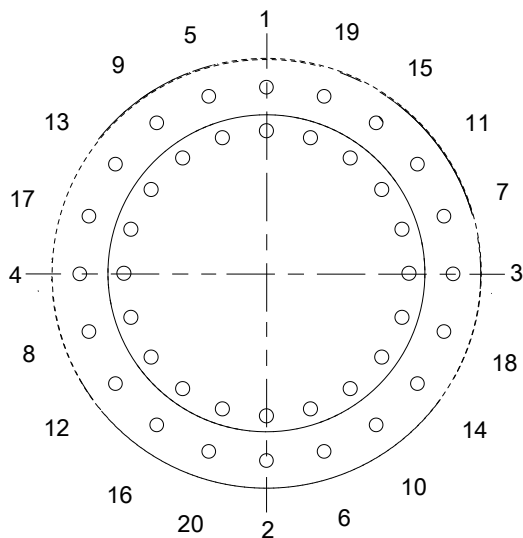


Fig. 17 Tightening Sequence of Slewing Bearing Bolts

Table 5-4 Table of Slewing Bearing Bolt Tightening Torques

First step	Second step	Third step
160 Nm (118 ft-lb)	270 Nm (199 ft-lb)	300 Nm (221 ft-lb)

5.5 HYDRAULIC GENERATOR (IF EQUIPPED)

Installation

The hydraulic generator is optional. Before installation, confirm whether the machine can accommodate a hydraulic generator.

1. Align the mounting holes of the mounting bracket with the holes on the hydraulic oil tank, and secure with bolts.
2. Use appropriate lifting equipment to hoist the hydraulic generator steadily above the mounting bracket.

WARNING

Always check the position of the hydraulic generator during the lifting process to ensure that the hydraulic generator does not interfere with other parts of the machine.

3. Adjust the position of the hydraulic generator to align its mounting holes with the holes on the bracket.
4. Secure the hydraulic generator to the mounting bracket using bolts and nuts, and tighten them.
5. Properly install the hydraulic hoses and electrical wiring harness, ensuring all connections are secure and leak-free.

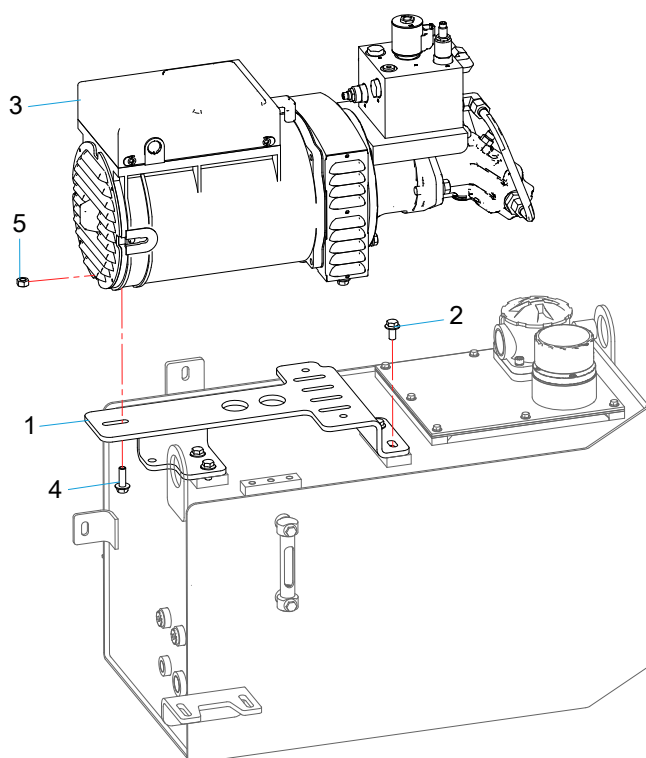


Fig. 18 Hydraulic Generator Installation Diagram (North America)

1. Hydraulic generator mounting bracket
2. Mounting bracket fastening bolt
3. Hydraulic generator
4. Hydraulic generator fastening bolt
5. Hydraulic generator fastening nut

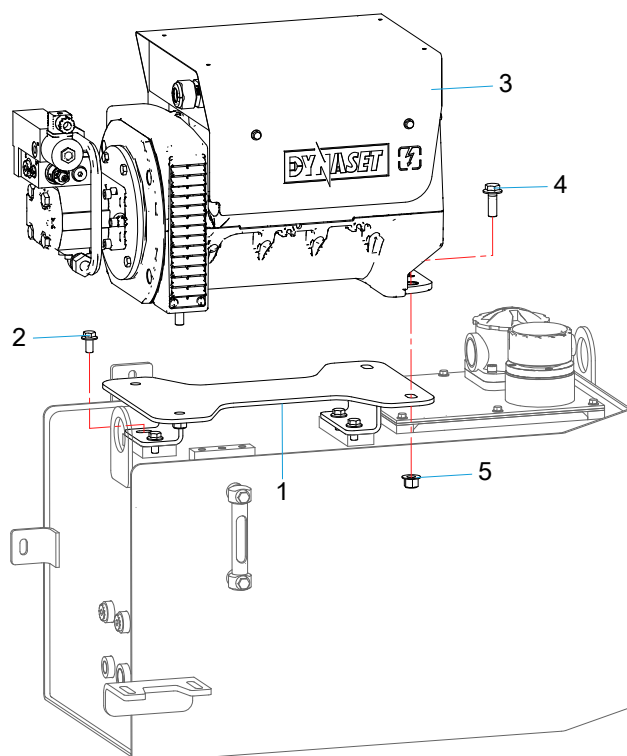


Fig. 19 Hydraulic Generator Installation Diagram (Australia)

Commissioning

Prepare a multimeter capable of measuring frequency and voltage. After installing the hydraulic generator, commission the machine according to the following steps:

For North America market

1. Start the engine, and after the engine operates stably, move the hydraulic generator switch to warm up the hydraulic system until the oil temperature exceeds 45°C (113°F).
2. Use the multimeter to measure the generator output voltage to verify it meets usage requirements. If the output voltage is lower than required, the motor speed is insufficient. If the output voltage is too high, the motor speed is excessive.
3. The speed of the motor depends on the input flow rate, so the output voltage can be used to determine whether the motor flow rate is appropriate. The position of the flow valve is shown by the arrow in the figure below. Adjust the valve clockwise to decrease the flow rate, or counterclockwise to increase the flow rate. Adjust the flow valve based on the output voltage until the output voltage meets the requirements of use in your region.

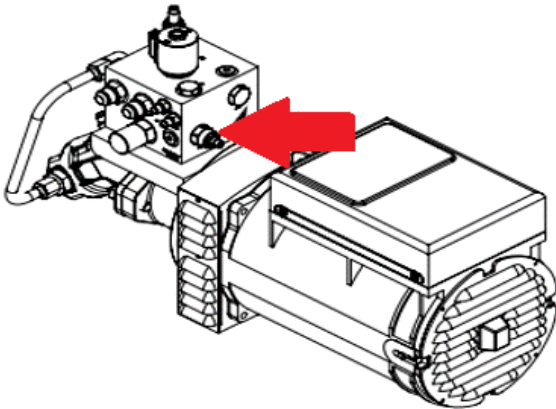


Fig. 20 Diagram of flow valve

NOTICE

If the flow valve is fully opened, but the voltage still can not meet the requirements of use, the reason may be that:

- *The hydraulic system has not warmed up sufficiently, so the oil temperature has not reached the required temperature. Wait for the oil temperature to rise above 45°C (113°F), then determine the output flow based on the actual output voltage, and adjust the flow valve until the voltage reaches the requirements of use;*
 - *The pump LS set pressure is too low, resulting in insufficient output flow of the pump, so the LS set pressure needs to be increased.*
4. After the voltage is adjusted, run the machine with or without load for about 30min. If the motor makes a buzzing sound or the pump outlet hose vibrates at certain frequency, the pump LS set pressure value is not suitable and needs to be decreased. Turn the screw in the figure below clockwise to increase the LS set pressure value, or counterclockwise to decrease the LS set pressure value.

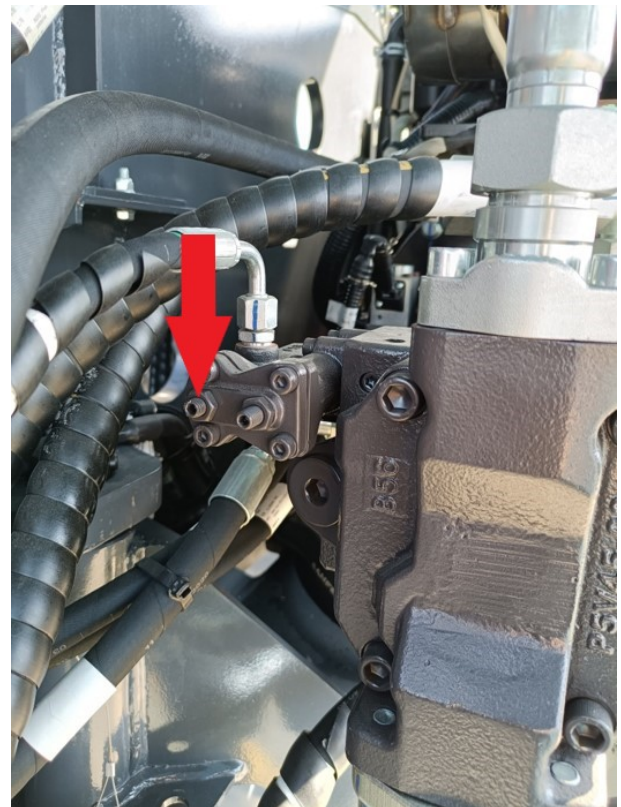


Fig. 21 Position of LS Set Pressure Adjusting Screw

NOTICE

Adjusting the LS set pressure will affect the time of boom movement, so please contact Sinoboom after-sales personnel for the operation.

For Australia market

1. After starting the engine, turn the ground/platform control selector switch at the ground control position to the "Platform Control" position. Pull out the emergency stop switch on the platform control position to the "ON" position. Depress the foot switch and simultaneously push the hydraulic generator switch upward to its upper position. Once the engine speed reaches above 2000 r/min, the generator will start generating electricity.
2. Set the multimeter to the frequency (Hz) range. Connect the red probe to the L terminal and the black probe to the N terminal of the platform socket to measure the output voltage frequency. If the frequency is below 50 Hz, adjust the voltage regulation knob inside the junction box until the frequency reaches 50 Hz.
3. When the generator output frequency reaches 50 Hz, switch the multimeter to the voltage range and measure the voltage between the L and N terminals to verify if it reaches 240 V. If the voltage is below 240 V, continue adjusting the voltage regulation knob inside the junction box until the voltage reaches 240 V.
4. If the generator does not start generating electricity after pushing the hydraulic generator switch upward to its upper position, check the engine speed value on the main interface of the turntable controller display and the generator output signal in the "OUTPUT INFO (1/2)" interface. If the engine speed does not reach 2000 r/min or there is no generator output signal, please contact Sinoboom after-sales service personnel to update the program.

WARNING

Electrocution hazard. The output voltage of generators in North America is 110V (single-phase)/208V (three-phase) normally, while the output voltage of generators in Australia is 230–240V (single-phase) normally. Electric shock may cause serious personal injury or death. The debugging personnel should be extra careful during operation, and follow national or local electrical safety regulations and precautions to avoid possible electric shock hazard.

5.6 COUNTERWEIGHT**WARNING**

The counterweight is essential for maintaining the stability of the machine. Do not modify or remove counterweight without the manufacturer's written authorization. Improperly assembled counterweights may cause the machine to tip over, causing serious injury, death, or machine damage.

Disassembly

1. Adjust the machine to the stowed position and make sure the turntable is locked (lock the slewing pin if so equipped).
2. Use suitable lifting equipment to provide reliable support for the boom and prevent the machine from tipping over once the counterweight is removed.
3. Use suitable lifting equipment to support the counterweight.
4. Remove the bolts securing the counterweight to the turntable.
5. Slowly remove the counterweight by means of the lifting equipment.

Installation

1. Use suitable lifting equipment to lift the counterweight to the installation position on the turntable.
2. Align the mounting holes of the counterweight with that of the turntable structure.
3. Apply medium-to-high strength threadlocking adhesive to the fastening bolt threads and counterweight threads, and install the bolts one by one.
4. Confirm that the bolts are tightened with the correct torque, refer to the **Torque Specifications** section for the tightening torque.

5.7 BATTERY**WARNING**

- Before removing the battery, the charger power supply and the entire machine's operating power must be cut off.
- The battery case may only be disassembled by qualified/authorized personnel; improper work may result in system damage.

1. Place the machine in a ventilated and spark-free environment.

2. Open the turntable cover to locate the batteries.
3. Mark and disconnect the wire harness connection on the negative terminal of the battery, then disconnect the wire harness connection on the positive terminal of the battery.
4. After securing the battery with slings, remove the battery from the machine using suitable lifting equipment.

5.8 COLD WEATHER HEATING PACKAGE (FOR LTV MODEL ONLY)

If your machine is equipped with a cold weather heating package, it has undergone strict debugging and comprehensive performance testing before leaving the factory to ensure reliable operation in low-temperature environments. If any heater fails, please immediately contact local after-sales service personnel for professional inspection. Any heater confirmed to be faulty must be replaced promptly to maintain the optimal heating performance of the cold weather heating package.



WARNING

Do not attempt to perform maintenance on the cold weather heating package yourself.

Notes

When performing maintenance on the cold weather heating package, please note:

- Ensure that the external AC power supply to the cold weather heating package is disconnected.
- The coolant external circulation heater pipeline is directly connected to the coolant inside the engine block. During maintenance, ensure that the ball valve handle of the coolant heating pipeline is in the open position (handle perpendicular to the pipeline), i.e., the coolant heating pipeline is disconnected.

After maintenance is completed, close the ball valve handle (handle parallel to the pipeline) to connect the coolant heating pipeline. Only after ensuring the coolant level is appropriate can the preheating process be initiated normally.



Fig. 22 Handle in Open Position



Fig. 23 Handle in Closed Position

For more detailed maintenance information, please refer to the Boom Lift Accessory Manual.

Electrical Schematic Diagram

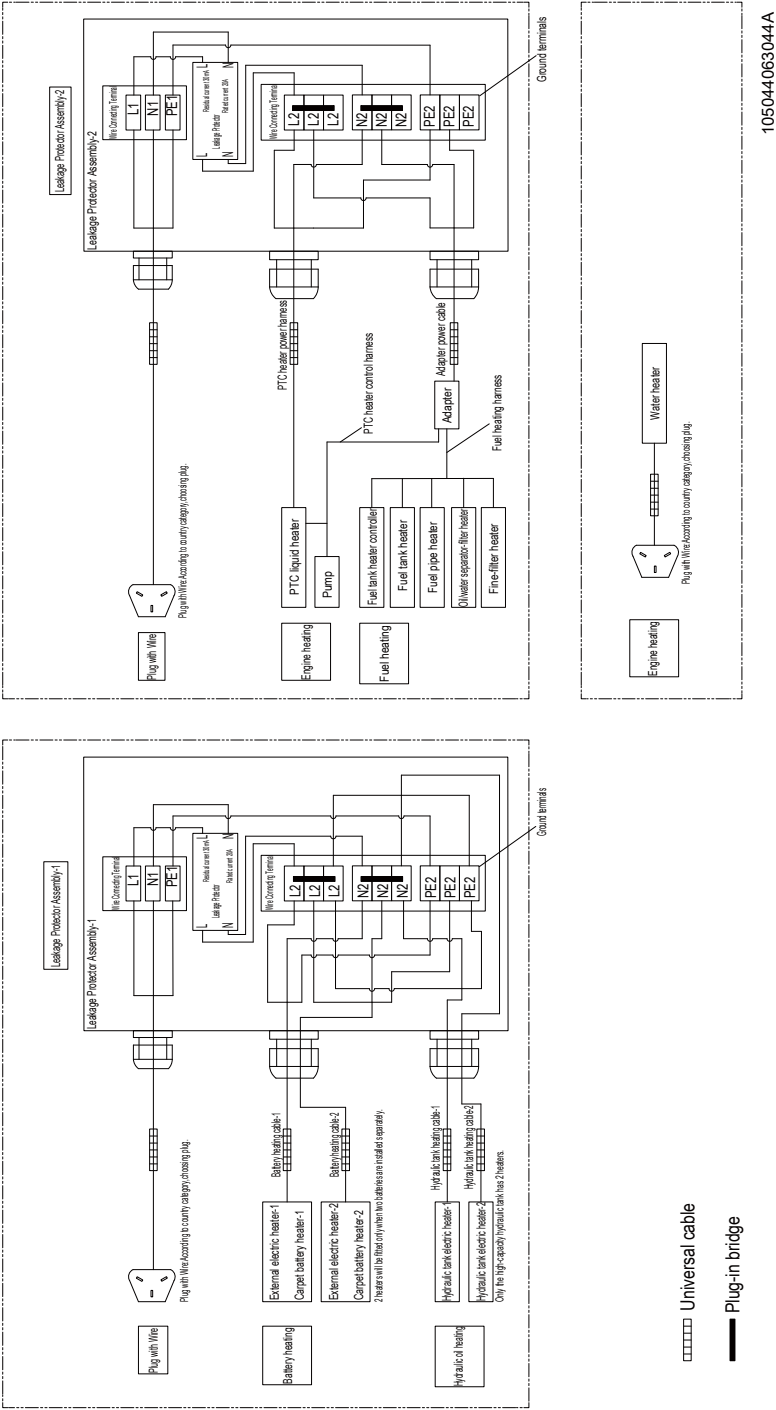


Fig. 24 Electrical Schematic Diagram

6 BOOM AND PLATFORM ASSEMBLY

6.1 BOOM AND PLATFORM SYSTEM

Platform Control Enable System

The platform control system uses time-dependent support circuits, limiting the time availability for active or enabled controllers. The foot switch must be depressed before any movement can be performed. When the foot switch is depressed, the operator may perform any movement within 7 seconds. The controller will remain enabled as long as the operator keeps activating any function until 7 seconds after the last movement stops. When the controller is active, the indicator on the platform control panel will illuminate. After the preset time, the illuminated indicator will turn off, and all movements will be disabled. To continue operating the machine, the footswitch must be depressed again.

Transport Position Sensing System

The transport position sensing system can detect the position of the boom by means of the travel switch mounted on the boom tube. When the down limit switch of the main boom or the articulating boom is not engaged, or the retraction limit switch of the main boom is not engaged, the machine is considered as in operating position; otherwise, it is considered as in non-operating position. The position of the jib is not taken into account.

This system is used to control the travel speed reduction system.

Load Sensing System

The load sensing system on this machine detects the load on the platform through the load cell installed at the joint between platform and boom. The overload indicator on the platform display panel provides a warning when the load on the platform exceeds the rated load. When the load sensing system detects that the platform load exceeds the rated load, the overload indicator will flash, and all movements of the machine will be restricted in the KG (overload limit) mode. In other modes, the telescopic section of the boom may be retracted, the turntable may be rotated slowly, and the boom can be lowered once it is fully retracted. Once the excess load is removed, the overload indicator will go out, and all machine movements may be resumed.

6.2 PLATFORM AND JIB

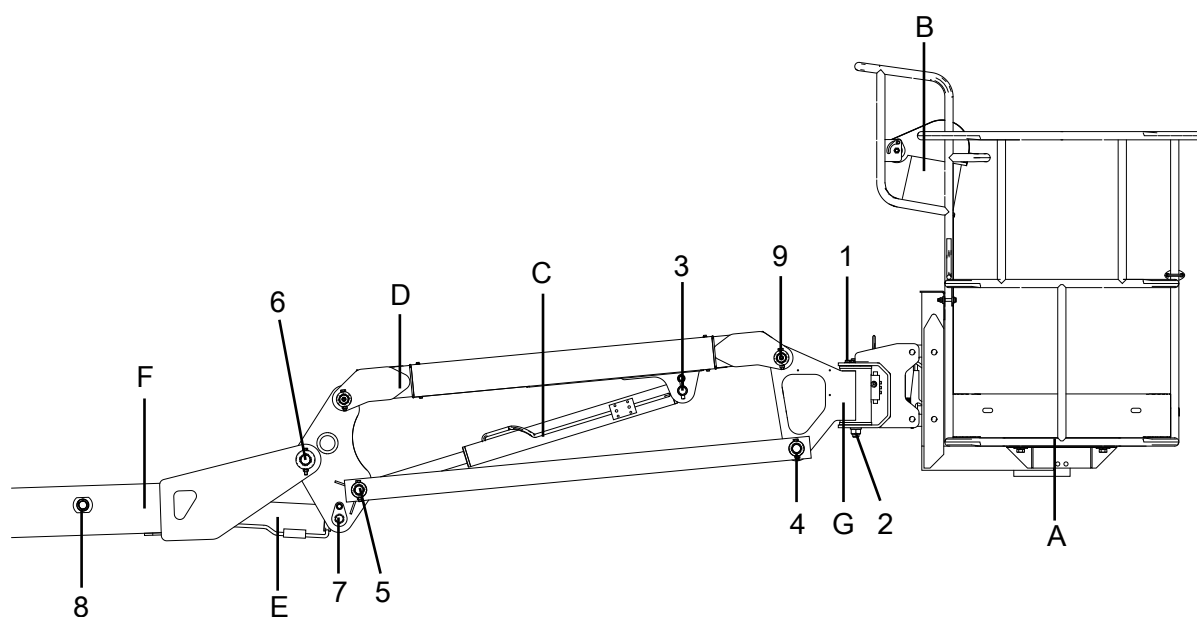


Fig. 1 Platform and Jib Structure

Table 6-1 Platform and Jib Structure Components

No.	Description
A	Platform
B	Platform controller
C	Jib lift cylinder
D	Jib
E	Upper Leveling Cylinder
F	Boom
G	Swing cylinder

Platform Controller

Disassembly

WARNING

Before performing such disassembly tasks, disconnect the battery and disconnect the charger from the AC outlet. Contact with live conductors may result in serious injury or death.

1. Make sure the machine is in stowed position.
2. Turn off the machine and press the emergency stop button at the platform controller and turntable controller.
3. Mark and disconnect the harness connections in the platform controller.
4. Remove the fastening bolts on the bottom of the platform controller.
5. Slowly remove the platform controller.

Installation

For installation, follow the disassembly procedure in reverse order.

Platform Assembly

Disassembly

1. Remove the platform controller from the platform.
2. Remove the foot switch from the platform.
3. Use suitable lifting equipment to support the work platform.
4. Remove the fastening bolt #1 from the swing cylinder and the nut from pivot pin #2.
5. Knock out pivot pin #2 with a brass rod and a mallet.

6. Slowly remove the platform assembly with the aid of the lifting equipment.

Installation

For installation, follow the disassembly procedure in reverse order.

Note: Make sure that the bolt at position #1 and the nut at position #2 of the swing cylinder have been tightened with the correct torque. Refer to the **Torque Specifications** section for the tightening torque.

Jib assembly

WARNING

- Before loosening or disassembling hydraulic parts (especially the counterbalance valve on the cylinder), the hydraulic pressure of all hydraulic lines should be released and the hydraulic oil should completely cool down.
- Disassemble the hydraulic components slowly to prevent the hydraulic oil from splashing and causing injuries.

Removing the jib assembly

1. Play the main boom in horizontal position and remove the platform assembly.
2. Support the jib and upper leveling cylinder using suitable lifting equipment.
3. Mark and disconnect the hydraulic lines from the jib and collect the hydraulic oil from the lines with a suitable container. Plug the lines and the ports.
4. Remove the bolt from pivot pin #7 of the upward leveling cylinder, and drive out pivot pin #7 with a brass rod and a mallet.
5. Remove the bolt and nut from pivot pin #6, and drive out pivot pin #6 with a brass rod and mallet.
6. Slowly remove the jib assembly with the aid of the lifting equipment.

Removing the jib lift cylinder

1. Support the jib lift cylinder with suitable lifting equipment.
2. Remove the bolt and nut from pivot pin #3 and drive out pivot pin #3 with a brass rod and a mallet.
3. Remove the bolt and nut from pivot pin #5 and drive out pivot pin #5 with a brass rod and a mallet.
4. Using suitable lifting equipment, slowly remove the jib lift cylinder from the jib.

WARNING

When disassembling the cylinder, use caution to prevent it from falling and getting damaged, and also to avoid impacts that could lead to high-pressure oil leaks.

Inspection

- Inspect the jib pivot pin for wear, scratches, deformation or other damage. Replace the pivot pin if necessary.
- Check the inner race of the pivot pin bearing for scratches, deformation, wear or other damage. Replace the bearing if necessary.
- Check the connecting pin of the jib lift cylinder for wear, scratches, deformation or other damage. Before installation, ensure that the surface of the pin has received protective treatment. Replace the pivot pin if necessary.
- Check the inner race of the platform swing cylinder bearing for scratches, deformation, wear or other damage. Replace the bearing if necessary.
- Check all threaded parts for elongation, thread deformation, torsion or other damage. Replace the part if needed.
- Check all structures of the jib assembly for deformation, cracks, weld separation or other damage. Replace the structure if necessary.

Installation

For installation, follow the disassembly procedure in reverse order.

Swing Cylinder

Check the swing cylinder fasteners

The swing cylinder fasteners are essential for the normal and safe operation of the machine. It is recommended to check the swing cylinder fasteners every 3 months or 250 hours of operation.

1. Make sure the machine is in stowed position. Locate the swing cylinder at the joint between platform and boom.
2. Check if the bolts at positions #1 and #2 of the cylinder are tightened with the correct torque. Refer to the **Torque Specifications** section for the tightening torques.
3. If any fastener is replaced make sure to tighten the fastener with the torque as indicated in the **Torque Specifications** section and apply medium-to-high strength threadlocking adhesive.

Disassembly

1. Remove the platform assembly.

2. Mark and disconnect the hydraulic lines from the swing cylinder and collect the hydraulic oil from the lines with a suitable container. Plug the lines and the ports.
3. Support the swing cylinder with suitable lifting equipment.
4. Remove the fastening bolts and nuts from the pivot pins #4 and #9 of the swing cylinder.
5. Knock out pivot pins #4 and #9 with a brass rod and a mallet.
6. Using suitable lifting equipment, slowly remove the swing cylinder.

Installation

For installation, follow the disassembly procedure in reverse order.

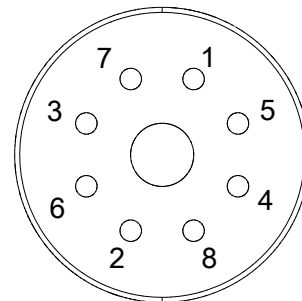


Fig. 2 Tightening Sequence of Swing Cylinder Bolts

Table 6-2 Tightening Torque Table for M10 Top Bolt of Swing Cylinder

First step	Second step	Third step
21 Nm (16 ft-lb)	42 Nm (31 ft-lb)	70 Nm (52 ft-lb)

Upper Leveling Cylinder

WARNING

- **Before loosening or disassembling hydraulic parts (especially the counterbalance valve on the cylinder), the hydraulic pressure of all hydraulic lines should be released and the hydraulic oil should completely cool down.**
- **Disassemble the hydraulic components slowly to prevent the hydraulic oil from splashing and causing injuries.**

Disassembly

1. Set the main boom and the jib to a horizontal position, extend the main boom slightly until the

connecting pivot pin at the cylinder bottom is accessible and can easily be removed.

2. Mark and disconnect the hydraulic lines from the upper leveling cylinder and collect the hydraulic oil from the lines using a suitable container. Plug the lines and the ports.
3. Use suitable lifting equipment to support the platform and jib assembly.
4. Remove the fastening bolt at pivot pin #7 at the piston rod end of the upper leveling cylinder. Do not remove the pivot pin at this time.
5. Remove the retaining ring at shaft #8. Do not remove the shaft at this time.
6. Use suitable lifting equipment to support the piston rod head of the upper leveling cylinder to protect the piston rod from damage.
7. Knock out pivot pin #7 and shaft #8 with a brass rod and mallet.
8. Using suitable lifting equipment, slowly remove the upper leveling cylinder from the main boom.



WARNING

When disassembling the cylinder, use caution to prevent it from falling and getting damaged, and also to avoid impacts that could lead to high-pressure oil leaks.

Installation

For installation, follow the disassembly procedure in reverse order.

3. Mark and disconnect all hydraulic lines from the cable track guide to the platform and collect the hydraulic oil from the lines with a suitable container. Plug the lines and the ports.
4. Remove the hydraulic lines and wiring harnesses from the cable track guide.
5. Support the cable track assembly along its length with suitable lifting equipment.
6. Remove the fastening bolts as indicated by the arrows above.
7. Take appropriate preventive measures and slowly remove the cable track assembly from the boom with the aid of the lifting equipment.
8. To disassemble the cable track separately, simply remove the fastening bolts at both ends of the cable track.

Inspection

- Check all threaded parts for elongation, thread deformation, torsion or other damage. Replace the part if needed.
- Check all components of the cable track assembly for deformation, cracks, weld separation or other damage. Replace the structure if necessary.

Installation

For installation, follow the disassembly procedure in reverse order.

6.3 BOOM

Cable track assembly

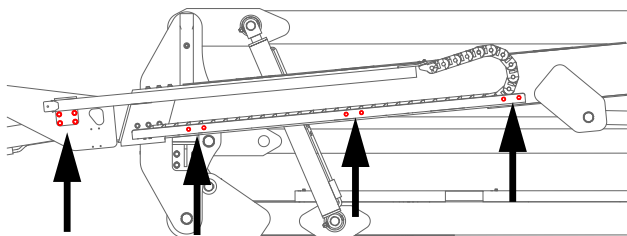


Fig. 3 Fastening Bolts on Cable Track Assembly

Disassembly

1. Make sure the machine is in stowed position.
2. Mark and disconnect the harness connections on the cable track assembly.

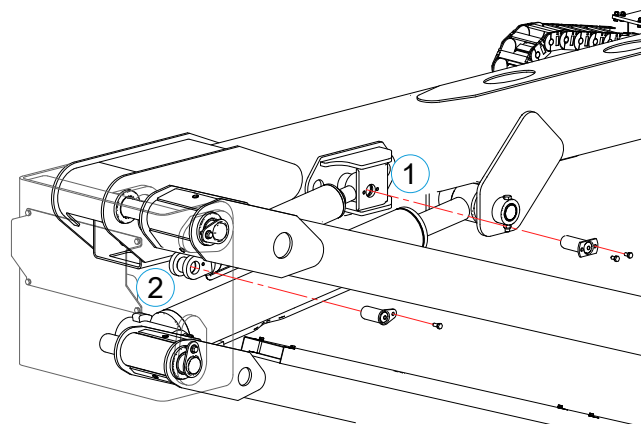


Fig. 4 Lower Leveling Cylinder

⚠ WARNING

- Before loosening or disassembling hydraulic parts (especially the counterbalance valve on the cylinder), the hydraulic pressure of all hydraulic lines should be released and the hydraulic oil should completely cool down.
- Disassemble the hydraulic components slowly to prevent the hydraulic oil from splashing and causing injuries.

Disassembly

1. Raise the boom tube slightly until the lower leveling cylinder is accessible and can be removed easily.
2. Mark and disconnect the hydraulic lines on the lower leveling cylinder and collect the hydraulic oil from the lines with a suitable container. Plug the lines and the ports.
3. Support the lower leveling cylinder with suitable lifting equipment.
4. Remove the retaining bolt at the pivot pin #1, and knock out the pivot pin #1 with a brass rod and mallet.
5. Remove the retaining bolt at pivot pin #2, and drive out pivot pin #2 with a brass rod and mallet.
6. Slowly remove the lower leveling cylinder using the lifting equipment.

⚠ WARNING

When disassembling the cylinder, use caution to prevent it from falling and getting damaged, and also to avoid impacts that could lead to high-pressure oil leaks.

Installation

For installation, follow the disassembly procedure in reverse order.

Main boom lift cylinder

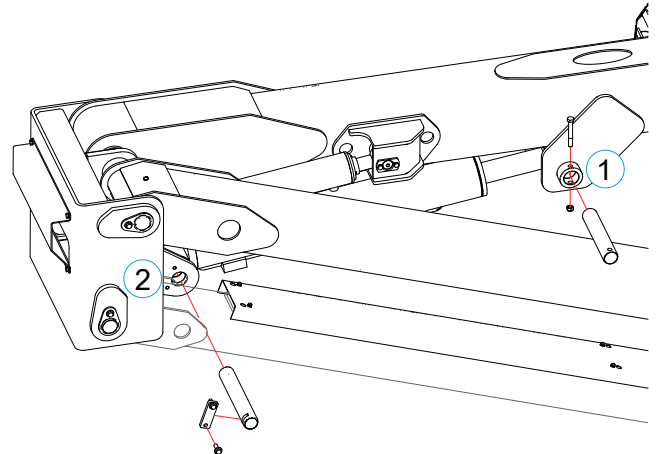


Fig. 5 Main boom lift cylinder

Disassembly

⚠ WARNING

- Before disassembling the lift cylinder, rotate the boom to be parallel to the travel direction of the chassis, and make sure the turntable is locked (lock the slewing pin if so equipped).
- Before disassembling the lift cylinder, place sufficiently strong jacks under the counterweight for support, otherwise the machine may tip over causing severe personal injury and/or machine damage.
- When lifting the boom assembly using lifting equipment, never pass the sling through the drag chain to avoid crushing and breaking the chain.

⚠ WARNING

- Before loosening or disassembling hydraulic parts (especially the counterbalance valve on the cylinder), the hydraulic pressure of all hydraulic lines should be released and the hydraulic oil should completely cool down.
- Disassemble the hydraulic components slowly to prevent the hydraulic oil from splashing and causing injuries.

1. Properly raise the boom to move the pivot shaft connecting the lift cylinder to the boom and turntable outward until it is visible and accessible.
2. Use lifting equipment with sufficient capacity to hoist the main boom assembly (minimum lifting capacity: 5t [11,023 lb]) and support it near the approximate

center of gravity to prevent the boom from falling during disassembly.

3. Mark and disconnect the hydraulic lines on the main boom lift cylinder and collect the hydraulic oil from the lines with a suitable container. Plug the lines and the ports.
4. Support the two ends of the main boom lifting cylinder with suitable lifting equipment.
5. Use suitable lifting equipment to support the upper connecting weldment.
6. Remove the bolt and nut at pivot pin #1 connecting the lift cylinder to the main boom, and drive out pivot pin #1 with a brass rod and mallet.
7. Remove the bolt and clamping plate at pivot pin #2 connecting the lift cylinder to the upper connecting weldment, and drive out pivot pin #2 with a brass rod and mallet.
8. Slowly remove the main boom lift cylinder using the lifting equipment.
9. Slowly lower the boom to stowed position using the lifting equipment.

WARNING

When disassembling the cylinder, use caution to prevent it from falling and getting damaged, and also to avoid impacts that could lead to high-pressure oil leaks.

Installation

For installation, follow the disassembly procedure in reverse order.

WARNING

After installing a new lift cylinder, perform one full lifting movement to fill the cylinder with hydraulic oil and purge any trapped air.

Main Boom Assembly

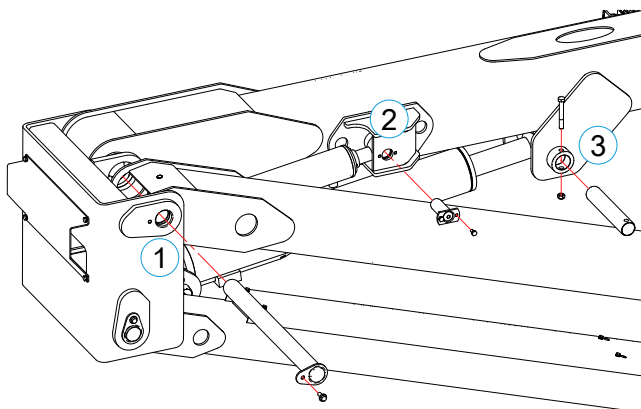


Fig. 6 Main Boom Assembly

Disassembly

WARNING

- **Before disassembling the main boom assembly, rotate the boom to be parallel to the travel direction of the chassis, and make sure the turntable is locked (lock the slewing pin if so equipped).**
- **Before disassembling the main boom assembly, place sufficiently strong jacks under the counterweight for support; otherwise the machine may tip over causing severe personal injury and/or machine damage.**

1. Make sure to remove the platform assembly, the jib boom assembly and the upward leveling cylinder.
2. Raise the boom tube slightly until the main boom lift cylinder is accessible and the main boom can be removed easily.
3. Mark and disconnect all harness connections on the main boom assembly.
4. Mark and disconnect all hydraulic lines on the main boom assembly and collect the hydraulic oil from the lines with a suitable container. Plug the lines and the ports.
5. Use suitable lifting equipment (with a lifting capacity not less than 5 t/11023 lb) to support the main boom tail (near the platform).
6. Reliably support the lower leveling cylinder with suitable lifting equipment.
7. Remove the bolt at the pivot pin #2 connecting the downward leveling cylinder with the main boom assembly, and knock out the pivot pin #2 with a brass rod and mallet.
8. Use suitable lifting equipment to provide reliable support for the main boom lift cylinder.
9. Remove the bolt at the pivot pin #3 connecting the main boom lift cylinder with the main boom assembly, and knock out the pivot pin #3 with a brass rod and mallet.
10. Use suitable lifting equipment (with a lifting capacity not less than 5 t/11023 lb) to support the main boom head (near the turntable).
11. Safely support the upper connecting weldment with suitable lifting equipment.
12. Remove the bolt at the pivot pin #1 connecting the upper connecting weldment with the main boom assembly, and knock out the pivot pin #1 with a brass rod and mallet.

13. With the assistance of the lifting equipment, slowly remove the main boom assembly from the turntable and carefully place it on a suitable support.

Installation

For installation, follow the disassembly procedure in reverse order.

Telescoping section and telescoping cylinder

Disassembly

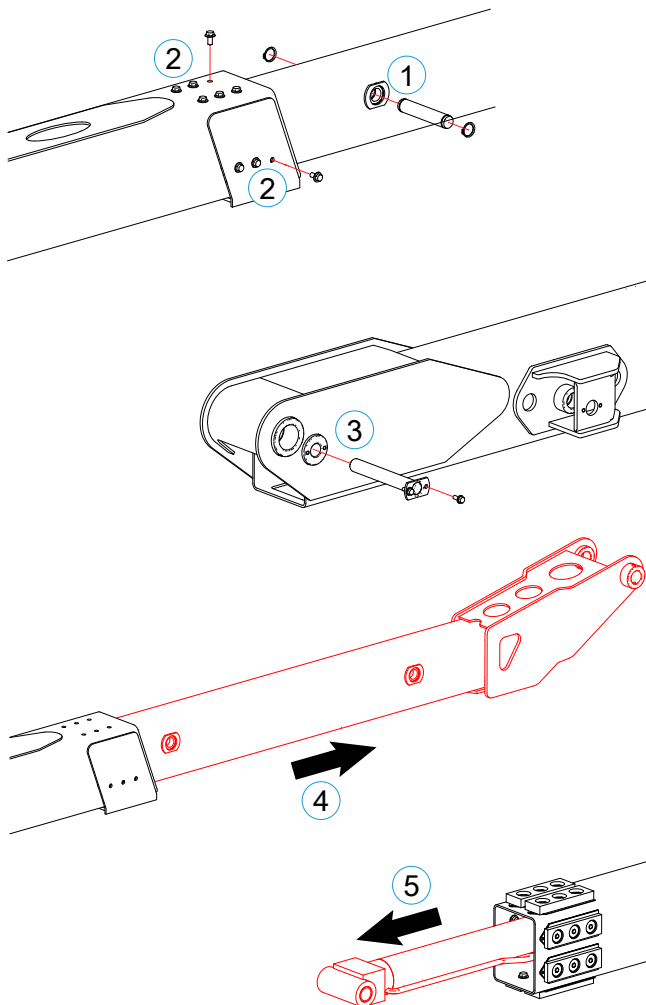


Fig. 7

1. Remove the platform assembly, the jib assembly and the upper leveling cylinder.
2. Remove the main boom assembly and place it on a suitable support.
3. Remove the retaining ring at the pivot pin #3 connecting the telescoping cylinder to the main boom, and drive out pivot pin #3 with a brass rod and mallet.

4. Remove the bolts from the upper and lower surfaces and the left and right sides #2 at the tail end (platform side) of the main boom, and take out the wear pads and shims.
5. Use suitable lifting equipment to support the telescopic boom end.
6. Pull out the telescopic boom together with the telescopic cylinder from the main boom end (as shown in ④) carefully and place it on a suitable support.
7. Remove the retaining ring at the connecting pin #1 that secures the telescopic cylinder piston rod to the telescopic boom and knock out the pin #1 with a brass rod and mallet.
8. Use suitable lifting equipment to support the bottom of the telescopic cylinder and pull the cylinder out of the telescopic boom head (turntable side) carefully and slowly (as shown in ⑤).

NOTICE

When pulling the telescopic cylinder out of the telescopic boom, take extra care to avoid damaging other parts of the boom tube.

9. Before the telescopic cylinder is fully pulled out of the telescopic boom, adjust the lifting equipment to provide sufficient support for the entire cylinder.
10. With the assistance of the lifting equipment, slowly remove the cylinder from the telescopic boom and carefully place it on a suitable support.

Installation

For installation, follow the disassembly procedure in reverse order.

WARNING

After installing a new telescopic cylinder, perform one full extending movement for the main boom to fill the cylinder with hydraulic oil and purge any trapped air.

Articulating boom lift cylinder

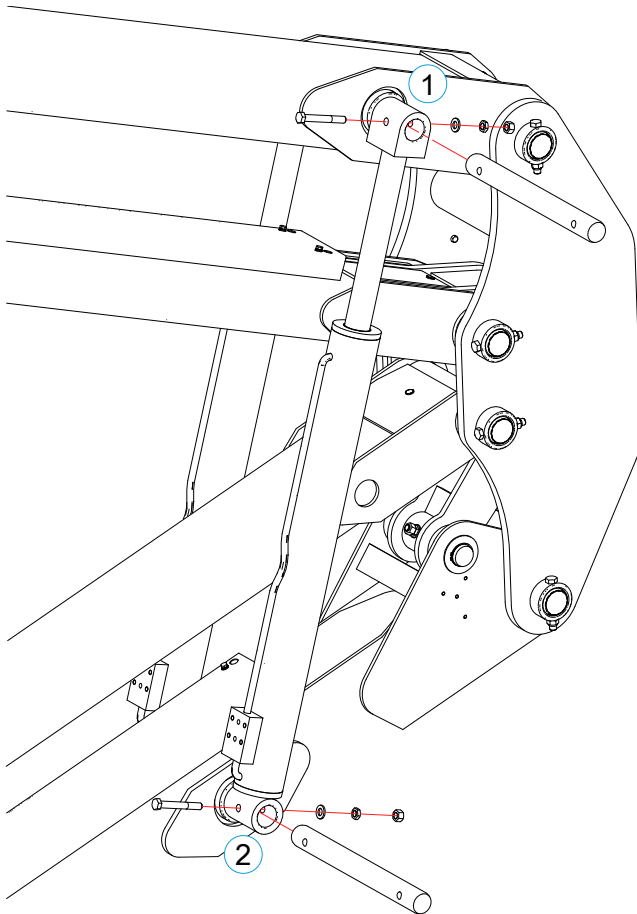


Fig. 8 Articulating boom lift cylinder

Disassembly

WARNING

- Before disassembling the lift cylinder, rotate the boom to be parallel to the travel direction of the chassis, and make sure the turntable is locked (lock the slewing pin if so equipped).
- Before disassembling the lift cylinder, place sufficiently strong jacks under the counterweight for support, otherwise the machine may tip over causing severe personal injury and/or machine damage.

WARNING

When disassembling the cylinder, use caution to prevent it from falling and getting damaged, and also to avoid impacts that could lead to high-pressure oil leaks.

WARNING

- Before loosening or disassembling hydraulic parts (especially the counterbalance valve on the cylinder), the hydraulic pressure of all hydraulic lines should be released and the hydraulic oil should completely cool down.
- Disassemble the hydraulic components slowly to prevent the hydraulic oil from splashing and causing injuries.

1. Place the main boom into horizontal, fully retracted position.
2. Raise the articulated boom slightly until the articulated boom lift cylinder is accessible and can be easily removed.
3. Use suitable equipment to support the main boom and the upper connecting weldment to prevent the boom tube from falling during disassembly.
4. Mark and disconnect the hydraulic lines on the articulated boom lift cylinder and collect the hydraulic oil from the lines with a suitable container. Plug the lines and the ports.
5. Support the two ends of the articulated boom lift cylinder with suitable lifting equipment.
6. Remove the bolt, nut and other fasteners at the pivot pin #1 connecting the articulated boom lift cylinder with the upper connecting rod, and knock out the pivot pin #1 with a brass rod and mallet.
7. Remove the bolt, nut and other fasteners at the pivot pin #2 connecting the articulated boom lift cylinder with the lower connecting rod, and knock out the pivot pin #2 with a brass rod and mallet.
8. Slowly remove the articulated boom lift cylinder using the lifting equipment.
9. Slowly lower the boom to stowed position using the lifting equipment.

Installation

For installation, follow the disassembly procedure in reverse order.

WARNING

After installing a new lift cylinder, perform one full lifting movement for the articulating boom to fill the cylinder with hydraulic oil and purge any trapped air.

WARNING

- Before disassembling the articulating boom assembly, rotate the boom to be parallel to the travel direction of the chassis, and make sure the turntable is locked (if equipped with a rotary pin, make sure the rotary pin is locked).
- Before disassembling the articulating boom assembly, place sufficiently strong jacks under the counterweight for support; otherwise the machine may tip over causing severe personal injury and/or machine damage.

Articulating Boom Assembly

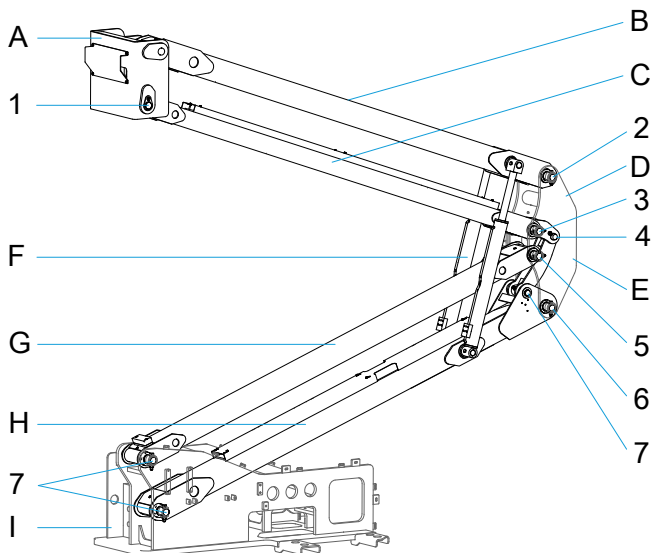


Fig. 9 Articulating Boom Assembly

Table 6-3 Articulating boom assembly

No.	Description
A	Upper connecting weldment
B	Upper connecting rod #1
C	Upper connecting rod #2
D	Lower connecting weldment
E	Pull rod
F	Articulating boom lift cylinder
G	Lower connecting rod #1
H	Lower connecting rod #2
I	Turntable

Disassembly

1. Raise the boom slightly until the articulating boom assembly can be removed easily.
2. Safely support the upper connecting rod 1 and upper connecting weldment with suitable lifting equipment.
3. Remove the main boom assembly, main boom lift cylinder, and lower leveling cylinder.
4. Mark and disconnect all harness connections on the articulating boom assembly.
5. Mark and disconnect all hydraulic lines on the articulating boom assembly and collect the hydraulic oil from the lines with a suitable container. Plug the lines and the ports.
6. Safely support the upper connecting rod 2 and lower connecting weldment with suitable lifting equipment.
7. Remove the nut and bolt at the pivot pin #1 connecting the upper connecting rod with the upper connecting weldment, and knock out the pivot pin #1 with a brass rod and mallet.
8. Slowly remove the upper connecting weldment by means of the lifting equipment.
9. Support the lower connecting rod 2 reliably with suitable lifting equipment.
10. Remove the articulating boom lift cylinder.
11. Remove the retaining nut and bolt at the pin #2 connecting the upper connecting rod 1 with the lower connecting bracket, and knock out the pivot pin #2 with a brass rod and mallet.
12. Slowly remove the upper connecting rod 1 by means of the lifting equipment.
13. Remove the bolt and nut at the pivot pin #3 connecting the upper connecting rod 2 with the lower connecting rack, and knock out the pivot pin #3 with a brass rod and mallet.
14. Use suitable lifting equipment to support the pull rod.
15. Remove the bolt at pivot pin #4 connecting the upper connecting rod to the pull rod, and drive out pivot pin #4 with a brass rod and mallet.

16. Slowly remove the upper connecting rod 2 by means of the lifting equipment.
17. Remove the bolt at the pivot pin #7 connecting the lower connecting rod 2 with the pull rod, and knock out the pivot pin #7 with a brass rod and mallet.
18. Slowly remove the pull rod with the aid of the lifting equipment.
19. Support the lower connecting rod 1 reliably with suitable lifting equipment.
20. Remove the bolt and nut at pivot pin #5 connecting the lower connecting rod to the lower connecting weldment, and drive out pivot pin #5 with a brass rod and mallet.
21. Remove the bolt and nut at the pivot pin #6 connecting the lower connecting rod 2 with the lower connecting rack, and knock out the pivot pin #6 with a brass rod and mallet.
22. Slowly remove the lower connecting weldment by means of the lifting equipment.
23. Remove the bolt and nut at pivot pin #7 connecting the lower connecting rod to the turntable, and drive out pivot pin #7 with a brass rod and mallet.
24. Slowly remove the lower connecting rod by means of the lifting equipment.

Installation

For installation, follow the disassembly procedure in reverse order.

Boom wear pads

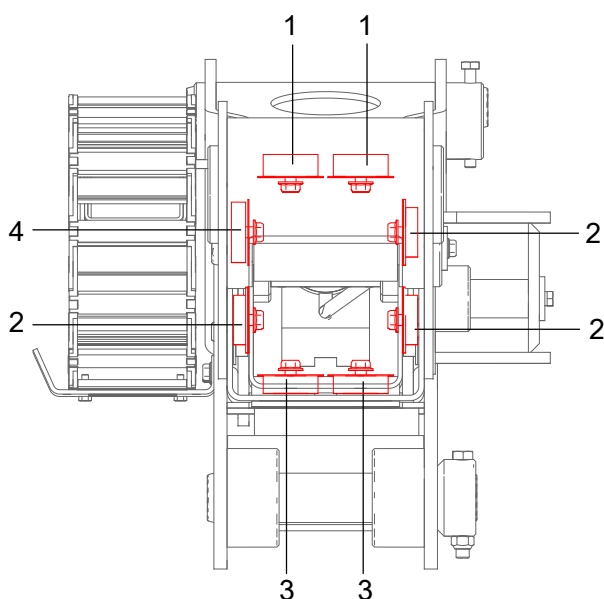


Fig. 10 Boom Head Wear Pads

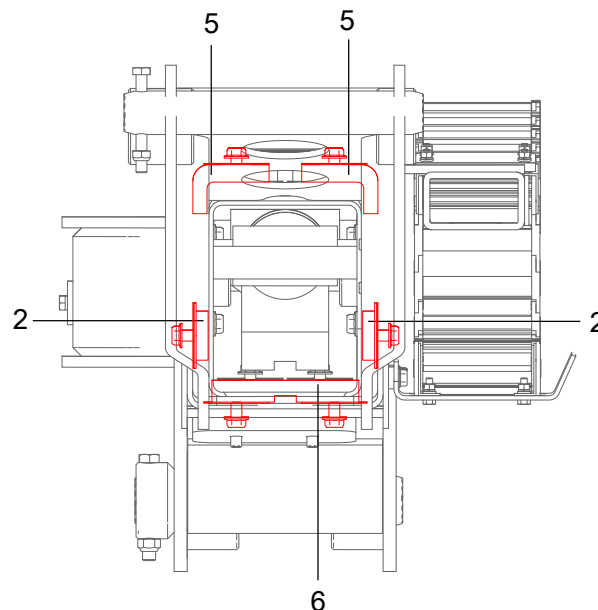


Fig. 11 Boom Tail Wear Pads

Table 6-4 Boom Wear Pad Thickness

No.	Wear pad thickness
1	20 mm (0.79 in)
2	11 mm (0.43 in)
3	16 mm (0.63 in)
4	13 mm (0.51 in)
5	13 mm (0.51 in)/ 16 mm (0.63 in)
6	20 mm (0.79 in)

The boom wear pads are critical for the safe operation of the machine. As a friction pair will develop between each wear pad and the surface of the boom's telescopic section, improper gaskets or continued use of extremely worn pads may result in component damage and unsafe operation. It is recommended to check the boom wear pad thickness once a year or after 1000 hours of operation.

1. Remove the cover plate from the head of the main boom (near the turntable) or the nylon brush at the tail of the main boom (near the platform).
2. Measure the thickness of each wear pad at the head and tail of the main boom.
3. If the telescopic cylinder has wear pads, measure the wear pad thickness after the telescopic cylinder is removed.
4. Compare the measured thickness value of each wear pad with the value specified in the above table, and replace the wear pad assembly in time if the

wear extent of the wear pad is greater than or equal to 3 mm (0.118 in).

NOTICE

The disassembled wear pad cannot be reused and must be replaced with a new wear pad assembly.

Note: When installing the boom wear pads, select shims of appropriate thickness to ensure a unilateral clearance of 0.5–1.5 mm (0.02–0.06 in) between the wear pad and the boom. The following example illustrates the installation for left and right sides of the telescopic boom:

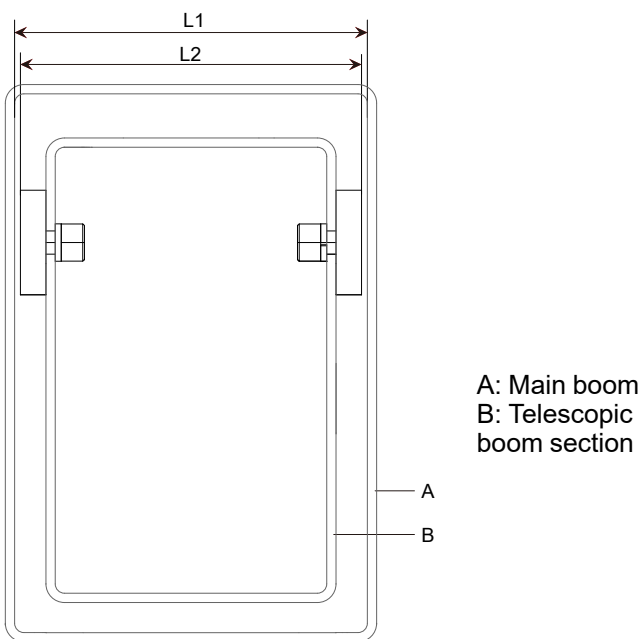


Fig. 12

1. Measuring clearance (L) without shims:

- 1) Align the wear pad with the mounting holes. Apply medium-high strength threadlocker to the bolt threads, then hand-tighten the bolts into the wear pad's mounting holes.
- 2) Measure the distance (L1) between the left and right inner walls of the main boom.
- 3) Measure the outer dimension (L2) of the wear pads on both sides of the telescopic boom.
- 4) Calculate the clearance without shims: $L = L1 - L2$.

2. Total shim thickness (D):

- Ensure $1\text{mm (0.04in)} < L - D < 3\text{mm (0.12in)}$ to determine the required shim thickness range (D). For symmetrical wear pads (e.g., left/right sides), the shim thickness per side is half of the total shim thickness.
3. Adjust the bolt length based on the shim thickness to ensure adequate thread engagement depth. If the engagement depth is less than 6mm (0.24in), apply medium-high strength threadlocker to the bolt threads.
 4. Remove the bolts and wear pad. Insert shims between the wear pad and mounting surface, then re-install and tighten the bolts sequentially with a wrench.
 5. After installation, the bolt end face must be recessed $\geq 2\text{mm (0.08in)}$ below the wear pad's working surface. If not met, adjust bolt length or add flat washers to comply.
 6. Apply grease to the wear pad's working surface (contact area with the main boom inner wall).

This Page Intentionally Left Blank

7 POWER SYSTEM

The machine is powered by one of the following engines and equipped with an auxiliary power system. This manual only provides brief maintenance instructions of the engines. For detailed instructions, please refer to the engine maintenance manual provided with the machine.

7.1 KUBOTA 05-E4B SERIES

Periodic Maintenance Chart

Daily and periodic maintenance is important to keep the engine in good operating condition. To ensure long-time safe operation of the engine, perform periodic maintenance as per the following chart.

Table 7-1 Periodic Maintenance Chart

Check Item	Periodic Maintenance Interval										
	every										
	50 hou- rs	100 hour- s	200 hour- s	400 hour- s	500 hour- s	1 or 2 mon- ths	1 year	800 hour- s	1500 hour- s	3000 hour- s	2 years
* Check fuel hoses and clamp bands	☆										
* Change engine oil (oil pan depth: 110 mm (4.33 in) 125 mm (4.92 in) 130 mm (5.12 in)	★		☆								
* Clean air cleaner element (replace the element after 6 times cleaning)		☆									
Clean fuel filter element		☆									
Check fan belt tension and damage		☆									
Check battery electrolyte level		☆									
* Replace oil filter cartridge (oil pan depth: 110 mm (4.33 in) 125 mm (4.92 in) 130 mm (5.12 in)	★		☆	☆ (BG type)							
Check radiator hoses and clamp bands			☆								
* Check the intake air line			☆								
Replace fuel filter cartridge				☆							

Table 7-1 Periodic Maintenance Chart (continued)

Check Item	Periodic Maintenance Interval										
	every										
	50 hours	100 hours	200 hours	400 hours	500 hours	1 or 2 months	1 year	800 hours	1500 hours	3000 hours	2 years
Clean water jacket and radiator interior					☆						
Replace fan belt					☆						
Recharge battery						☆					
* Replace air filter element							☆				
Check valve clearance								☆			
* Check injection nozzle pressure									☆		
Check injection pump										☆	
Check injection timing										☆	
Change radiator coolant											☆
Replace radiator hoses and clamp bands											☆
* Replace fuel hoses and clamps											☆
* Replace intake air line											☆
Replace battery											☆

Please see the emission warranty statement in detail.

★ Change engine oil and replace oil filter cartridge after the first 50 hours of operation.

* The items listed above (* marked) are registered as emission related critical parts by Kubota in the U.S. EPA non-road emission regulation. As the engine owner, you are responsible for the performance of the required maintenance on the engine according to the above instruction.

Fuel System

Check the Fuel Level

The fuel level can be checked from the energized turntable or platform control panel.

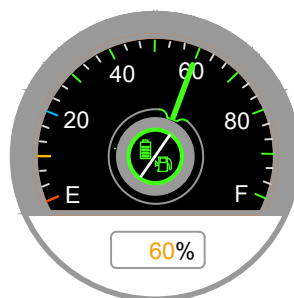


Fig. 1 Fuel level (at the turntable controller)

 


Fig. 2 Fuel level (at the platform controller)

Fill the Fuel Tank

Turn off the engine, fill with correct diesel fuel according to the **Oil Specifications**, and never overfill the tank.

WARNING

- **Do not mix gasoline, alcohol, or their mixture with diesel fuel.**
- **Stop the engine before refueling it. Keep the engine away from fire sources.**
- **During refueling, be careful not to spill fuel. If fuel spills, wipe it up immediately, and wait for the engine to cool before refueling, otherwise it may cause a fire.**
- **When refueling, be sure to stop the engine. Do not smoke while working around the battery or during refueling.**
- **Due to the extremely accurate tolerance match of the diesel injection system, it is critical to keep the fuel clean and free of dirt or water. The dirt or water entering the combustion system can cause severe damage to the fuel pump and injectors.**

Replace Fuel Filter Element

NOTICE

Do not pre-fill the filter, or the filter may be contaminated.

Cartridge-type fuel filter

It is recommended to replace the fuel filter element after 400 hours of operation.

1. If twist protection is installed (optional), remove the clamp first.
2. Position an approved container under the fuel filter to collect the contaminants.
3. Use a special tool to loosen and unscrew the filter element.
4. Collect the drained fuel.
5. Wipe the seal surface of the filter holder with clean, non-fiber cloths.

6. Apply a thin layer of oil to the sealing surface of the new filter.
7. Screw on the new filter by hand until the gasket is touching, and then tighten it.
8. Secure the clamp on the twist protection (optional).
9. Vent the fuel line.
10. Start the engine to check for oil leakage.

Element-type fuel filter

1. Position an approved container under the fuel filter to collect the contaminants.
2. Close the fuel cock.
3. Unscrew the retaining ring and remove the filter cup, and rinse the inside with kerosene.
4. Replace the filter element.
5. Reassemble the fuel filter, keeping out dust and dirt.
6. Vent the fuel lines.
7. Start the engine to check for oil leakage.

Clean Fuel Filter Element

This section is for element-type fuel filter only.

If dust and dirt enter the fuel, the fuel injection pump and injection nozzle will wear quickly. To prevent this, be sure to clean the filter cup periodically.

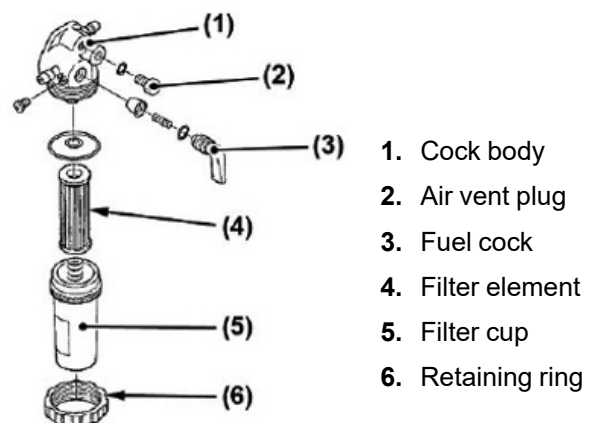


Fig. 3 Fuel filter

1. Position an approved container under the fuel filter to collect the contaminants.
2. Close the fuel cock (3).
3. Unscrew the retaining ring (6) and remove the filter cup (5), and rinse the inside with kerosene.
4. Take out the element (4) and dip it in the kerosene to rinse.

5. After cleaning, reassemble the fuel filter, keeping out dust and dirt.
6. Bleed the fuel system.

Bleed the Fuel Lines

NOTICE

Failure to bleed the fuel lines may bring damage to the high-pressure pump of the injection system.

To avoid false fault messages, do not attempt to start the fuel system while bleeding.

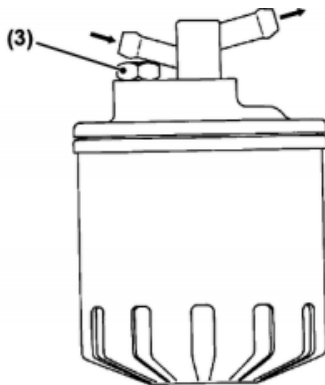


Fig. 4 Cartridge-type

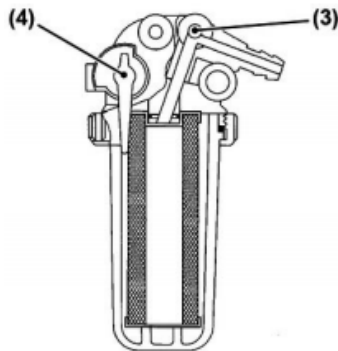


Fig. 5 Element-type

1. Fill the tank with fuel and open the cock (4).
2. Loosen the air vent plug (3) of the fuel filter a few turns.
3. When there is no more air bubbles in the fuel coming out of this air vent plug (3), tighten the air vent plug (3).
4. Open the air vent cock on the top of fuel injection pump.
5. If equipped with electrical fuel feed pump, turn the key on AC position and pump the fuel up for 10 to 15 seconds.

6. If equipped with mechanical fuel feed pump, set the stop lever on stop position and crank the engine for 10 to 15 seconds.
7. Close securely the air vent plug (3) after air bleeding.

Check and Replace Fuel Hose

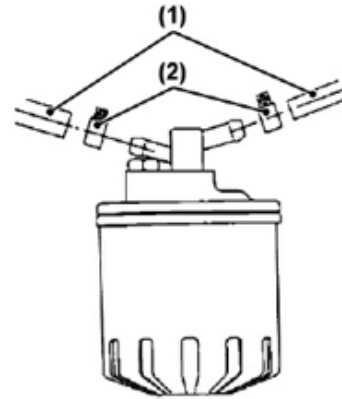


Fig. 6 Cartridge-type

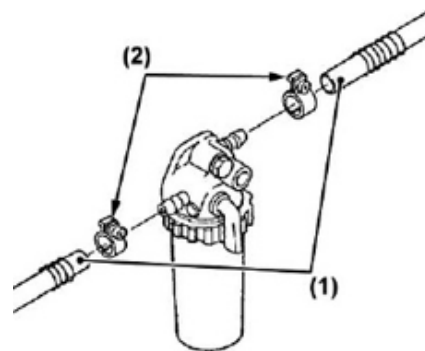


Fig. 7 Element-type

Inspection

Visually check the fuel hose (1) every 50 hours of operation for signs of wear, damage, breakage or loose clamps (2) that could damage the engine. If necessary, replace the damaged hose.

If the clamp (2) is loose, apply oil to the threads and securely retighten it.

Replacement

The fuel hose (1) is made of rubber and ages regardless of the period service. Change the fuel hose together with the clamp every two years.

After the fuel hose and the clamps have been changed, bleed the fuel system.

Lubrication system

Check the Engine Oil Level

1. Turn off the engine.
2. Ensure the machine and engine are on a level surface.
3. Wait until the engine oil temperature drops to below 80°C (176°F), remove the oil level gauge from the engine and wipe it clean with non-fiber cleaning cloths.
4. Reinstall the clean oil level gauge back to its original position.
5. Take the oil level gauge out again and check the oil level, which should be between the FULL (HOT) mark and LOW (COLD) mark on the dipstick.
6. If necessary, fill with correct engine oil to the FULL (HOT) mark on the dipstick according to the **Oil Specifications**, and do not overfill the tank.

Change engine oil

It is recommended to change the engine oil after the first 50 hours of operation, and afterwards every 200 hours of operation.

NOTICE

- Every time the engine oil is changed, the engine oil filter must also be replaced.
- Changing the oil with the engine warmed up can make the engine oil flow smoother and remove more impurities.

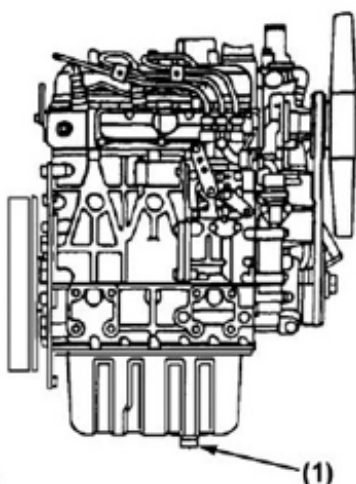


Fig. 8

1. Before changing the oil, warm up the engine so that the engine oil reaches approximately 80°C (176°F), and then turn off the engine.
2. Make sure that the machine and engine are level.
3. Place an appropriate oil-collecting vessel under the engine oil drain valve (1).
4. Open the drain valve (1) to allow the oil to flow out.



WARNING

Hot engine oil poses a risk of burns, so avoid contact with hot oil when draining oil.

5. Reinstall the drain valve after the oil is fully drained (1).
6. Fill with correct and clean engine oil according to the **Oil Specifications**, and never overfill the tank.
7. Warm up the engine so that the engine oil reaches approximately 80°C (176°F) and then shut down the engine.
8. Check the oil level, which should be in the proper position.

Replace Engine Oil Filter Element

It is recommended to replace the engine oil filter element after the first 50 hours of operation, and afterwards every 200 hours of operation (for BG engines: every 400 hours of operation thereafter).

NOTICE

Do not pre-fill the filter, or the filter may be contaminated.

1. Place an appropriate oil-collecting vessel under the oil filter.
2. Use a special tool to loosen and unscrew the filter cartridge.
3. Collect the drained fuel.
4. Wipe the seal surface of the filter holder with clean, non-fiber cloths.
5. Apply a thin layer of oil to the sealing surface of the new filter.
6. Screw in the new filter by hand until the gasket contacts the seal surface, then tighten it with proper torque.

Cooling system

WARNING

- Do not shut down the engine abruptly. Allow it to idle without load for 5 minutes before shutting down.
- Maintenance operations should only be performed after the engine and radiator have completely cooled down (more than 30 minutes after stopping).
- Do not remove the radiator cap when the coolant temperature is high. When cooled enough to touch, rotate the cap to the first stop to release excess pressure. Then, fully remove the cap. If overheating occurs, steam may surge from the radiator or reservoir, causing severe burns.

It is recommended to change the coolant every two years.

Check the Coolant Level

1. Turn off the engine.
2. Make sure that the machine and engine are level.
3. Without recovery tank: After the coolant temperature drops to below 50°C (122°F), remove the radiator cap (1) slowly and check to see that the coolant level is just below the port.

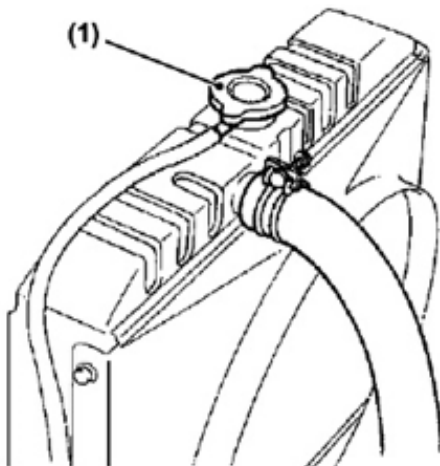


Fig. 9 Radiator cap

4. With recovery tank: Check to see that the coolant level lies between FULL (A) and LOW (B) marks.

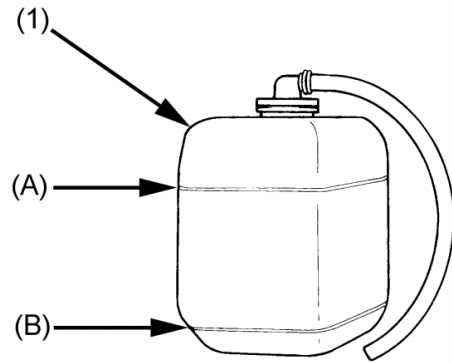


Fig. 10 Recovery tank

5. If necessary, fill with correct coolant according to the **Oil Specifications**, and do not overfill the tank.

Empty the Cooling System

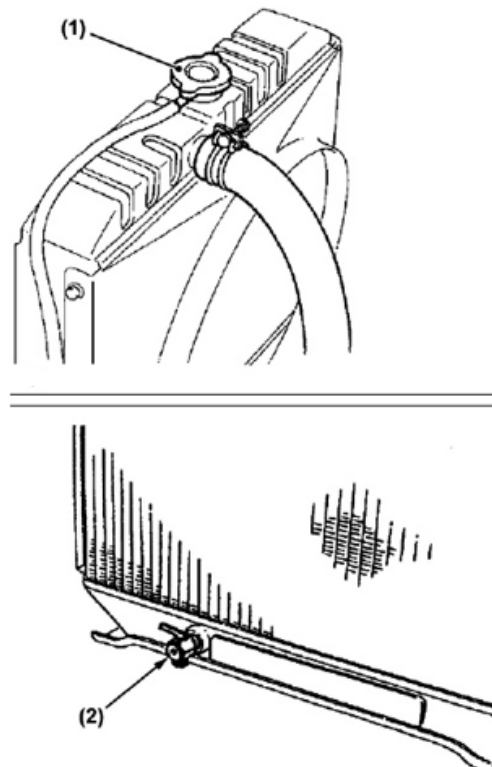


Fig. 11 Radiator

1. Radiator cap
2. Drain valve


1. After the engine and radiator have cooled sufficiently (to the temperature below 50°C/122°F), carefully remove the radiator cap will be displayed at the top of the main interface.

2. Place an appropriate container under the drain valve.
3. Open the drain valve at the bottom of the radiator will be displayed at the top of the main interface.
4. After all coolant is drained, close the drain valve will be displayed at the top of the main interface.
5. Fill with clean water and cooling system cleaner from the radiator cap.
6. Follow directions of the cleaner instructions.
7. If necessary, fill with correct coolant according to the **Oil Specifications** , and do not overfill the tank.

Fill Coolant

1. After the engine and radiator have cooled sufficiently (to the temperature below 50°C/122°F), remove the radiator cap.
2. Add correct coolant until the coolant level is even with the engine coolant supply port according to the **Oil Specifications** . Make sure that air bubbles do not develop as you fill the radiator.
3. Reinstall the radiator cap.
4. With recovery tank: Pour coolant into the recovery tank slowly until the coolant level reaches the FULL (A) mark. Make sure that air bubbles do not develop as you fill the radiator.
5. Run the engine until it reaches operating temperature. Check the coolant level in the radiator and recovery tank, and fill with coolant as needed.

Check and Replace Radiator Hoses

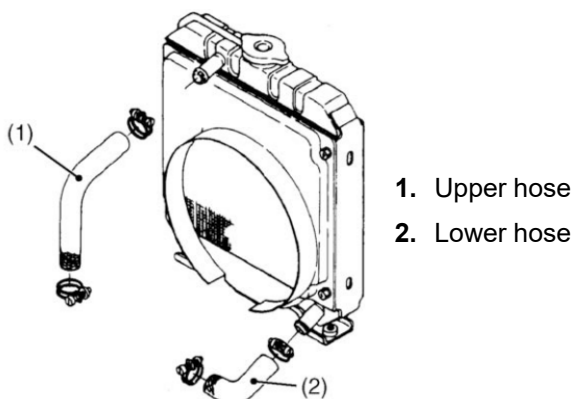

1. Upper hose
2. Lower hose

Inspection

Visually inspect the radiator hoses after 6 months or every 200 hours of operation (whichever comes first.) for signs of wear, damage, breakage or loose clamps that could damage the engine. If necessary, replace the damaged hose.

If the clamp is loose, apply oil to the threads and securely retighten it.

Replacement

The radiator hose is made of rubber and tends to age. Change the radiator hose together with the clamp every two years.

1. Drain the coolant.
2. Loosen the clamp.
3. Remove the upper hose and lower hose.
4. Replace with new upper and lower hoses and clamp.
5. Tighten the clamp.
6. Add correct coolant to the FULL mark according to the **Oil Specifications** .

Intake system

Inspect and Replace Intake Air Hose

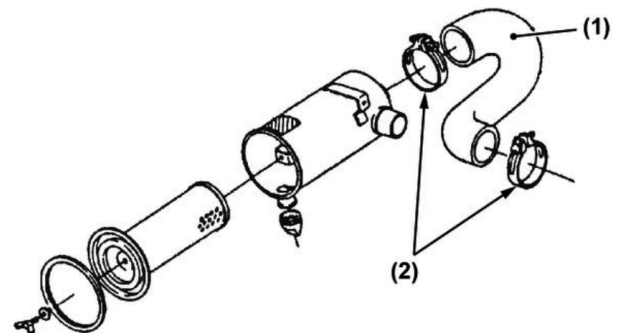


Fig. 12 Radiator

1. Intake air hose
2. Clamp

Inspection

Visually inspect the intake air hose after 200 hours of operation for signs of wear, damage, breakage or loose clamps that could damage the engine. If necessary, replace the damaged hose.

If the clamp is loose, apply oil to the threads and securely retighten it.

Replacement

The intake air hose is made of rubber and tends to age. Change the intake air hose together with the clamp every two years.

1. Loosen the clamp.
2. Remove the intake air hose and clamp.
3. Replace with a new intake air hose and clamp.
4. Tighten the clamp.

Clean and Replace Air Cleaner Element

The air cleaner uses a dry element. Never apply oil to it.

It is recommended to clean the air cleaner element after 100 hours of operation.

It is recommended to replace the air cleaner element every year or after 6 times of cleaning.

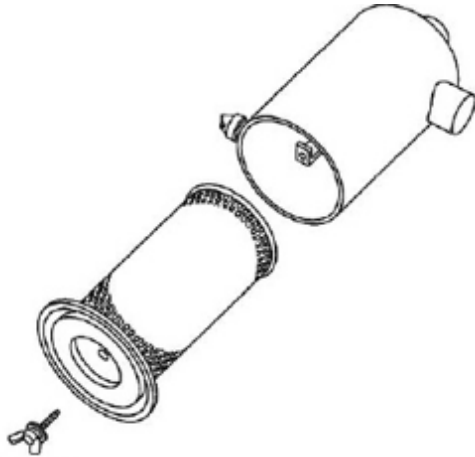


Fig. 13 Air filter

Cleaning

1. Remove the air cleaner element.
2. Use clean dry compressed air on the inside of the element. Pressure of compressed air must be under 205 kPa (30 psi).
3. Maintain reasonable distance between the nozzle and the filter.

Replacement

1. Remove the air cleaner element.
2. Replace with a new air cleaner element.


Belt drive

WARNING

- Do not carry out work on the belt drive unless the engine is at standstill.
- For dual-belt drive systems, if there is wear or damage to one of the V-belts, both belts should be replaced simultaneously.
- After repairs: Check that all protective devices have been installed and that all tools have been removed from the engine.

Check Fan Belt


- **Check the fan belt for damage.** If the fan belt is damaged, replace it.

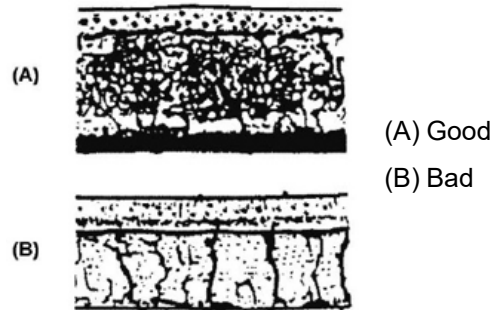

(A) Good

(B) Bad

- **Check if the fan belt is worn and sunk in the pulley groove.** If the fan belt is nearly worn out and deeply sunk in the pulley groove, replace it.

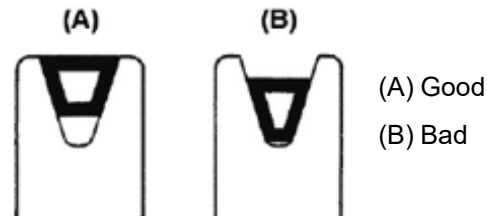

(A) Good

(B) Bad

- **Check if the fan belt tension is appropriate.**


1. Measure the fan belt tension between the fan drive pulley and alternator pulley with a belt tensiometer.
2. If the belt tensiometer is not available, use the alternative method (deflection method): Measure the deflection, depressing the belt halfway between the fan drive pulley and alternator pulley at specified force.
3. If the measurement is not within the factory specifications, loosen the alternator mounting screws and relocate the alternator to adjust.

Replace Belt

It is recommended to replace the fan belt after 500 hours of operation.

1. Remove the alternator.
2. Remove the fan belt.
3. Replace with a new fan belt.
4. Install the alternator.
5. Check the fan belt tension.

7.2 KUBOTA ENGINE V2403-CR-TIE4

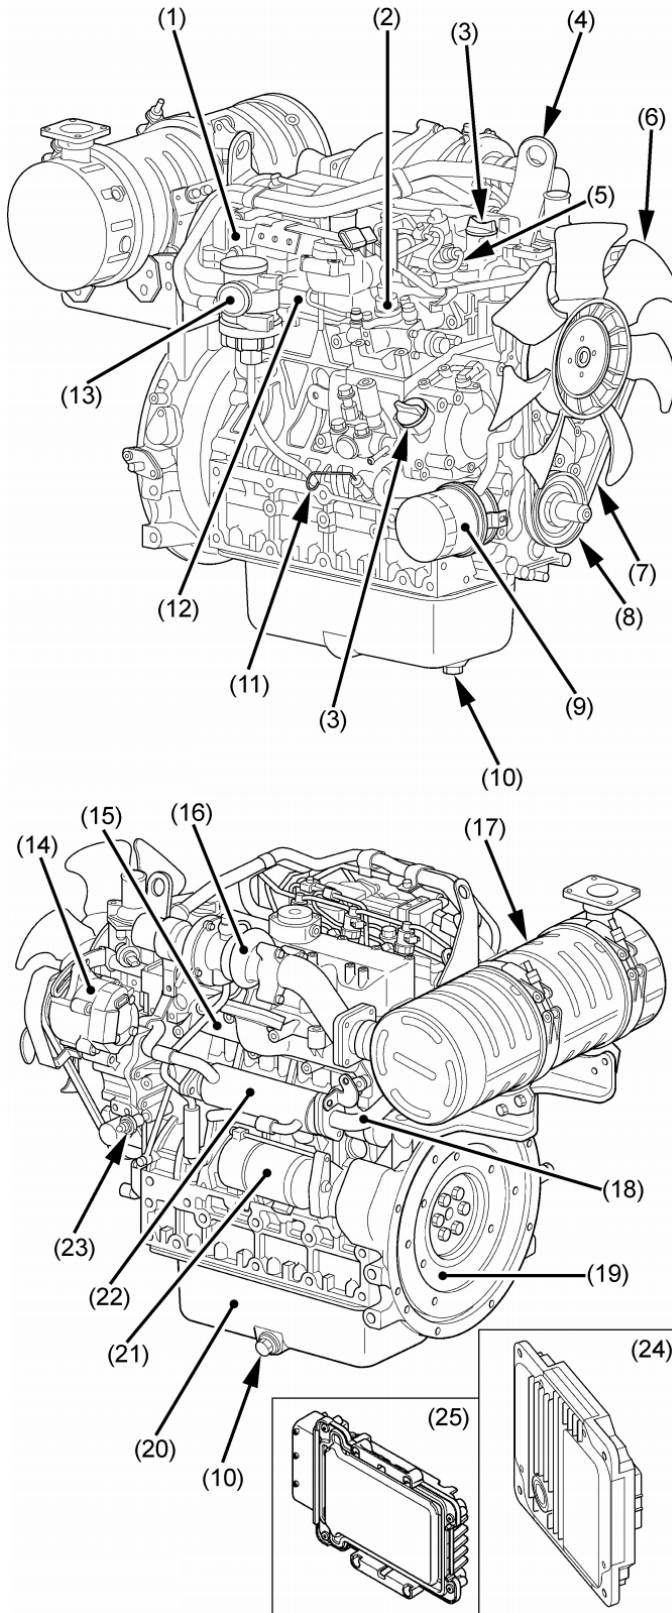

1. EGR valve
 2. Supply pump
 3. Oil filler cap
 4. Engine lifting hook
 5. Rail
 6. Cooling fan
 7. Fan belt
 8. Fan drive pulley
 9. Oil filter element
 10. Oil drain plug
 11. Dipstick
 12. Intake manifold
 13. Oil-gas separator
 14. Generator
 15. Exhaust manifold
 16. Turbocharger
 17. Diesel oxidation catalyst (DOC)
 18. EGR pipe
 19. Flywheel
 20. Oil pan
 21. Starter
 22. EGR cooler
 23. Oil pressure switch
 24. Engine control unit (ECU)
 25. Engine control unit (ECU)
- Note:** #24 and #25 are interchangeable.

Periodic Maintenance Chart

Daily and periodic maintenance is important to keep the engine in good operating condition. To ensure long-time safe operation of the engine, perform periodic maintenance as per the following chart.

Table 7-2 Periodic Maintenance Chart

Check Item	Periodic Maintenance Interval										
	Daily	Initial 50 hour- s	Every 50 hour- s	Every 250 hour- s	Every 400 hour- s	Every 500 hour- s	Every 1000 hour- s	Every 1500 hour- s	Every 3000 hour- s	Every year	Every two years
Check engine oil level	○										
Check fuel level	○										
Check coolant level	○										
Check fan belt	○										
Change engine oil		○			○						
Change oil filter element		○			○						
Check fuel hoses and clamps			○								
Check and drain oil-water separator (Type 1)			○								
Clean air filter element (replace after 6 cleanings)				○							
Adjust fan belt tension				○							
Check radiator hoses and clamps				○							
Check intake air hose				○						○	
Replace fuel filter						○					
Clean oil-water separator (Type 1)						○					
Clean inside of fuel tank						○					
Clean water jacket and radiator interior						○					

Table 7-2 Periodic Maintenance Chart (continued)

Check Item	Periodic Maintenance Interval										
	Daily	Initial 50 hour- s	Every 50 hour- s	Every 250 hour- s	Every 400 hour- s	Every 500 hour- s	Every 1000 hour- s	Every 1500 hour- s	Every 3000 hour- s	Every year	Every two years
Replace fan belt						○					○
Replace oil- water separator filter (Type 2)						○				○	
Check valve clearance							○				
*1 Check injector (using Diagmaster)								○			
*1 Check EGR cooler								○			
*1 Replace oil- water separator element								○			
*1 Check PCV valve								○			
*1 Check turbocharger									○		
*1 *2 Clean DPF									○		
*2 Check EGR system (using Diagmaster)									○		
Replace air filter element										○	
*1 Check DPF differential pressure pipes and hoses										○	
Check EGR piping										○	
Check exhaust manifold (cracks, leaks, and mounting bolts)										○	
Replace oil- water separator rubber hose											○
*2 Replace rubber hose of differential pressure sensor											○

Table 7-2 Periodic Maintenance Chart (continued)

Check Item	Periodic Maintenance Interval										
	Daily	Initial 50 hour- s	Every 50 hour- s	Every 250 hour- s	Every 400 hour- s	Every 500 hour- s	Every 1000 hour- s	Every 1500 hour- s	Every 3000 hour- s	Every year	Every two years
Replace intake hose (after air flow sensor) and intercooler hose											○
Replace EGR cooler hose											○
Replace water transfer hose											○
Replace lubrication oil hose											○
Replace radiator coolant (long-life coolant)											○
Replace radiator hoses and clamps											○
Replace fuel hoses and clamps											○
Replace intake air hose											○

Supplemental notes:

- If the annual usage time of the battery is less than 100 hours, check its electrolyte annually (applicable only to refillable batteries).
- According to the U.S. Environmental Protection Agency (U.S. EPA) non-road emission standards, the above items marked with *1 are classified by Kubota as critical components related to emissions. As the owner of the engine, you are responsible for performing the necessary maintenance on the engine in accordance with the above instructions. For details, refer to the warranty statement.
- Items not marked with *1 above are not required to maintain the validity of the emissions-related warranty.
- *2: applies only to D1803-E4, TE4, V2403-E4, TE4 models.
- Failure to perform maintenance may cause issues and lead to significant degradation of engine performance.

Fuel System

Check the Fuel Level

The fuel level can be checked from the energized turntable or platform control panel.

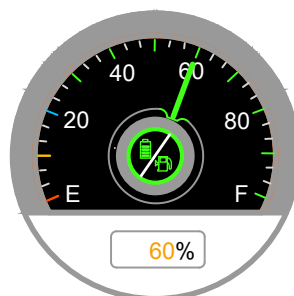


Fig. 14 Fuel level (at the turntable controller)



Fig. 15 Fuel level (at the platform controller)

Fill the Fuel Tank

Turn off the engine, fill with correct diesel fuel according to the **Oil Specifications**, and never overfill the tank.

WARNING

- Do not mix gasoline, alcohol, or their mixture with diesel fuel.
- Stop the engine before refueling it. Keep the engine away from fire sources.
- During refueling, be careful not to spill fuel. If fuel spills, wipe it up immediately, and wait for the engine to cool before refueling, otherwise it may cause a fire.
- When refueling, be sure to stop the engine. Do not smoke while working around the battery or during refueling.
- Due to the extremely accurate tolerance match of the diesel injection system, it is critical to keep the fuel clean and free of dirt or water. The dirt or water entering the combustion system can cause severe damage to the fuel pump and injectors.

Check Fuel Hoses and Clamps

Inspect fuel hoses and clamps every 50 hours of operation.

1. Check fuel hoses and clamps for damage.
2. If fuel hoses or clamps are damaged, replace them.
3. If clamps are loose, apply oil to the threads and re-tighten them properly.

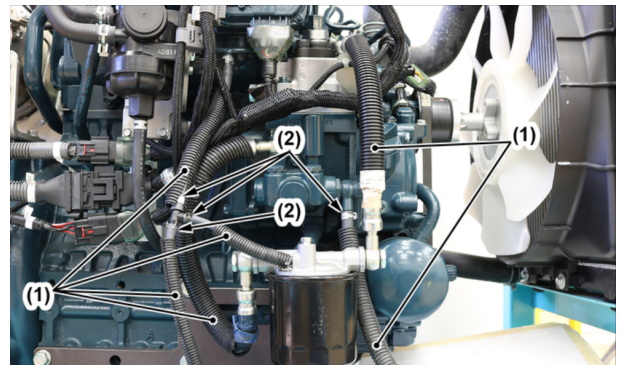


Fig. 16 Fuel hoses and clamps

- 1) Fuel hose
- 2) Clamp

Note:

- Replace fuel hoses and clamps every 2 years.
- After replacing fuel hoses and clamps, bleed the fuel system.

Replace Fuel Filter

Replace the fuel filter every 500 hours of operation.

1. Remove the fuel filter element using a filter wrench.

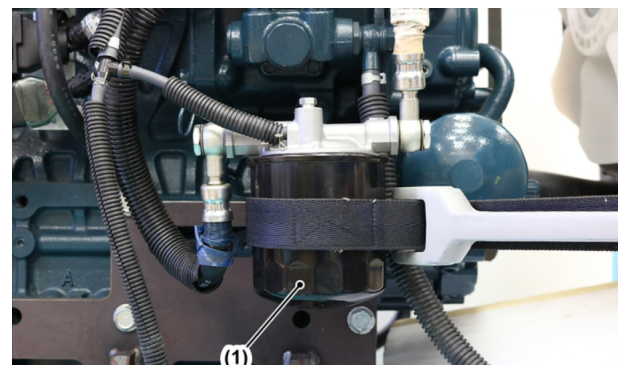


Fig. 17 Fuel Filter Element

2. Apply a thin layer of fuel to the surface of the new filter gasket.
3. Screw the new filter element on by hand until it contacts the seal, then tighten it into position.
4. Open the fuel valve and bleed the fuel system.
5. Run the engine for a while and check for fuel leakage from the filter.

Lubrication system

Check the Engine Oil Level

1. Turn off the engine.
2. Ensure the machine and engine are on a level surface.
3. Check the engine oil level before starting the engine or at least 5 minutes after stopping it.
4. Wait until the oil temperature cools down to below 80°C (176°F). Then, remove the engine oil dipstick and wipe it clean with a non-fiber cloth.

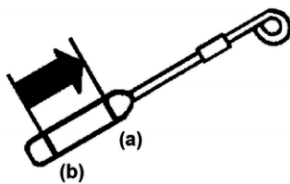
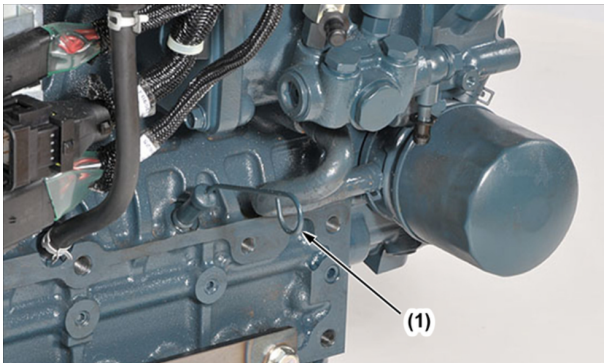


Fig. 18 Dipstick

5. Reinstall the clean dipstick back to its original position.
6. Remove the dipstick again and check the oil level. The oil level should be between the upper mark (a) and lower mark (b) on the dipstick.
7. If necessary, refill with the correct type of oil according to the **Oil Specifications** until the oil level reaches the upper mark. Do not overfill.

Change Engine Oil

Replace the engine oil after the first 50 hours of operation, and then every 400 hours or once a year thereafter (whichever comes first).

1. Ensure the machine and engine are on a level surface.

2. Start the engine and warm it up for approximately 5 minutes.
3. Place an appropriate oil container under the engine drain plug.

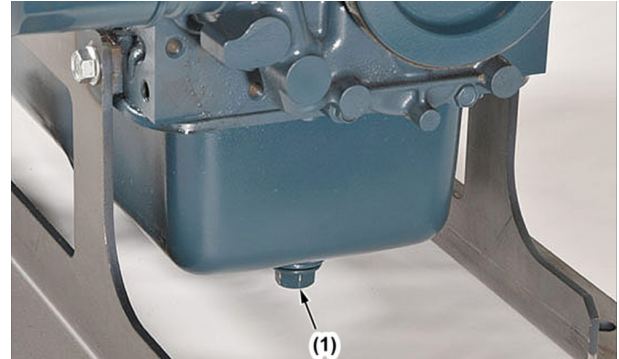


Fig. 19 Drain plug

4. Remove the drain plug located at the bottom of the engine and allow the oil to drain completely.
5. Tighten the drain plug securely.
6. Refill with the correct type of oil according to the **Oil Specifications** until the oil level reaches the upper mark on the dipstick. Do not overfill.

Replace Engine Oil Filter Element

The engine oil filter element should be replaced after the first 50 hours of operation, and then every 400 hours thereafter.

WARNING

Before replacing the engine oil filter element, be sure to stop the engine and allow it to cool sufficiently.

1. Remove the engine oil filter element using a filter wrench.

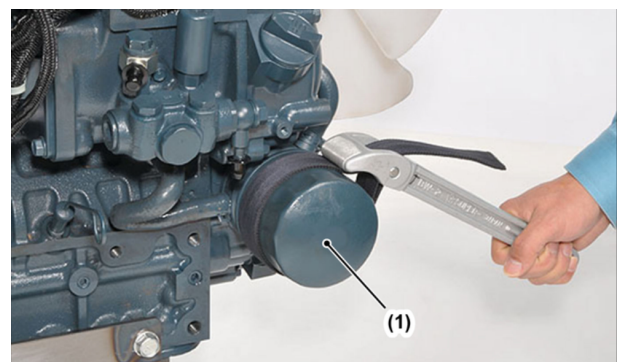


Fig. 20 Engine Oil Filter Element

2. Apply a thin layer of engine oil to the gasket of the new filter element.
3. Install the filter element by hand. Do not overtighten, as this may cause deformation of the rubber gasket.
4. Check for oil leakage from the seal.
5. After replacing the filter element, the oil level may drop slightly. Check the oil level and, if necessary, add new engine oil until the level is between the upper mark and lower mark on the dipstick.
6. Wipe off any residual oil on the machine thoroughly.

Cooling system

WARNING

- Do not shut down the engine abruptly. Allow it to idle without load for 5 minutes before shutting down.
- Maintenance operations should only be performed after the engine and radiator have completely cooled down (more than 30 minutes after stopping).
- Do not remove the radiator cap when the coolant temperature is high. When cooled enough to touch, rotate the cap to the first stop to release excess pressure. Then, fully remove the cap. If overheating occurs, steam may surge from the radiator or reservoir, causing severe burns.

It is recommended to change the coolant every two years.

Check Coolant Level

NOTICE

- Do not remove the radiator cap when the engine is hot. Wait until the engine has cooled, then slightly loosen the radiator cap to release pressure before fully removing it.
- When adding coolant, bleed the air from the engine coolant passages. Shaking the upper and lower radiator hoses can help remove trapped air in the engine.
- Always ensure the radiator cap is securely tightened. A loose or improperly sealed cap may cause coolant leakage and result in engine overheating.

1. Ensure the machine and engine are on a level surface.
2. Remove the radiator cap only after the engine has completely cooled down.

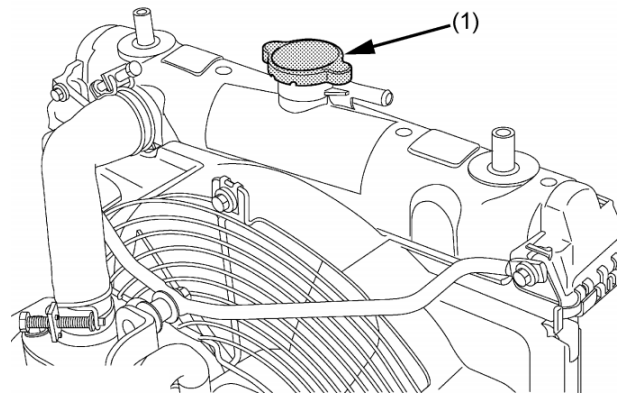


Fig. 21 Radiator cap

3. If no coolant reservoir is installed, ensure the coolant level is just below the filler neck opening.
4. If the radiator is equipped with a coolant reservoir, make sure the coolant level in the tank is between the full mark (A) and low mark (B).

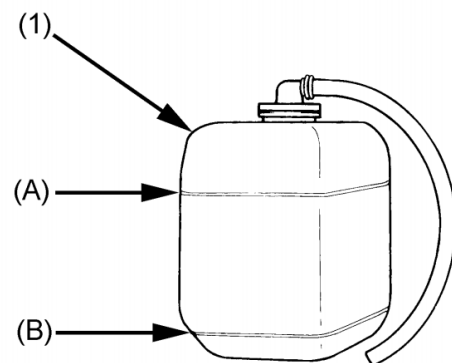


Fig. 22 Coolant reservoir

5. If necessary, refill with correct type of coolant according to the **Oil Specifications** until the proper level is reached. Do not overfill the tank.

Change Coolant

1. Remove the radiator cap only after the engine has completely cooled down.
2. Locate the drain valve at the bottom of the radiator and place a suitable container under the drain plug.

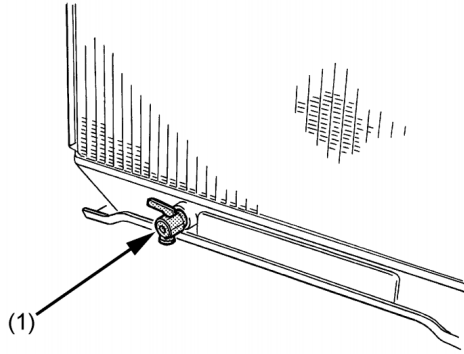


Fig. 23 Drain valve

3. Open the drain valve and remove the EGR cooler hose.


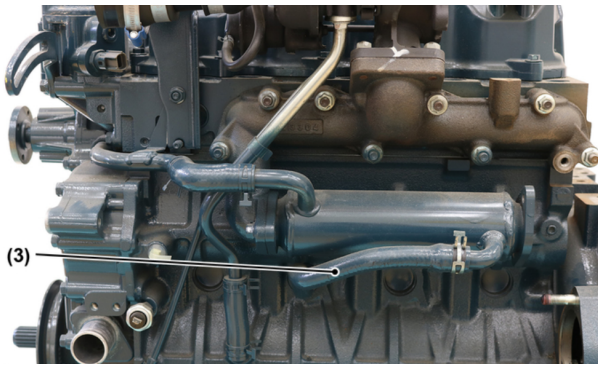


Fig. 24 EGR Cooler Hose

4. After all the coolant has been drained, close the drain valve and reinstall the EGR cooler hose.
5. Fill the system with clean water and a cooling system cleaning solution, and follow the instructions provided with the cleaning solution.
6. After flushing, fill the radiator with the correct coolant according to the **Oil Specifications** until it reaches the filler neck. Do not overfill the tank.
7. Reinstall the radiator cap.
8. If the radiator is equipped with a reservoir tank, fill it with the correct coolant according to the **Oil Specifications** up to the full mark (A).
9. Start the engine and let it run for several minutes.
10. Stop the engine and allow the coolant temperature to decrease.
11. Check the coolant level in the radiator and reservoir tank, and add coolant if necessary.

Check and Replace Radiator Hoses

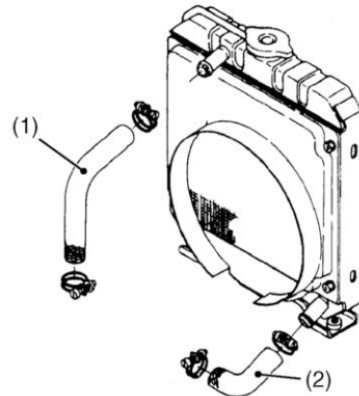

1. Upper hose
2. Lower hose

Inspection

Visually inspect the radiator hoses after 6 months or every 200 hours of operation (whichever comes first.) for signs of wear, damage, breakage or loose clamps that could damage the engine. If necessary, replace the damaged hose.

If the clamp is loose, apply oil to the threads and securely retighten it.

Replacement

The radiator hose is made of rubber and tends to age. Change the radiator hose together with the clamp every two years.

1. Drain the coolant.
2. Loosen the clamp.
3. Remove the upper hose and lower hose.
4. Replace with new upper and lower hoses and clamp.
5. Tighten the clamp.
6. Add correct coolant to the FULL mark according to the **Oil Specifications**.

Intake system

Clean and Replace Air Filter Element

NOTICE

- The primary filter element should be replaced once a year or after every 6 cleanings.
- The air filter uses a dry-type filter element. Never apply engine oil.
- Do not operate the engine with the filter element removed.
- Do not touch the secondary filter element unless replacement is required.

Clean the primary air filter element

1. Remove the dust cup.
2. Remove the primary filter element.
3. Clean the inside of the primary filter element using clean, dry compressed air.
4. Install the removed components.

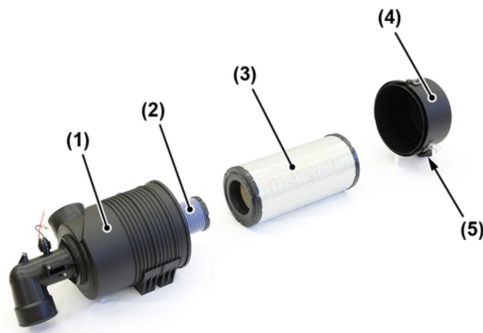


Fig. 25 Air filter

- 1) Air filter housing
- 2) Secondary filter element
- 3) Primary filter element
- 4) Dust cup
- 5) Exhaust valve

Replace air filter element

1. Remove the dust cup.
2. Remove the used primary and secondary air filter elements.
3. Replace with new primary and secondary air filter elements.
4. Install the removed components.

Inspect and Replace Intake Hose

NOTICE

To avoid serious engine damage, prevent dust from entering the intake system.

Inspection

1. Ensure the intake hose is correctly connected.
2. Visually check for cracks, air leaks, and any other abnormalities.
3. If the hose clamp is loose, apply engine oil to the threads and retighten properly.

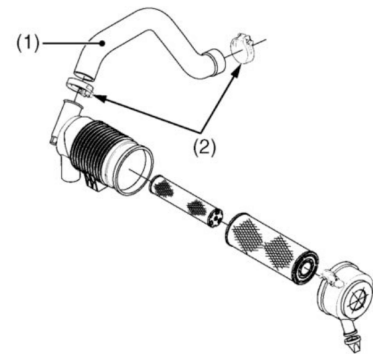


Fig. 26

- 1) Intake hose
- 2) Hose clamp

Replacement

1. Loosen the hose clamp.
2. Remove the intake hose and hose clamp.
3. Replace with a new intake hose and new hose clamp.
4. Properly tighten the hose clamp.

Belt drive

WARNING

- Do not carry out work on the belt drive unless the engine is at standstill.
- For dual-belt drive systems, if there is wear or damage to one of the V-belts, both belts should be replaced simultaneously.
- After repairs: Check that all protective devices have been installed and that all tools have been removed from the engine.

Adjust Fan Belt Tension

1. Stop the engine.
2. Apply appropriate pressure to the belt between the pulleys with your thumb.
3. If the tension is incorrect, loosen the alternator mounting bolts and use a lever between the alternator and engine block to pull the alternator outward until the belt tension reaches the appropriate range.
4. Replace fan belt if it is damaged.

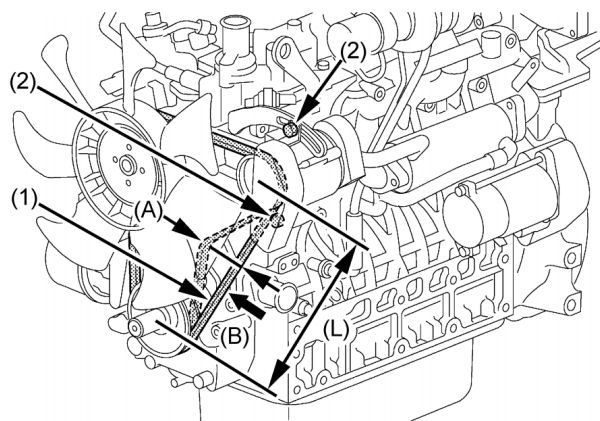


Fig. 27 Adjust Fan Belt Tension

- 1) Fan belt
- 2) Bolt and nut

Table 7-3 Fan Belt Tension and Deflection

Proper Fan Belt Tension	
Adjustment	Replacement
237–403 N	460–680 N
Deflection A	
10–12 mm (0.39–0.47 in) (under a load of 10 kgf/22.1 lbs)	

NOTICE



- A loose or damaged belt or a damaged fan may cause overheating or insufficient charging. Adjust or replace the belt immediately.
- Measure immediately after installing the belt while the pulleys remain stationary. The measurement position should be at position B in the figure, and the pulley spacing should be L.
- If a tension gauge is unavailable, adjust using deflection. The deflection when pressing the belt at the midpoint of the pulley spacing in the figure should be A.

Replace Belt

It is recommended to replace the fan belt after 500 hours of operation.

- Remove the alternator.
- Remove the fan belt.
- Replace with a new fan belt.
- Install the alternator.
- Check the fan belt tension.

7.3 KUBOTA ENGINE V2403BM-DI-CT04

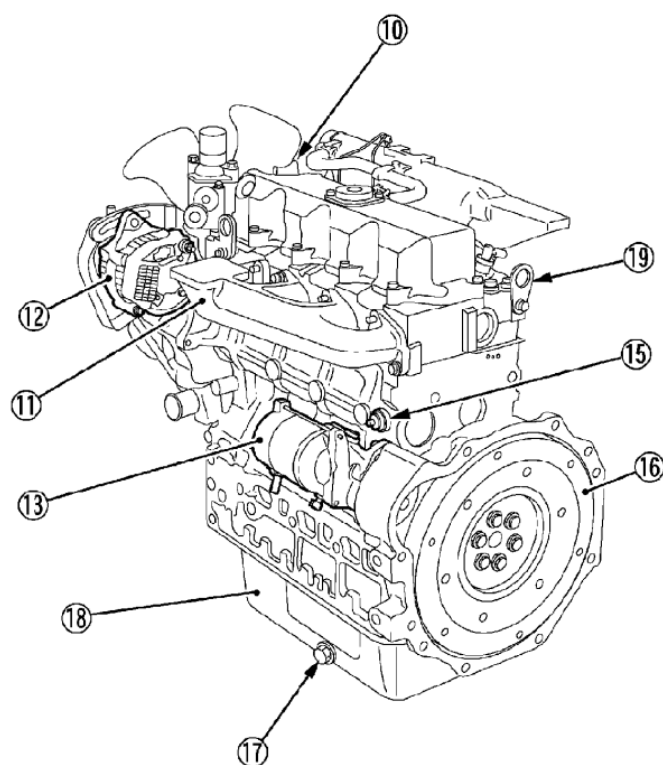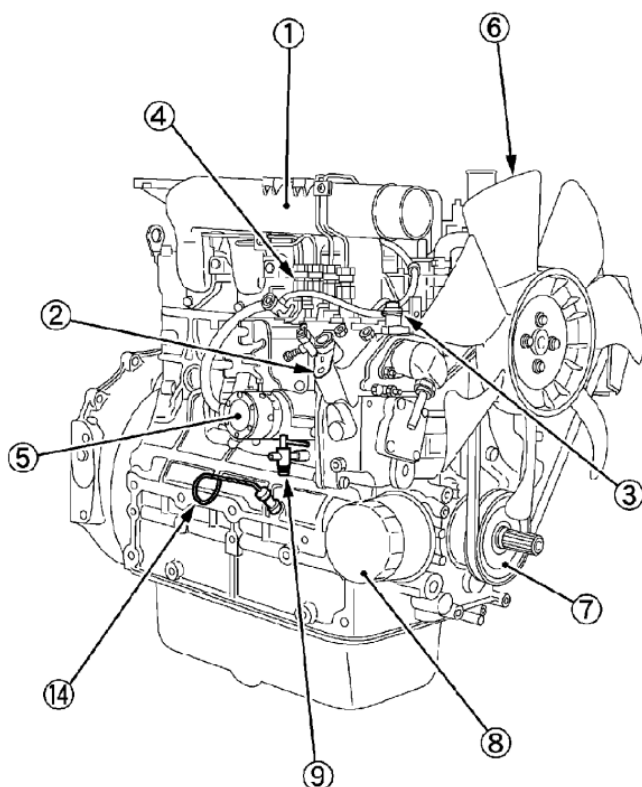

1. Intake manifold
2. Governor lever
3. Engine stop lever
4. Injection pump
5. Fuel feed pump
6. Cooling fan
7. Fan drive pulley
8. Oil strainer
9. Drain plug
10. Oil filler plug
11. Exhaust manifold
12. Alternator
13. Starter
14. Oil level gauge
15. Oil pressure switch
16. Flywheel
17. Drain plug
18. Oil pan
19. Engine lifting hook

Periodic Maintenance Chart

Daily and periodic maintenance is important to keep the engine in good operating condition. To ensure long-time safe operation of the engine, perform periodic maintenance as per the following chart.

Periodic Maintenance Interval	Item	Remarks
Every 50 hours	Check fuel lines and hose clamps	
Initial 50 hours	Change engine oil	⊙
Every 200 hours	Replace engine oil (optional oil pan depth 90 mm/3.54 in.)	
Every 400 hours	Replace engine oil (standard oil pan depth 124 mm/4.88 in.)	
Every 100 hours	Clean air filter element	*1
	Check battery electrolyte level	
	Check fan belt tension	
Every 200 hours	Replace engine oil filter element (standard oil pan)	⊙
	Check intake lines	
Every 200 hours or 6 months	Check radiator hoses and clamps	
Every 400 hours	Replace engine oil filter element (standard oil pan)	⊙
	Replace fuel filter element	
Every 500 hours	Remove fuel tank sediment	
	Clean water jacket (inside radiator)	
	Replace fan belt	
Every 1 or 2 months	Recharge battery	
Annually	Replace air filter element	*2
Every 800 hours	Check valve clearance	
Every 1500 hours	Check fuel injection nozzle pressure	*3
Every 3000 hours	Check turbocharger	*3
	Check injection pump	*3

Periodic Maintenance Interval	Item	Remarks
Every two years	Replace radiator coolant (L.L.C.)	
	Replace battery	
	Replace radiator hoses and clamps	
	Replace fuel lines and hose clamps	*3
	Replace intake lines	*4

Important Notes:

⊗ Indicated operations must be performed after the first 50 hours of operation.

*1 Air filter should be cleaned more frequently under dusty conditions.

*2 After 6 cleanings.

*3 For this maintenance, consult your local Kubota dealer.

*4 Replace only if necessary.

If the battery is used for less than 100 hours within 1 year, check its electrolyte level annually. (for refillable batteries only)

Fuel System

Check the Fuel Level

The fuel level can be checked from the energized turntable or platform control panel.

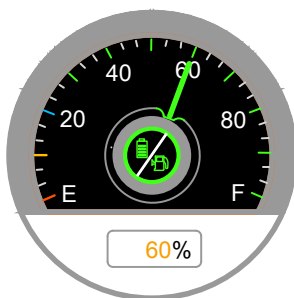


Fig. 28 Fuel level (at the turntable controller)



Fig. 29 Fuel level (at the platform controller)

Fill the Fuel Tank

Turn off the engine, fill with correct diesel fuel according to the **Oil Specifications**, and never overfill the tank.

WARNING

- Do not mix gasoline, alcohol, or their mixture with diesel fuel.
- Stop the engine before refueling it. Keep the engine away from fire sources.
- During refueling, be careful not to spill fuel. If fuel spills, wipe it up immediately, and wait for the engine to cool before refueling, otherwise it may cause a fire.
- When refueling, be sure to stop the engine. Do not smoke while working around the battery or during refueling.
- Due to the extremely accurate tolerance match of the diesel injection system, it is critical to keep the fuel clean and free of dirt or water. The dirt or water entering the combustion system can cause severe damage to the fuel pump and injectors.

Bleed the Fuel System

WARNING

To avoid personal injury or death, do not bleed the fuel system on a hot engine. Fuel spilled onto hot exhaust manifolds creates a fire hazard.

Bleed the fuel system under the following conditions:

- After removing and reinstalling the fuel filter and fuel lines;
- After the fuel tank runs out of fuel;

- Before starting the engine after a long period of non-use.

NOTICE

Always keep the air bleeder plug on top of the fuel injection pump closed (except when bleeding). Leaving it open may cause the engine to stop.

Method 1 (for gravity feed fuel tank only)

- Fill the fuel tank completely. Open the oil-water separator handle.

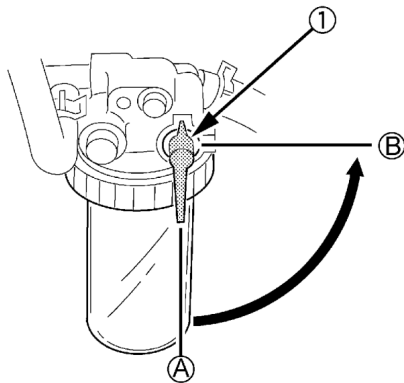


Fig. 30 Oil-water separator handle

- Oil-water separator handle

A. Open
B. Closed

- Open the air bleeder plug on top of the fuel injection pump.

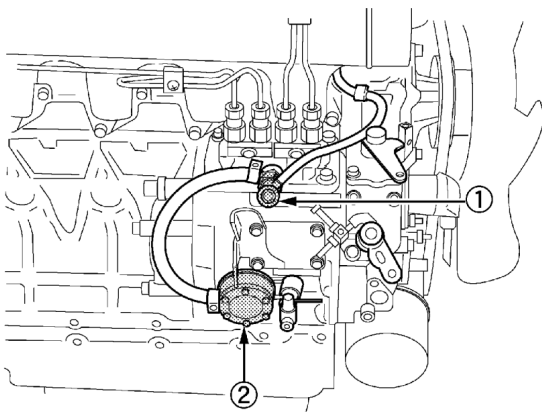


Fig. 31 Gravity feed system

- Air bleeder plug
- Fuel feed pump

- Start the engine and run it for 30 seconds, then stop the engine.
- Close the air bleeder plug on top of the fuel injection pump.

Method 2 (when fuel tank is below injection pump)

This method applies when the fuel tank is positioned lower than the injection pump.

- The fuel system must be pressurized using the electric fuel supply pump in the fuel system.
- If an electric fuel supply pump is not used, manual pumping is required to bleed the system.
- If the fuel tank is lower than the injection pump, the main fuel filter must be located on the pressure side of the pump.
- Follow Steps 2 to 4 of Method 1 for bleeding.

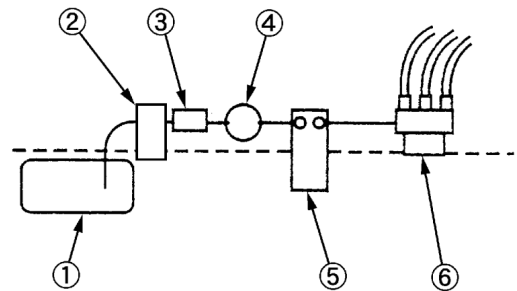


Fig. 32 When fuel tank is below injection pump

- When fuel tank is below injection pump
- Fuel-water separator
- Pre-filter
- Electric or mechanical pump
- Main filter
- Injection pump

Check Fuel Lines and Hose Clamps

WARNING

- Check the fuel system in a well-ventilated and spacious area.
- To avoid personal injury or death, inspect or replace fuel lines only after the engine has been stopped. A ruptured fuel line may cause a fire.

Inspect fuel lines every 50 hours of operation.

- If a hose clamp is loose, apply engine oil to the clamp screw and tighten securely.
- Replace fuel lines and hose clamps every two years if the rubber fuel lines show wear.
- If wear or damage to fuel lines or clamps is observed within two years, replace or repair them immediately.
- After replacing fuel lines or clamps, bleed the fuel system.

NOTICE

If fuel lines are not installed, cover both ends with clean cloth or paper to prevent dust entry. Dust inside fuel lines may cause fuel injection pump failure.

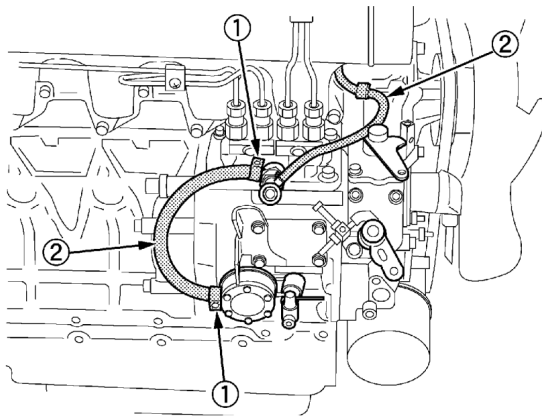


Fig. 33 Fuel Lines and Hose Clamps

1. Hose clamp
2. Fuel pipe

Replace fuel filter element

! WARNING

Always stop the engine before replacing the fuel filter element.

NOTICE

Replace the fuel filter element regularly to prevent dust in the fuel from wearing the fuel injection pump plunger or injector nozzles.

1. Remove the old fuel filter element.
2. Apply a thin coat of fuel to the sealing ring.
3. Screw the new filter element on by hand until it contacts the seal, then tighten it into position.
4. Bleed the fuel lines.

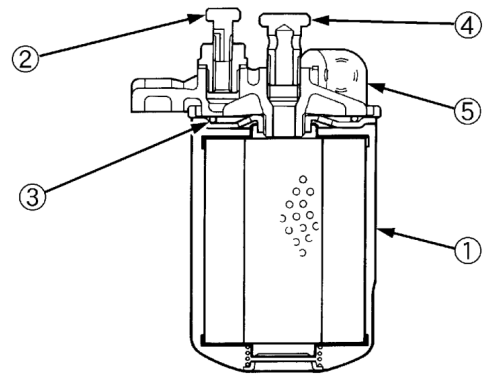


Fig. 34 Fuel filter

- 1) Fuel filter element
- 2) Bleed screw
- 3) O-ring
- 4) Pipe joint
- 5) Cover

Lubrication system

Check the Engine Oil Level

! WARNING

- **Always stop the engine and allow it to cool completely before checking the engine oil.**
- **Wear gloves to prevent skin irritation from oil contact. If oil comes into contact with your skin, wash it off immediately.**

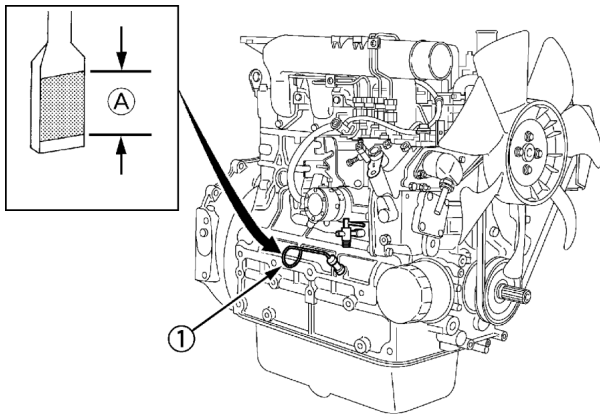


Fig. 35 Oil level gauge

A. Correct oil level falls within this range.

1. Ensure the machine and engine are on a level surface.
2. Check the oil level either before starting the engine or at least 5 minutes after stopping the engine.
3. Remove the oil level gauge and wipe it clean with a non-fibrous cloth.
4. Reinsert the cleaned oil level gauge fully back into its original position.
5. Remove the oil level gauge again and check the oil level.
6. If the oil level is too low, remove the oil filler cap and add the correct type of oil according to **Oil Specifications** until the level reaches the "upper mark" on the gauge. Do not overfill.

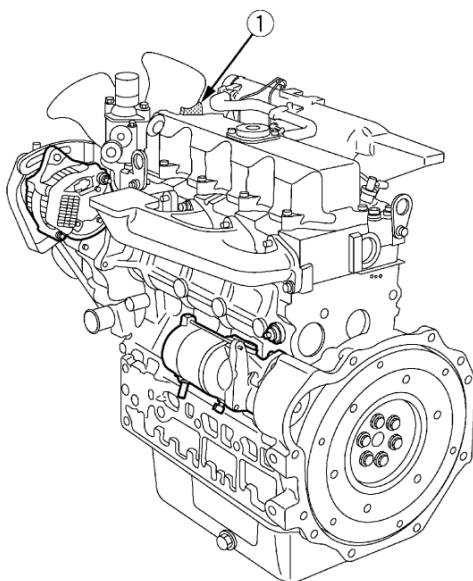


Fig. 36 Oil filler plug

7. After adding oil, wait at least 5 minutes and recheck the oil level. It takes time for the oil to drain into the oil pan.

Change Engine Oil

WARNING

- Always stop the engine and allow it to cool completely before draining the oil.
- Avoid contact with hot engine oil as it can cause burns.
- Wear gloves to prevent skin irritation from oil contact. If oil comes into contact with your skin, wash it off immediately.
- Dispose of drained oil according to local regulations.

1. Ensure the machine and engine are on a level surface.
2. Place a suitable oil collection container under the engine drain plug.

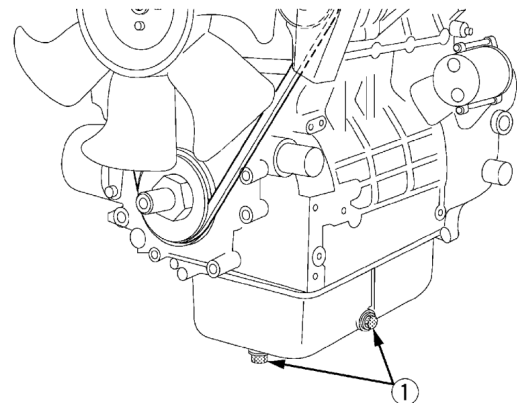


Fig. 37 Drain plug

3. Remove the engine drain plug located at the bottom of the engine and drain the oil completely.

NOTICE

- Oil drains more easily and thoroughly when it is warm.
- During oil draining, also remove the oil filler plug. If the oil filler plug is not removed, it will be difficult to drain the oil completely.

4. Refill with the correct type of oil according to the **Oil Specifications** until the oil level reaches the upper mark on the dipstick. Do not overfill.

5. After adding oil, wait at least 5 minutes and recheck the oil level. It takes time for the oil to drain into the oil pan.

Replace Engine Oil Filter Element

WARNING

- Before replacing the engine oil filter element, be sure to stop the engine and allow it to cool sufficiently.
- Avoid contact with hot engine oil as it can cause burns.
- Wear gloves to prevent skin irritation from oil contact. If oil comes into contact with your skin, wash it off immediately.

1. Use the filter wrench to remove the old oil filter element.

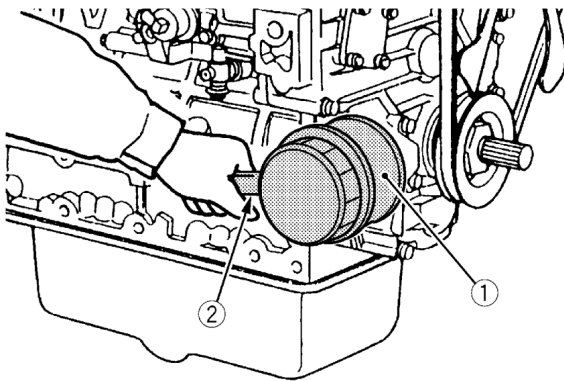


Fig. 38 Oil filter element

- 1) Oil filter element
 - 2) Remove using the filter wrench (tighten by hand during installation)
2. Apply a layer of engine oil to the seal ring of the new filter element.
 3. Screw in the filter element by hand. When the seal ring contacts the sealing surface, tighten the filter element sufficiently by hand. Using a wrench may result in over-tightening.
 4. After replacing the filter element, the oil level will usually drop slightly. Therefore, before checking the oil level, run the engine for a period of time and check for oil leakage at the seal. Add oil if necessary.
 5. Wipe off any residual oil on the machine thoroughly.

Cooling system

WARNING

- Do not shut down the engine abruptly. Allow it to idle without load for 5 minutes before shutting down.
- Maintenance operations should only be performed after the engine and radiator have completely cooled down (more than 30 minutes after stopping).
- Do not remove the radiator cap when the coolant temperature is high. When cooled enough to touch, rotate the cap to the first stop to release excess pressure. Then, fully remove the cap. If overheating occurs, steam may surge from the radiator or reservoir, causing severe burns.

It is recommended to change the coolant every two years.

Check Coolant Level

NOTICE

- If the coolant is filled before operation, it can meet the needs of a full day's work. As a routine, check the coolant level before each operation.
- Avoid allowing muddy water or seawater to enter the radiator.
- Fill the coolant reservoir with clean fresh water and 50% antifreeze.
- Always securely close the radiator cap. If the cap is loose or not properly closed, coolant may leak and deplete rapidly.

1. Ensure the machine and engine are on a level surface.
2. Remove the radiator cap only after the engine has completely cooled down, and check whether the coolant level reaches the filler neck.

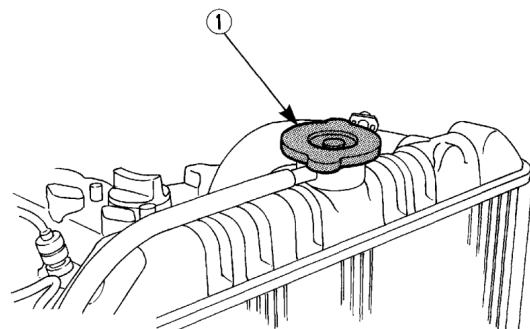


Fig. 39 Radiator cap

3. If the radiator is equipped with a coolant reservoir, check the coolant level in the reservoir. When the level is between the full mark (A) and the low mark (B), the coolant is sufficient for a day's work.

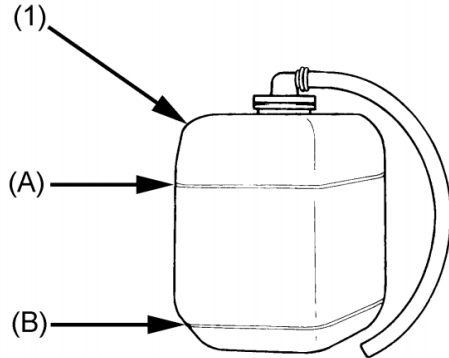


Fig. 40 Coolant reservoir

4. If necessary, refill with correct type of coolant according to the **Oil Specifications** and fill it up to the full mark (A). Do not overfill the tank.

Change Coolant

1. Remove the radiator cap only after the engine has completely cooled down.
2. Locate the two drain plugs: one should be on the side of the crankcase, and the other should be at the lower part of the radiator. Place appropriate containers under both drain plugs.

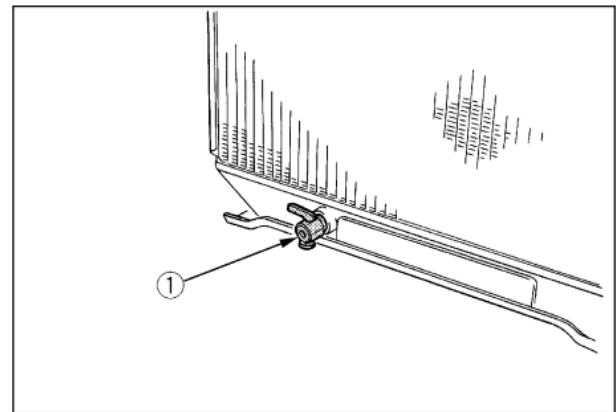
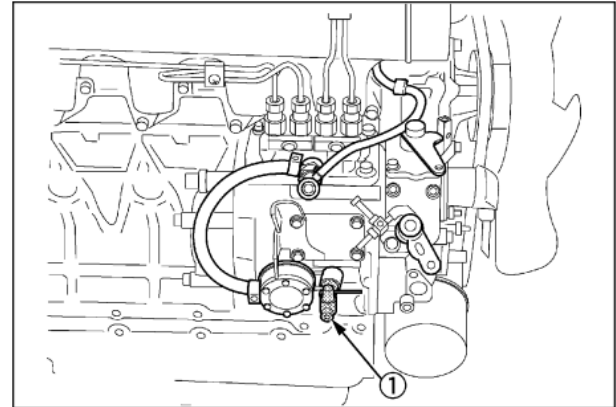


Fig. 41 Coolant Drain Plugs

3. Open both drain plugs.
4. If the radiator is equipped with a coolant reservoir, remove the overflow tube from the radiator pressure cap to drain the liquid from the reservoir.
5. Close both drain plugs.
6. Fill the radiator with the correct coolant according to the **Oil Specifications** until it reaches the filler neck. Do not overfill the tank.
7. Reinstall the radiator cap.
8. If the radiator is equipped with a coolant reservoir, fill it with the correct coolant according to the **Oil Specifications** up to the full mark (A).
9. Reconnect the overflow tube to the radiator pressure cap.
10. Inspect and clean the threads and surfaces of the plugs, as well as the gaskets of the drain plugs, to prevent dirt and debris from entering the engine.

Check Radiator Hoses and Clamp Bands

Check to see if radiator hoses are properly fixed every 200 hours of operation or 6 months, whichever comes first.

Replace hoses and hose clamps every 2 years.

1. If hose clamps are loose or water leaks, tighten hose clamp securely.
2. Replace hoses and tighten hose clamps securely, if radiator hoses are swollen, hardened or cracked.

Intake system

Clean Air Filter Element

Since this engine uses a dry-type air filter, never apply oil to it.

NOTICE

- Avoid touching the main filter element except during cleaning.
- Ensure the clamp hooks on the filter cover are securely fastened. If loose, dust and debris may be inhaled, causing premature wear of the cylinder liner and piston rings, which can result in poor power output.
- Do not over-maintain the air filter element. Excessive maintenance may allow dust to enter the engine, leading to premature wear.
- When reinstalling the cover, ensure the arrow (on the back of the cover) is facing vertically upward. If the cover is improperly reinstalled, the evacuation valve will not function, and dust may adhere to the filter element.

1. Under normal conditions, open the evacuation valve once a week. When operating in dusty environments, open it daily. This removes large particles of dust and debris.
2. If the interior of the air filter becomes dirty or damp, wipe it clean with a cloth.
3. It is recommended to replace the main filter element annually or after cleaning it six times. If the main filter element is heavily soiled, replace it immediately, and replace the secondary filter element as well.
4. Remove the secondary filter element only when replacement is necessary.
5. To protect the engine, do not remove the secondary filter element during maintenance of the main filter element.

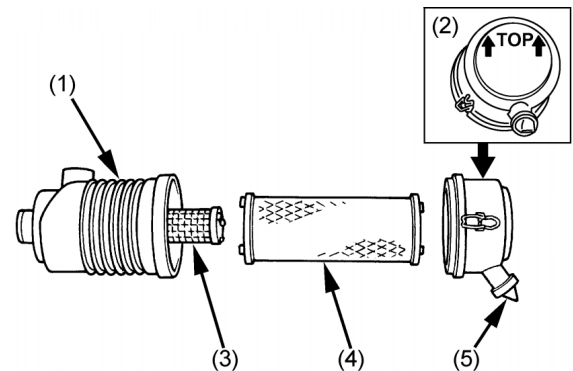


Fig. 42 Air filter

- 1) Air filter body
- 2) Cover
- 3) Secondary filter element
- 4) Main filter element
- 5) Evacuation valve

Cleaning the main air filter element

1. Remove the main air filter element.
2. Using clean, dry compressed air, blow from the inside of the filter element while rotating it. The air pressure at the nozzle must not exceed 205 kPa (2.1 kgf/cm², 30 psi).
3. During the cleaning process, maintain an appropriate distance between the nozzle and the filter element.

Belt drive

WARNING

- Do not carry out work on the belt drive unless the engine is at standstill.
- For dual-belt drive systems, if there is wear or damage to one of the V-belts, both belts should be replaced simultaneously.
- After repairs: Check that all protective devices have been installed and that all tools have been removed from the engine.

Adjust Fan Belt Tension

1. Stop the engine.
2. Apply appropriate pressure to the belt between the pulleys with your thumb.

3. If the tension is incorrect, loosen the alternator mounting bolts and use a lever between the alternator and engine block to pull the alternator outward until the belt tension reaches the appropriate range.
4. Replace fan belt if it is damaged.

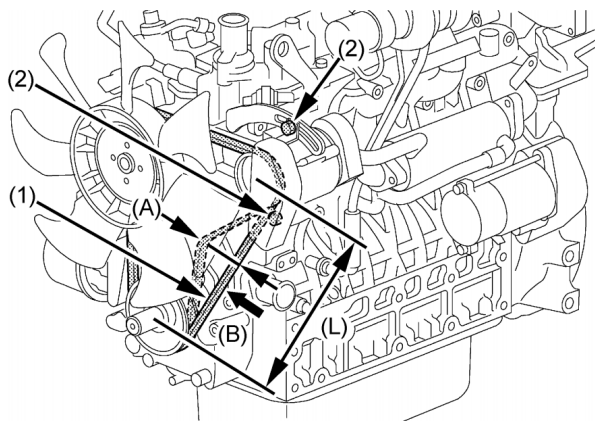


Fig. 43 Adjust Fan Belt Tension

- 1) Fan belt
- 2) Bolt and nut

Table 7-4 Fan Belt Tension and Deflection

Proper Fan Belt Tension	
Adjustment	Replacement
237–403 N	460–680 N
Deflection A	
10–12 mm (0.39–0.47 in) (under a load of 10 kgf/22.1 lbs)	

NOTICE

- A loose or damaged belt or a damaged fan may cause overheating or insufficient charging. Adjust or replace the belt immediately.
- Measure immediately after installing the belt while the pulleys remain stationary. The measurement position should be at position B in the figure, and the pulley spacing should be L.
- If a tension gauge is unavailable, adjust using deflection. The deflection when pressing the belt at the midpoint of the pulley spacing in the figure should be A.

Replace Belt

It is recommended to replace the fan belt after 500 hours of operation.

1. Remove the alternator.
2. Remove the fan belt.
3. Replace with a new fan belt.
4. Install the alternator.
5. Check the fan belt tension.

7.4 AUXILIARY POWER SYSTEM

The auxiliary power system relies on one 12V battery to provide power for a 12V DC motor which drives the gear pump to work. When the main power source fails, the auxiliary power system can be used to lower the platform to the ground. The auxiliary power system cannot be used as the main power source to drive the travel function, but can be used to return the machine to the stowed position in a short time. Besides, the auxiliary power system can also be utilized for override operation with an overloaded platform.

8 HYDRAULIC SYSTEM

8.1 LAYOUT OF HYDRAULIC ELEMENTS

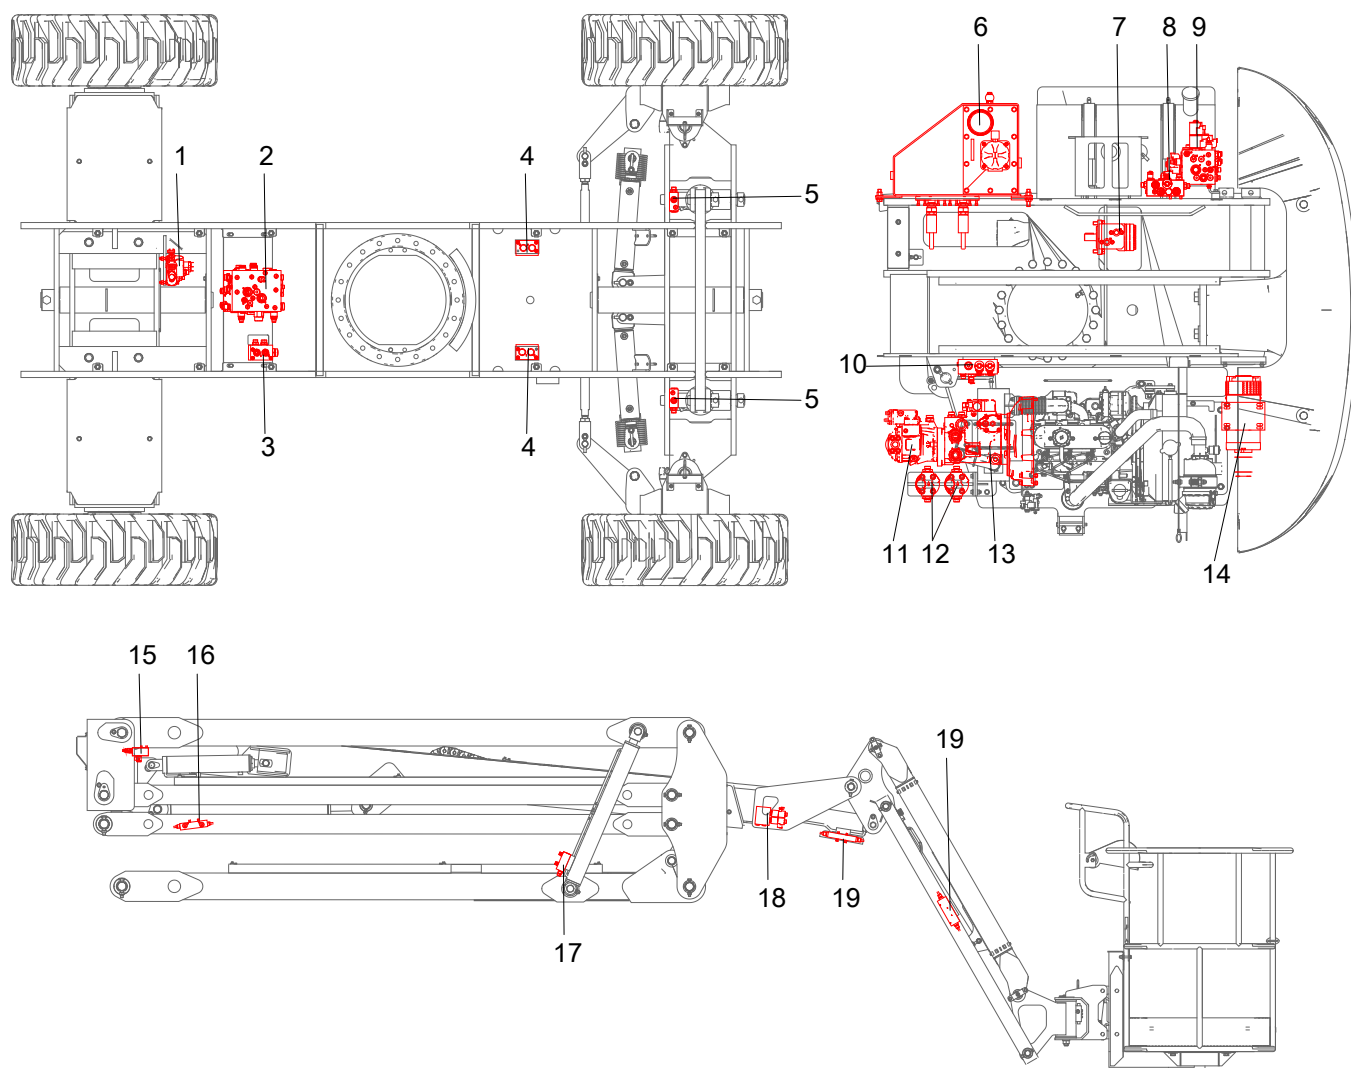


Fig. 1

Table 8-1

1. Oscillating multi-way valve	2. Travel control valve manifold	3. Port L drain manifold
4. Two-speed/brake manifold	5. Oscillating counterbalance valve	6. Hydraulic tank
7. Cycloidal hydraulic motor	8. Oscillating control valve manifold	9. Boom function valve manifold
10. Brake & two-speed control valve manifold	11. Open-circuit variable pump	12. High-pressure filter
13. Closed-circuit variable pump	14. Emergency power unit	15. Telescoping counterbalance valve

Table 8-1 (continued)

16. Main boom lift counterbalance valve	17. Articulating boom lift counterbalance valve	18. Platform duplex valve manifold
19. Level counterbalance valve		

8.2 FUNCTION VALVE MANIFOLD

Boom Function Valve Manifold (PN.202040003817)

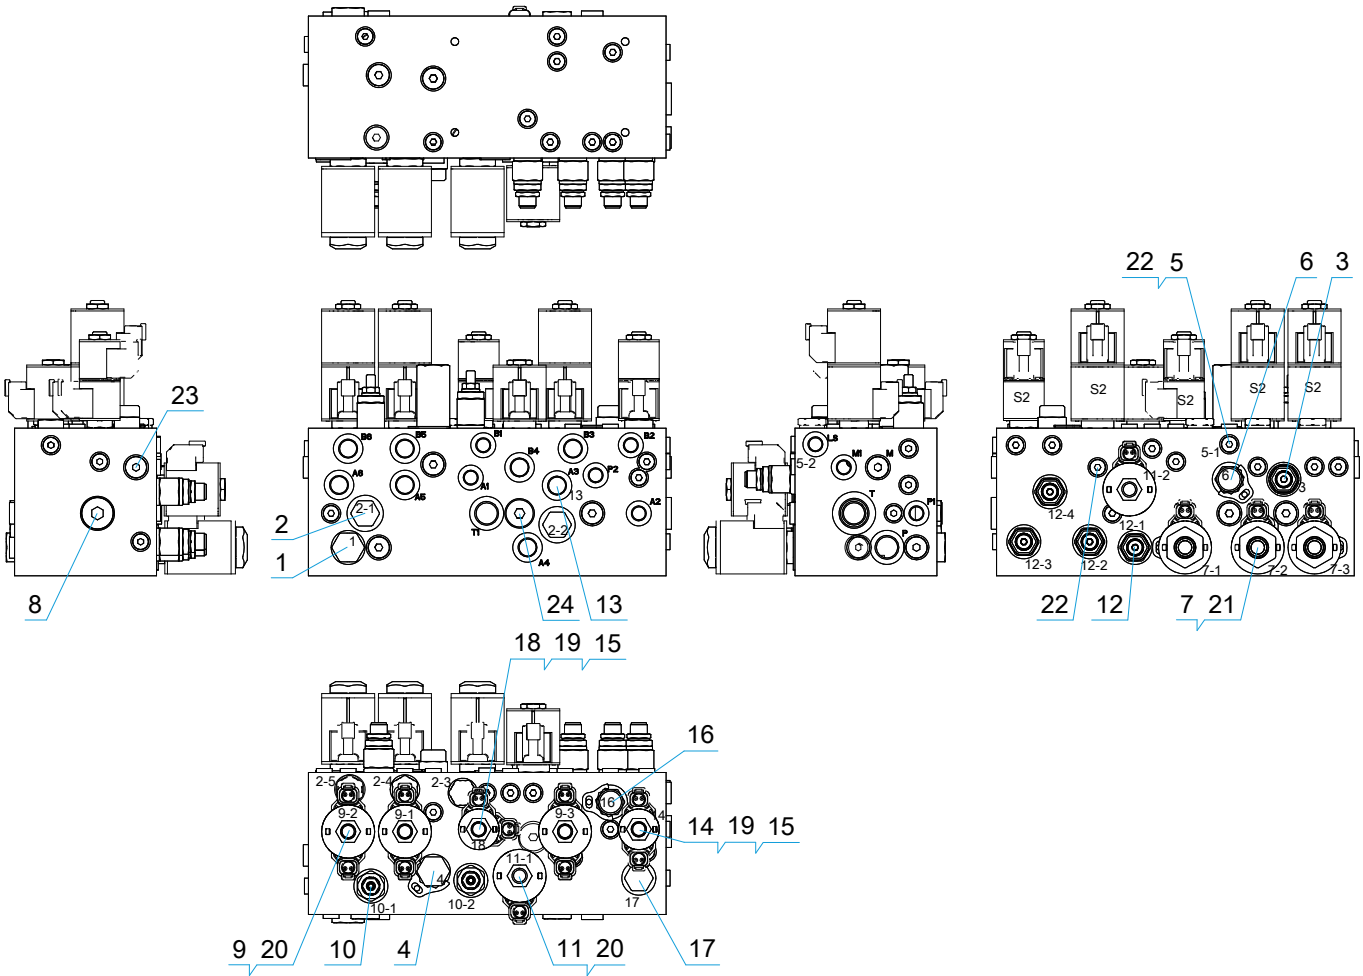


Fig. 2

Table 8-2

No.	Description	Installation torque	Function
1	Check valve	55 – 65 Nm (41 – 48 ft-lb)	Keep oil flowing in one direction
2	Check valve	40 – 45 Nm (30 – 33 ft-lb)	Keep oil flowing in one direction
3	Pressure-relief valve	55 – 65 Nm (41 – 48 ft-lb)	Control system pressure
4	Compensation valve	32.5 – 67.8 Nm (24 – 50 ft-lb)	Provide fixed-differential overflow, release pressure for emergency power unit

Table 8-2 (continued)

No.	Description	Installation torque	Function
5	Damper (ø0.6)	\	\
6	Flow valve	45 – 50 Nm (33 – 37 ft-lb)	Release LS feedback pressure
7–1	Solenoid valve	36.7 Nm (27 ft-lb)	Control the speed of main boom telescoping, articulating boom lifting/lowering, platform leveling, steering, jib lifting up/down and platform rotating
7–2	Solenoid valve	36.7 Nm (27 ft-lb)	Control the speed of main boom lifting/lowering
7–3	Solenoid valve	36.7 Nm (27 ft-lb)	Control the speed of turntable slewing
9–1	Solenoid valve	32.5 – 35.3 Nm (24 – 26 ft-lb)	Control the direction of main boom lifting\lowering
9–2	Solenoid valve	32.5 – 35.3 Nm (24 – 26 ft-lb)	Control the direction of turntable slewing
9–3	Solenoid valve	32.5 – 35.3 Nm (24 – 26 ft-lb)	Control the direction of articulating boom lifting \lowering
10–1	Pressure-relief valve	40 – 45 Nm (30 – 33 ft-lb)	Control the pressure for turntable slewing
10–2	Pressure-relief valve	40 – 45 Nm (30 – 33 ft-lb)	Limit the steering pressure
11–1	Solenoid valve	32.5 – 35.3 Nm (24 – 26 ft-lb)	Control main boom retracting
11–2	Solenoid valve	32.5 – 35.3 Nm (24 – 26 ft-lb)	Control main boom extending
12–1	Pressure-relief valve	40 – 45 Nm (30 – 33 ft-lb)	Limit the pressure for boom extending
12–2	Pressure-relief valve	40 – 45 Nm (30 – 33 ft-lb)	Limit the pressure for articulating boom lowering
12–3	Pressure-relief valve	40 – 45 Nm (30 – 33 ft-lb)	Control the pressure for leveling the platform upward
12–4	Pressure-relief valve	40 – 45 Nm (30 – 33 ft-lb)	Control the pressure for leveling the platform downward
13	Damper (ø1.2)	\	\
14	Solenoid valve	25.8–28.5 Nm (19–21 ft-lb)	Control the direction of platform leveling upwards/ downwards manually
16	Flow valve	45 – 50 Nm (33 – 37 ft-lb)	Limit the flow rate for platform leveling
17	Hydraulic lock	27.1 Nm (20 ft-lb)	Lock the hydraulic oil circuit for platform leveling
18	Solenoid valve	25.8–28.5 Nm (19–21 ft-lb)	Control steering direction

Boom Function Valve Manifold (PN.202040003977)

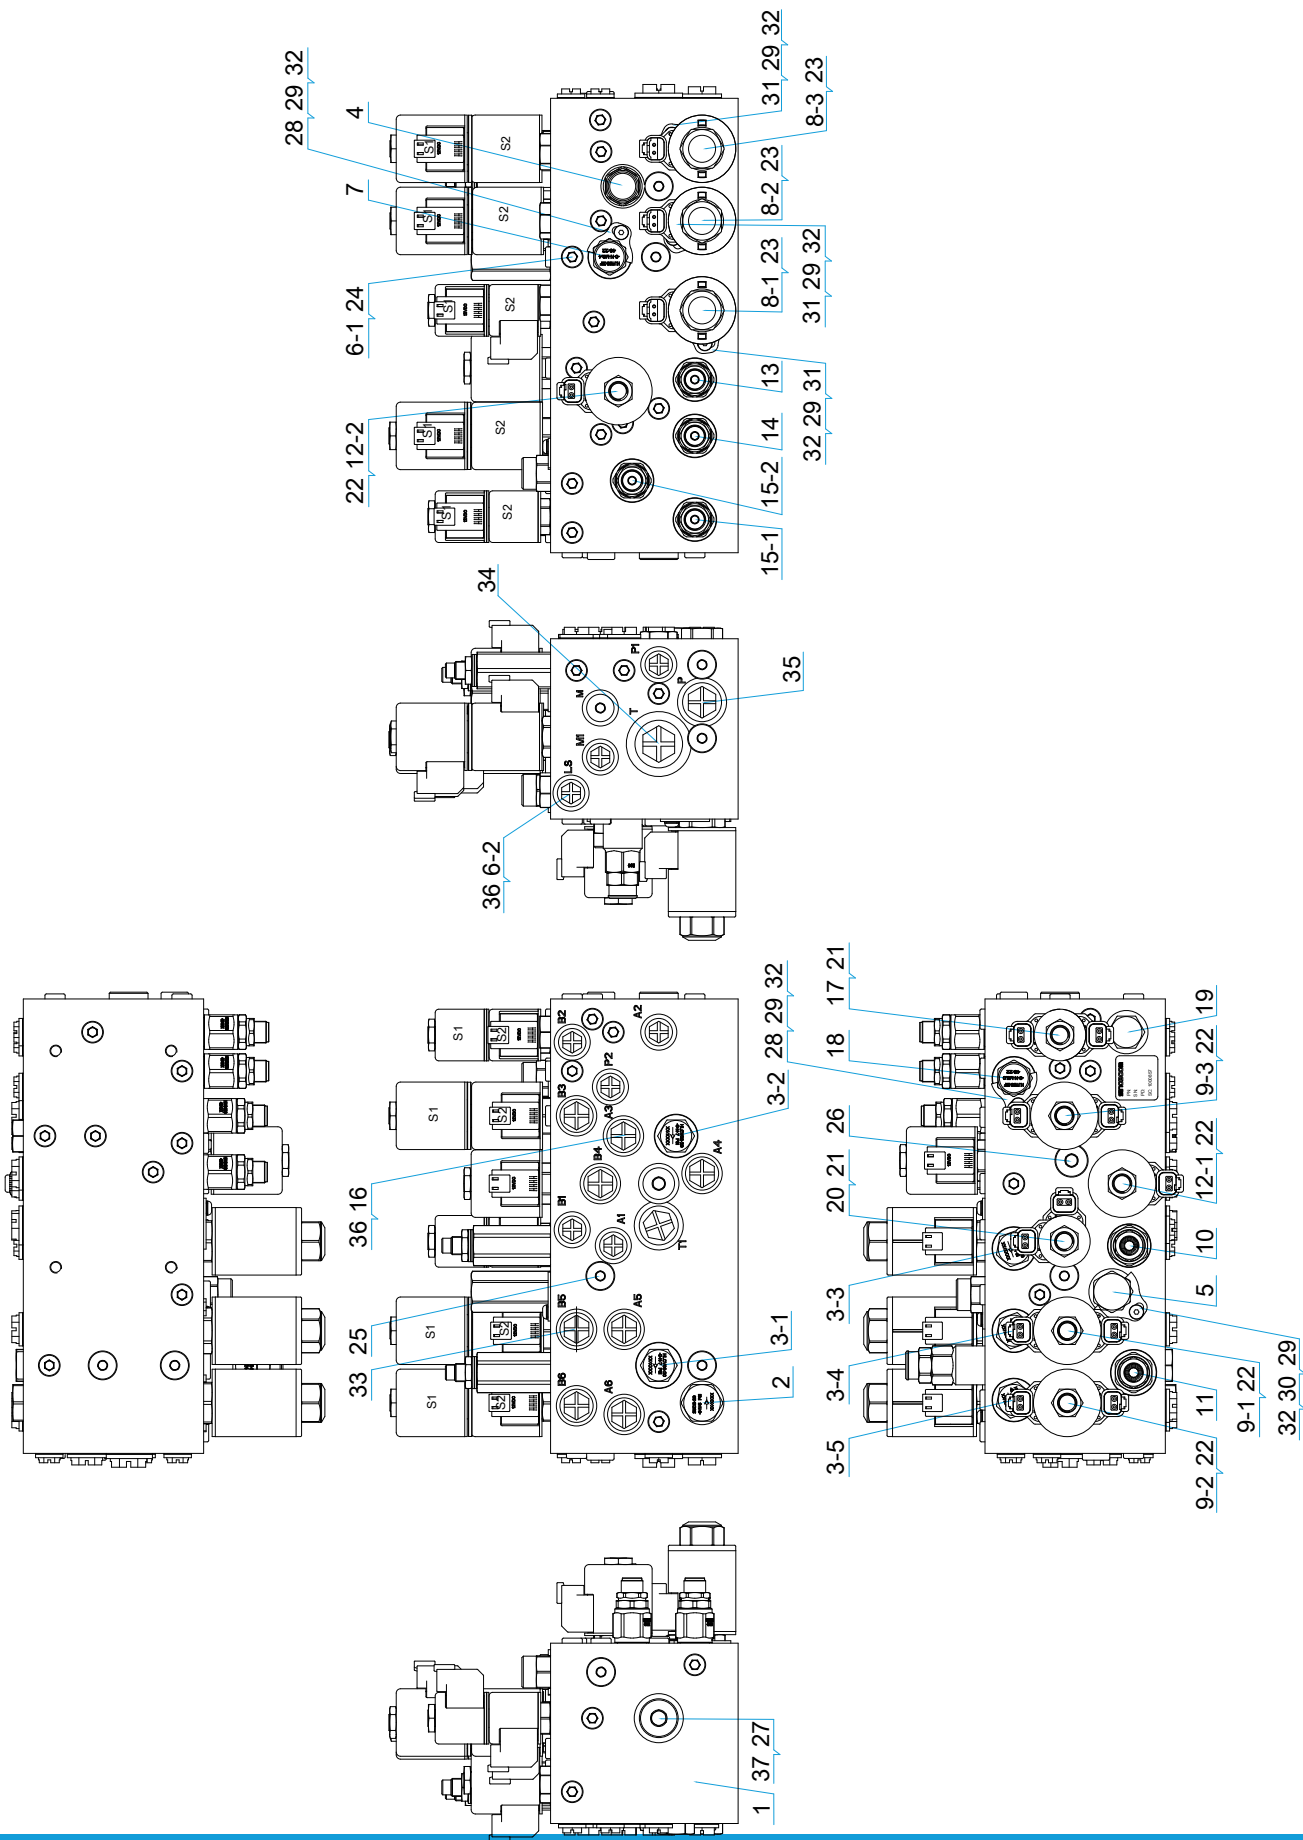


Fig. 3
Table 8-3

No.	Description	Installation torque	Function
2	Check valve	32.6 – 35.4 Nm (24.0 – 26.1 ft-lb)	Keep oil flowing in one direction
3	Check valve	25.8 – 28.5 Nm (19.0 – 21 ft-lb)	Keep oil flowing in one direction
4	Pressure-relief valve	40 – 45 Nm (30 – 33 ft-lb)	Control system pressure
5	Logic valve	32.6 – 35.4 Nm (24.0 – 26.1 ft-lb)	Provide fixed-differential overflow, release pressure for emergency power unit
6	Damper (ø0.6)	2.5 – 3.5 Nm (1.8 – 2.6 ft-lb)	\
7	Flow valve	25.8 – 28.5 Nm (19.0 – 21 ft-lb)	Release LS feedback pressure
8–1	Solenoid valve	32.6 – 35.4 Nm (24.0 – 26.1 ft-lb)	Control the speed of main boom telescoping, articulating boom lifting/lowering, platform leveling, steering, jib lifting up/down and platform rotating
8–2	Solenoid valve	32.6 – 35.4 Nm (24.0 – 26.1 ft-lb)	Control the speed of main boom lifting/lowering
8–3	Solenoid valve	32.6 – 35.4 Nm (24.0 – 26.1 ft-lb)	Control the speed of turntable slewing
9–1	Solenoid valve	32.6 – 35.4 Nm (24.0 – 26.1 ft-lb)	Control the direction of main boom lifting\lowering
9–2	Solenoid valve	32.6 – 35.4 Nm (24.0 – 26.1 ft-lb)	Control the direction of turntable slewing
9–3	Solenoid valve	32.6 – 35.4 Nm (24.0 – 26.1 ft-lb)	Control the direction of articulating boom lifting \lowering
10	Pressure-relief valve	25.8 – 28.5 Nm (19.0 – 21 ft-lb)	Limit the steering pressure
11	Pressure-relief valve	25.8 – 28.5 Nm (19.0 – 21 ft-lb)	Control the pressure for turntable slewing
12–1	Solenoid valve	32.6 – 35.4 Nm (24.0 – 26.1 ft-lb)	Control main boom retracting
12–2	Solenoid valve	32.6 – 35.4 Nm (24.0 – 26.1 ft-lb)	Control main boom extending
13	Pressure-relief valve	40 – 45 Nm (30 – 33 ft-lb)	Limit the pressure for boom extending
14	Pressure-relief valve	40 – 45 Nm (30 – 33 ft-lb)	Limit the pressure for articulating boom lowering
15–1	Pressure-relief valve	40 – 45 Nm (30 – 33 ft-lb)	Control the pressure for leveling the platform upward
15–2	Pressure-relief valve	40 – 45 Nm (30 – 33 ft-lb)	Control the pressure for leveling the platform downward
16	Damper (ø1.2)	2.5 – 3.5 Nm	\

Table 8-3 (continued)

No.	Description	Installation torque	Function
		(1.8 – 2.6 ft-lb)	
17	Solenoid valve	25.8 – 28.5 Nm (19.0 – 21 ft-lb)	Control the direction of platform leveling upwards/ downwards manually
18	Flow valve	25.8 – 28.5 Nm (19.0 – 21 ft-lb)	Limit the flow rate for platform leveling
19	Pilot-operated check valve	25.8 – 28.5 Nm (19.0 – 21 ft-lb)	Lock the hydraulic oil circuit for platform leveling
20	Solenoid valve	25.8 – 28.5 Nm (19.0 – 21 ft-lb)	Control steering direction

Travel Control Valve Manifold (PN.202040003985)

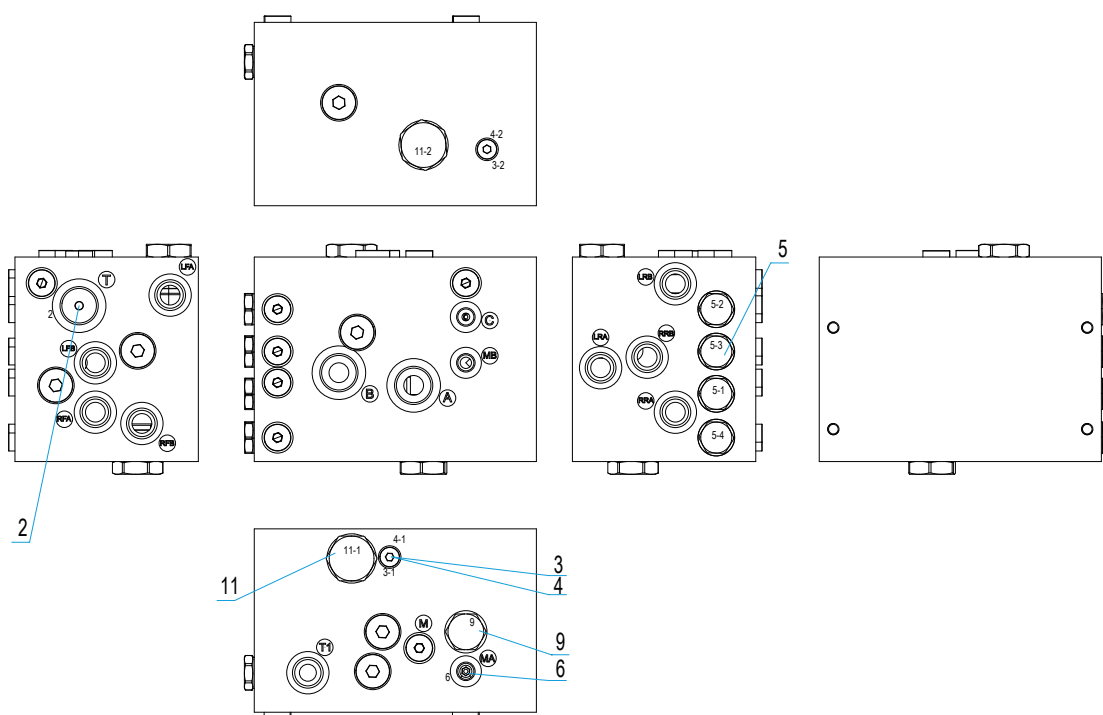


Fig. 4

Table 8-4

No.	Description	Installation torque	Function
2	Damper (ø2.0)	\	\
3	Damper (ø2.5)	\	\
4	Damper (ø0.6)	\	\
5	Check valve	40 – 45 Nm (30 – 33 ft-lb)	Keep oil flowing in one direction
6	Shuttle valve	\	Switch between oil lines
9	Flush valve	32.5 – 35.3 Nm (24 – 26 ft-lb)	Supply low-temperature hydraulic fluid

Table 8-4 (continued)

No.	Description	Installation torque	Function
11-1	Flow divider/ flow-combining valve	99 – 104 Nm (73 – 77 ft-lb)	Control flow rate for left-front and left-rear wheels
11-2	Flow divider/ flow-combining valve	99 – 104 Nm (73 – 77 ft-lb)	Control flow rate for right-front and right-rear wheels

Travel Control Valve Manifold (PN.202040004063)

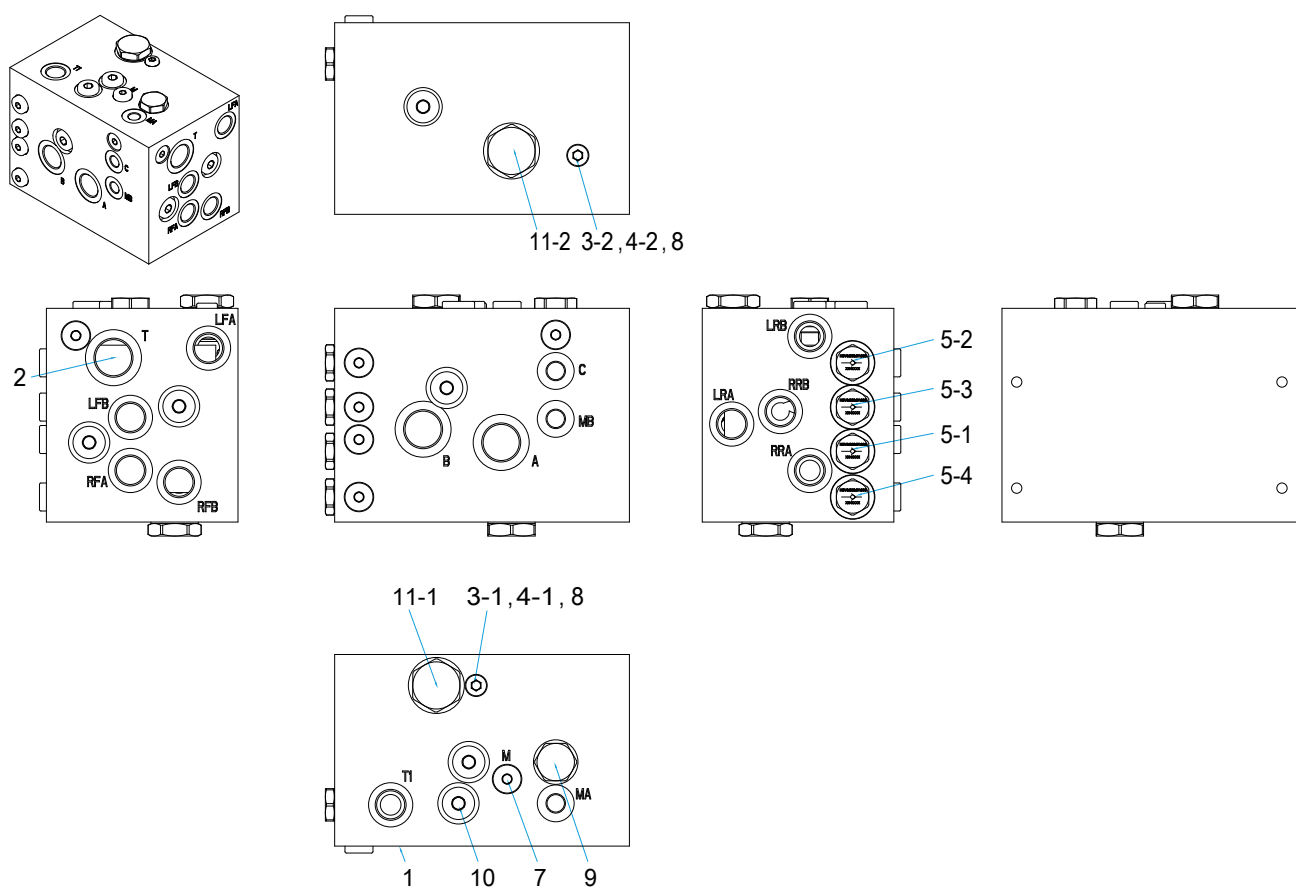


Fig. 5

Table 8-5

No.	Description	Installation torque	Function
2	Damper (ø2.0)	\	\
3	Damper (ø2.5)	\	\
4	Damper (ø0.6)	\	\
5	Check valve	40 – 45 Nm (30 – 33 ft-lb)	Keep oil flowing in one direction
6	Shuttle valve	\	Switch between oil lines

Table 8-5 (continued)

No.	Description	Installation torque	Function
9	Shuttle valve	32.5 – 35.3 Nm (24 – 26 ft-lb)	Supply low-temperature hydraulic fluid
11-1	Flow divider/ flow-combining valve	99 – 104 Nm (73 – 77 ft-lb)	Control flow rate for left-front and left-rear wheels
11-2	Flow divider/ flow-combining valve	99 – 104 Nm (73 – 77 ft-lb)	Control flow rate for right-front and right-rear wheels

Brake & Two-speed Control Valve Manifold (PN.202040000006)

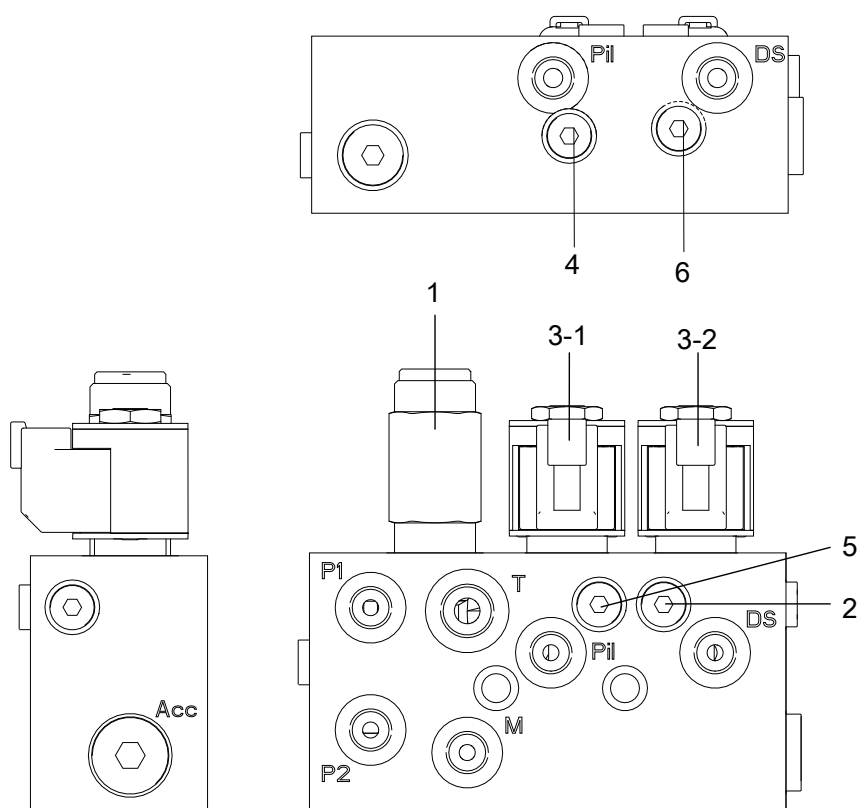


Fig. 6 Brake & Two-speed Control Valve Manifold (PN.202040000006)

Table 8-6 Brake & Two-speed Control Valve Manifold (PN.202040000006)

No.	Description	Installation torque	Function
1	Pressure-relief valve	33.9 Nm (25 ft-lb)	Control pressure of brake and high/low speed
2	Damper (ø0.8)	\	\
3-1	Solenoid valve	27.1 Nm (20 ft-lb)	Control high-low speed switching
3-2	Solenoid valve	27.1 Nm (20 ft-lb)	Control braking
4	Damper (ø1.3)	\	\

Table 8-6 Brake & Two-speed Control Valve Manifold (PN.202040000006) (continued)

No.	Description	Installation torque	Function
5	Damper (ø2.0)	\	\
6	Damper (ø1.5)	\	\

Brake & Two-speed Control Valve Manifold (PN.202040003668)

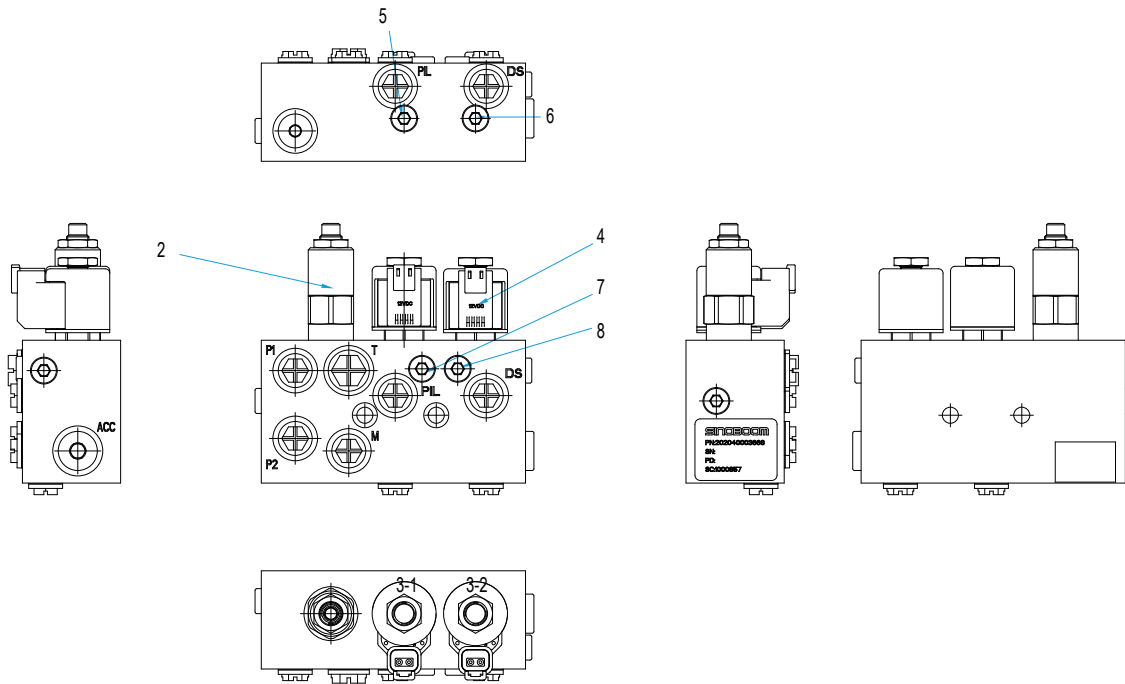


Fig. 7 Brake & Two-speed Control Valve Manifold (PN.202040003668)

Table 8-7 Brake & Two-speed Control Valve Manifold (PN.202040003668)

No.	Description	Installation torque	Function
2	Pressure-relief valve	32.6 – 35.4 Nm (24.0 – 26.1 ft-lb)	Control pressure of brake and high/low speed
3–1	Solenoid directional valve	25.8 – 28.8 Nm (19.0 – 21.2 ft-lb)	Control braking
3–2	Solenoid directional valve	25.8 – 28.8 Nm (19.0 – 21.2 ft-lb)	Control high-low speed switching
4	Coil	5.4 – 6.8 Nm (4.0 – 5.0 ft-lb)	\
5	Damper (ø1.3)	2.5 – 3.5 Nm (1.8 – 2.6 ft-lb)	\
6	Damper (ø1.5)	2.5 – 3.5 Nm (1.8 – 2.6 ft-lb)	\

Table 8-7 Brake & Two-speed Control Valve Manifold (PN.202040003668) (continued)

No.	Description	Installation torque	Function
7	Damper (ø2)	2.5 – 3.5 Nm (1.8 – 2.6 ft-lb)	\
8	Damper (ø0.8)	2.5 – 3.5 Nm (1.8 – 2.6 ft-lb)	\

Oscillating Counterbalance Valve
(PN.202040003786)

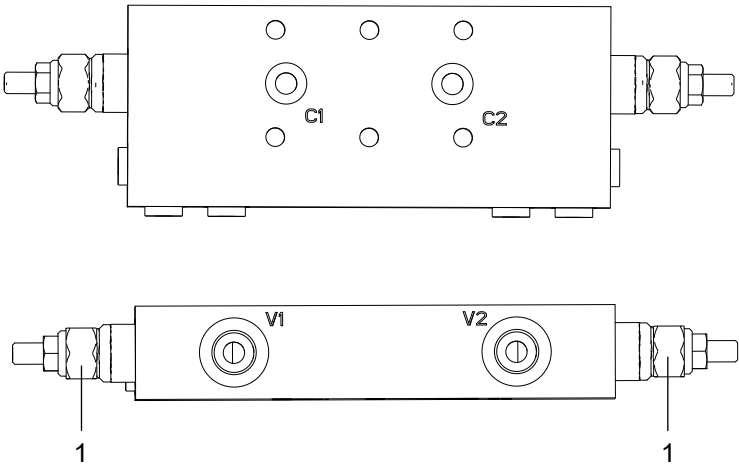


Fig. 8 Oscillating Counterbalance Valve (PN.202040003786)

Table 8-8 Oscillating Counterbalance Valve (PN.202040003786)

No.	Description	Installation torque	Function
1	Counterbalance valve	40 – 45 Nm (30 – 33 ft-lb)	Keep the load balanced

Oscillating Counterbalance Valve (PN.202040003870)

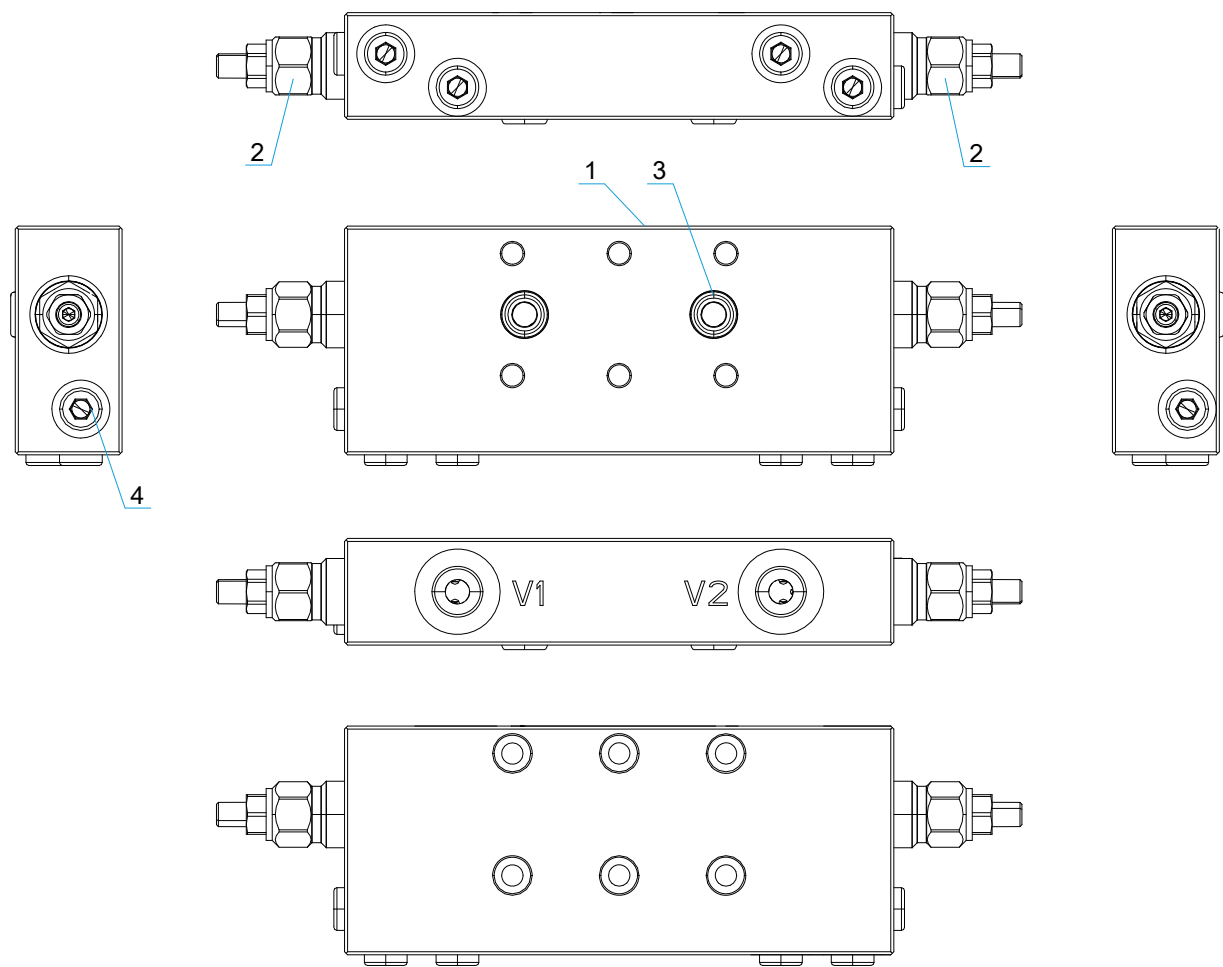


Fig. 9 Oscillating Counterbalance Valve (PN.202040003870)

Table 8-9 Oscillating Counterbalance Valve (PN.202040003870)

No.	Description	Installation torque	Function
2	Counterbalance valve	40 – 45 Nm (30 – 33 ft-lb)	Keep the load balanced

Oscillation Control Valve Manifold (PN.202040003521)

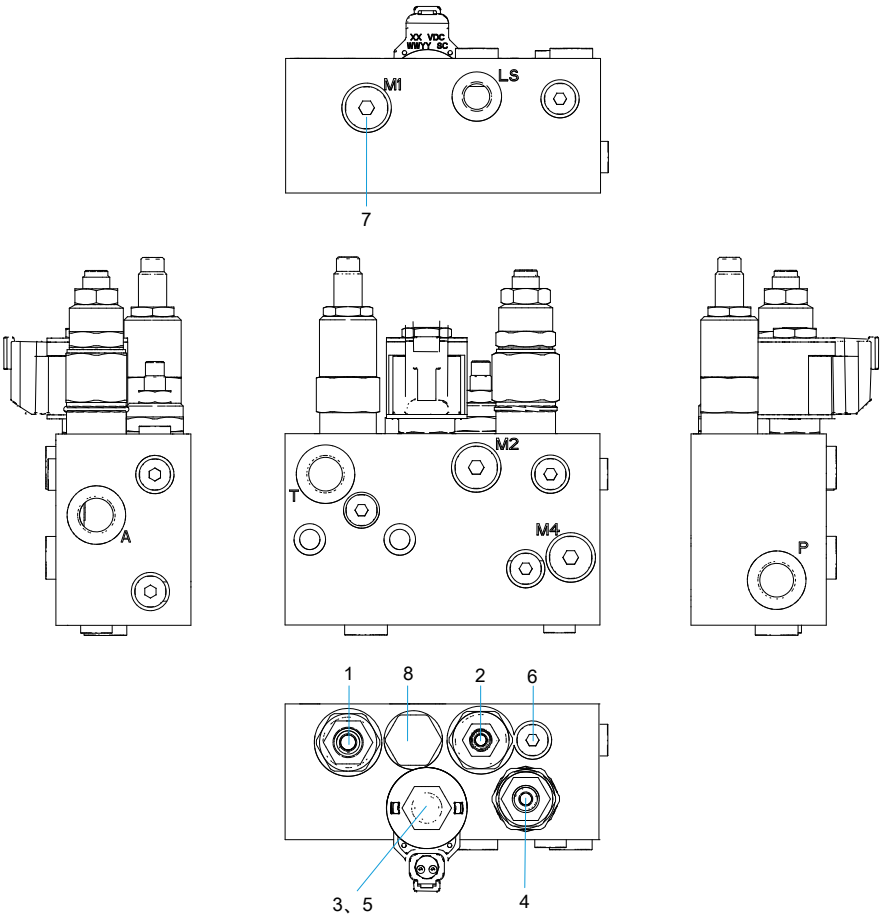


Fig. 10 Oscillation Control Valve Manifold (PN.202040003521)

Table 8-10 Oscillation Control Valve Manifold (PN.202040003521)

No.	Description	Installation torque	Function
1	Pressure-relief valve	40 Nm (30 ft-lb)	Control oscillating pressure
2	Flow valve	33.9 Nm (25 ft-lb)	Control fuel flow
3	Solenoid valve	25.8 – 28.5 Nm (19 – 21 ft-lb)	Control oscillating
4	Pilot-operated valve	45 – 50 Nm (33 – 37 ft-lb)	Limit the maximum pressure for oscillating system
6	Damper (ø0.6)	5 Nm (9 ft-lb)	\
8	Check valve	40 – 45 Nm (30 – 33 ft-lb)	Keep oil flowing in one direction

Oscillating Control Valve Manifold (PN.202040003875)

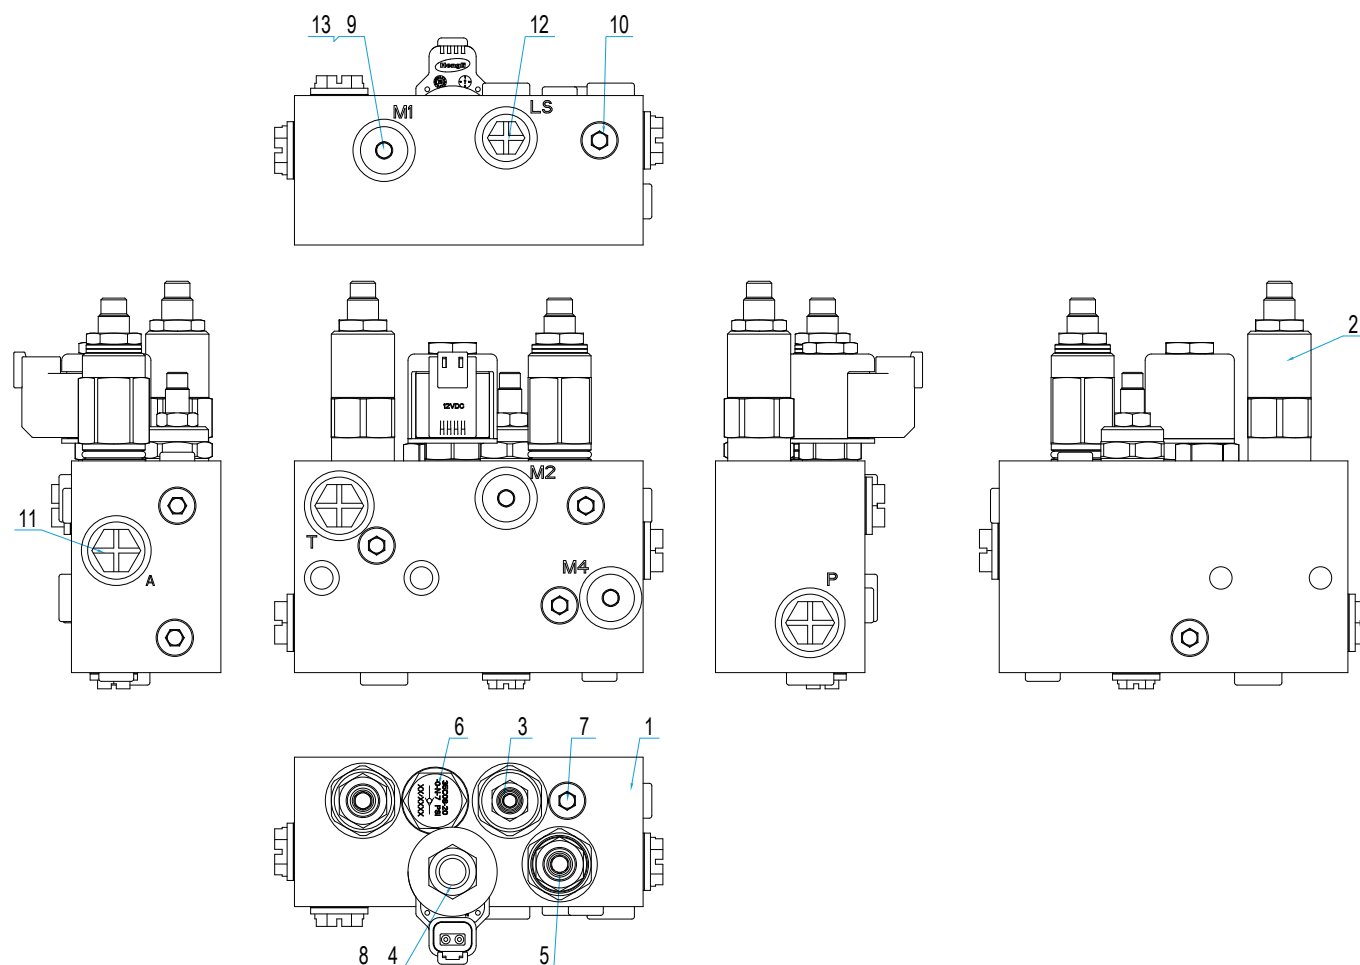


Fig. 11 Oscillating Control Valve Manifold (PN.202040003875)

Table 8-11 Oscillating Control Valve Manifold (PN.202040003875)

No.	Description	Installation torque	Function
2	Pressure-relief valve	40 Nm (30 ft-lb)	Control oscillating pressure
3	Flow valve	33.9 Nm (25 ft-lb)	Control oil flow
4	Solenoid directional valve	25.8 – 28.5 Nm (19 – 21 ft-lb)	Control oscillating
5	Pilot-operated directional-control valve	45 – 50 Nm (33 – 37 ft-lb)	Limit the maximum pressure for oscillating system
6	Check valve	40 – 45 Nm (30 – 33 ft-lb)	Keep oil flowing in one direction
7	Damper (ø0.6)	5 Nm (9 ft-lb)	\

Telescoping Counterbalance Valve (PN.202040003012)

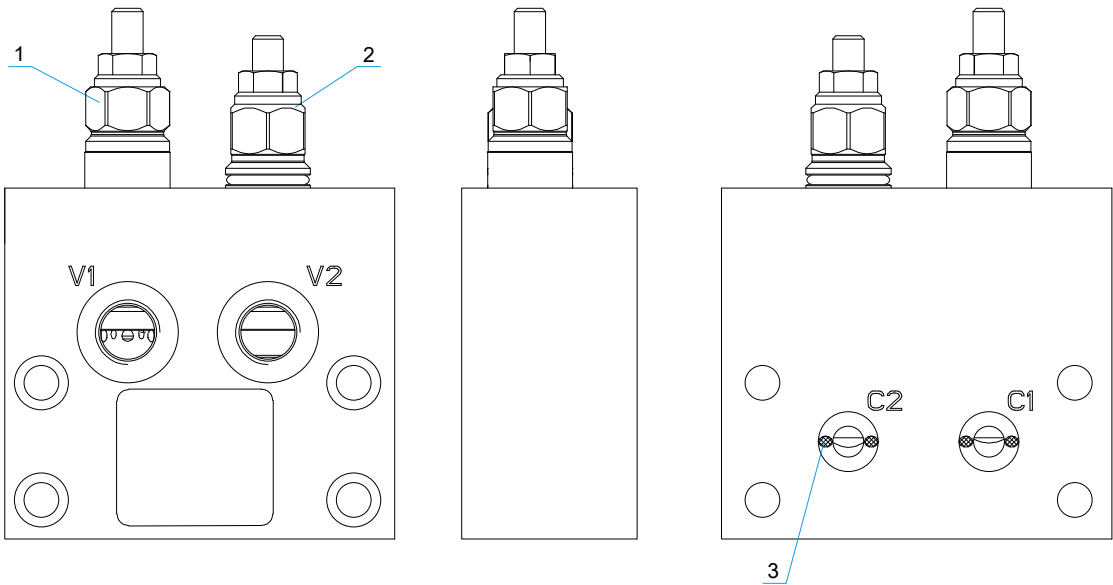


Fig. 12 Telescoping Counterbalance Valve (PN.202040003012)

Table 8-12 Telescoping Counterbalance Valve (PN.202040003012)

No.	Description	Installation torque	Function
1	Counterbalance valve	40 – 45 Nm (30 – 33 ft-lb)	Keep the load balanced
2	Counterbalance valve	45 – 50 Nm (33 – 37 ft-lb)	Keep the load balanced
3	O-ring	\	\

Telescoping Counterbalance Valve
(PN.202040003374)

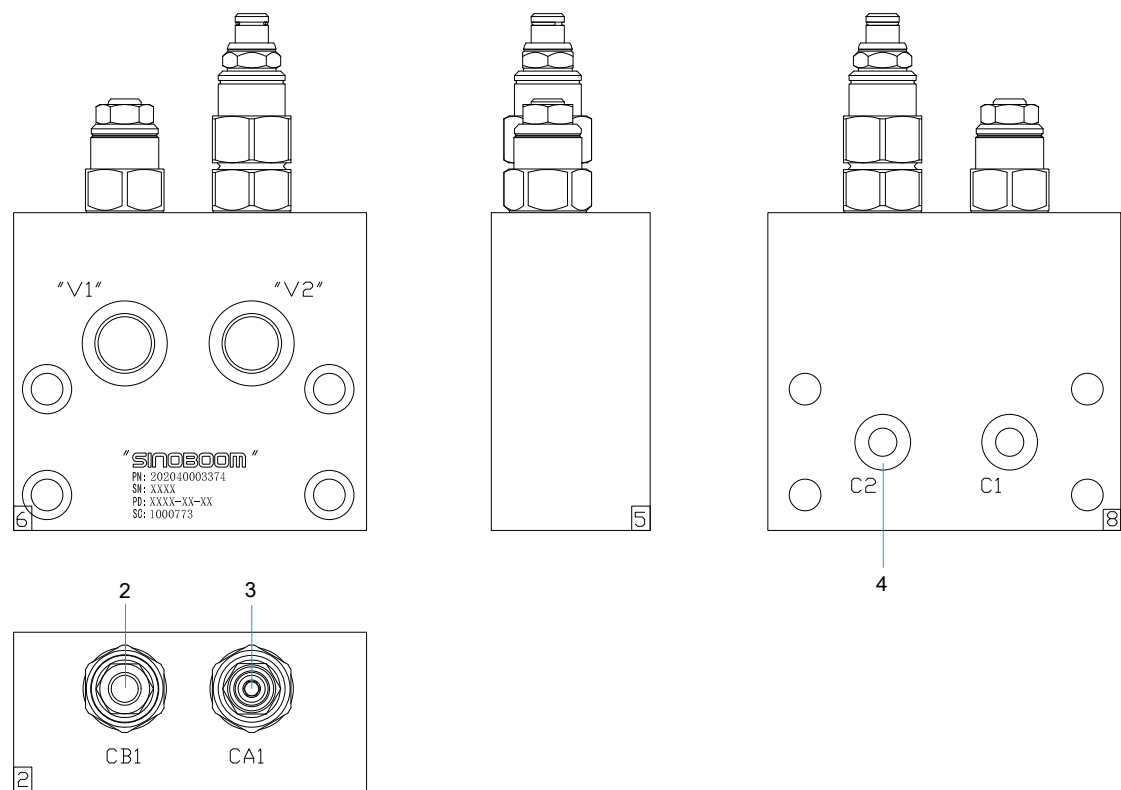


Fig. 13 Telescoping Counterbalance Valve (PN.202040003374)

Table 8-13 Telescoping Counterbalance Valve (PN.202040003374)

No.	Description	Installation torque	Function
2	Counterbalance valve	\	Keep the load balanced
3	Counterbalance valve	\	Keep the load balanced
4	O-ring	\	\

Telescoping Counterbalance Valve (PN.202040003950)

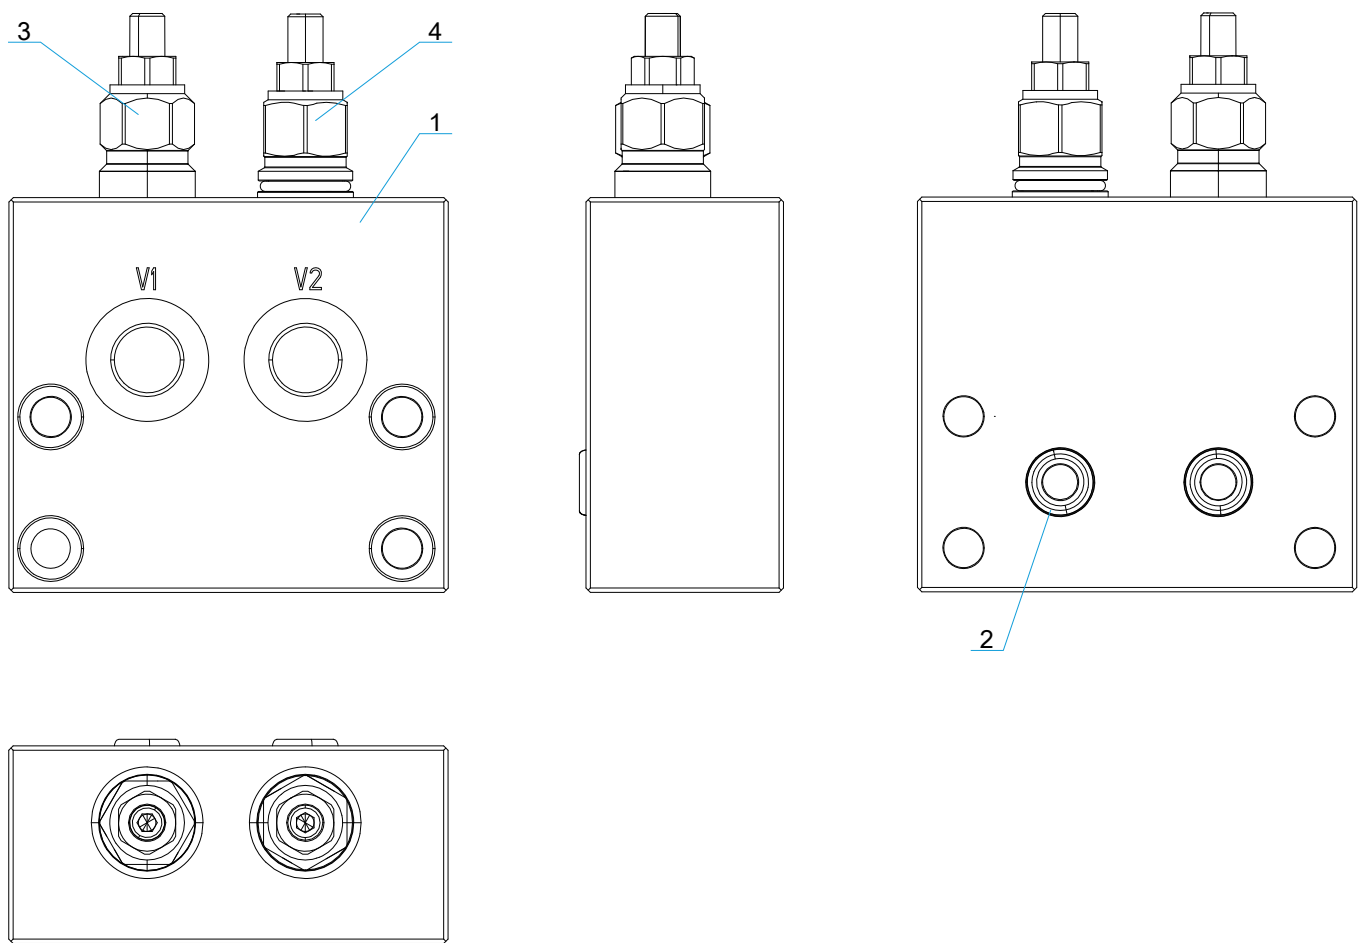
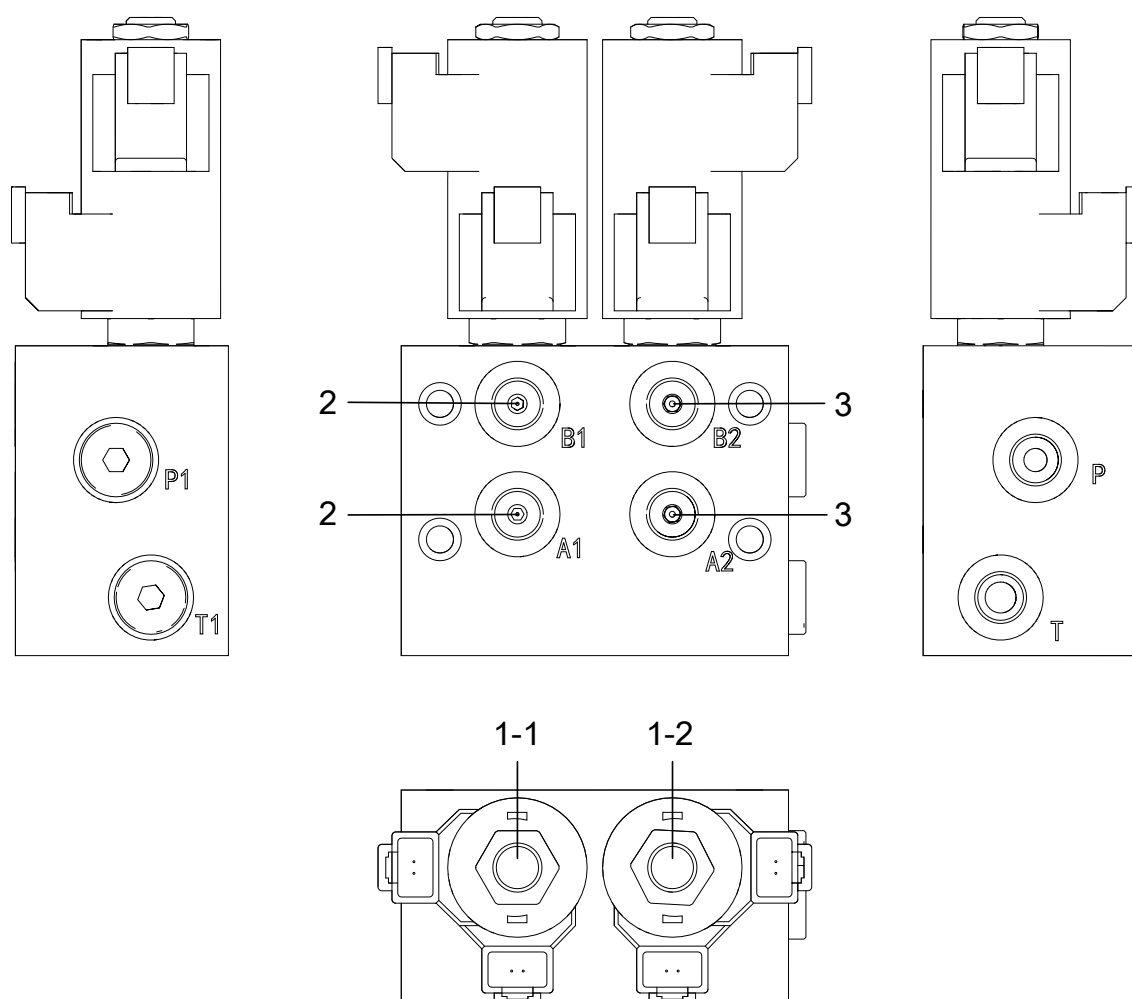


Fig. 14 Telescoping Counterbalance Valve (PN.202040003950)

Table 8-14 Telescoping Counterbalance Valve (PN.202040003950)

No.	Description	Installation torque	Function
2	O-ring	\	\
3	Counterbalance valve	40 – 45 Nm (30 – 33 ft-lb)	Keep the load balanced
43	Counterbalance valve	40 – 45 Nm (30 – 33 ft-lb)	Keep the load balanced

Platform Duplex Valve Manifold (PN.202040003259)

Fig. 15 Platform Duplex Valve Manifold (PN.202040003259)
Table 8-15 Platform Duplex Valve Manifold (PN.202040003259)

No.	Description	Installation torque	Function
1-1	Solenoid valve	40 – 45 Nm (30 – 33 ft-lb)	Control the direction of platform rotation
1-2	Solenoid valve	40 – 45 Nm (30 – 33 ft-lb)	Control the direction of jib up/down movement
2	Damper (ø0.8)	5 Nm (3.7 ft-lb)	\
3	Damper (ø1.5)	5 Nm (3.7 ft-lb)	\

Platform Duplex Valve Manifold (PN.202040000329)

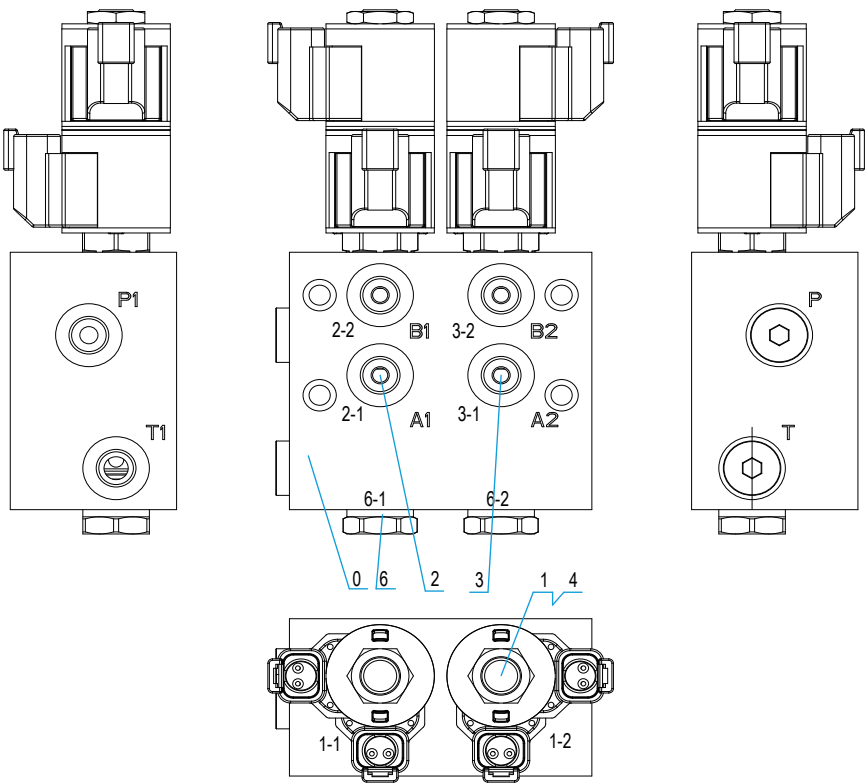


Fig. 16 Platform Duplex Valve Manifold (PN.202040000329)

Table 8-16 Platform Duplex Valve Manifold (PN.202040000329)

No.	Description	Installation torque	Function
1-1	Solenoid valve	27.1 Nm (20 ft-lb)	Control the direction of platform rotation
1-2	Solenoid valve	27.1 Nm (20 ft-lb)	Control the direction of jib up/down movement
2	Damper (ø0.8)	5 Nm (9 ft-lb)	\
3	Damper (ø1.5)	5 Nm (9 ft-lb)	\
6	Check valve	40 – 45 Nm (30 – 33 ft-lb)	Keep oil flowing in one direction

Platform Duplex Valve Manifold (PN.202040003871)

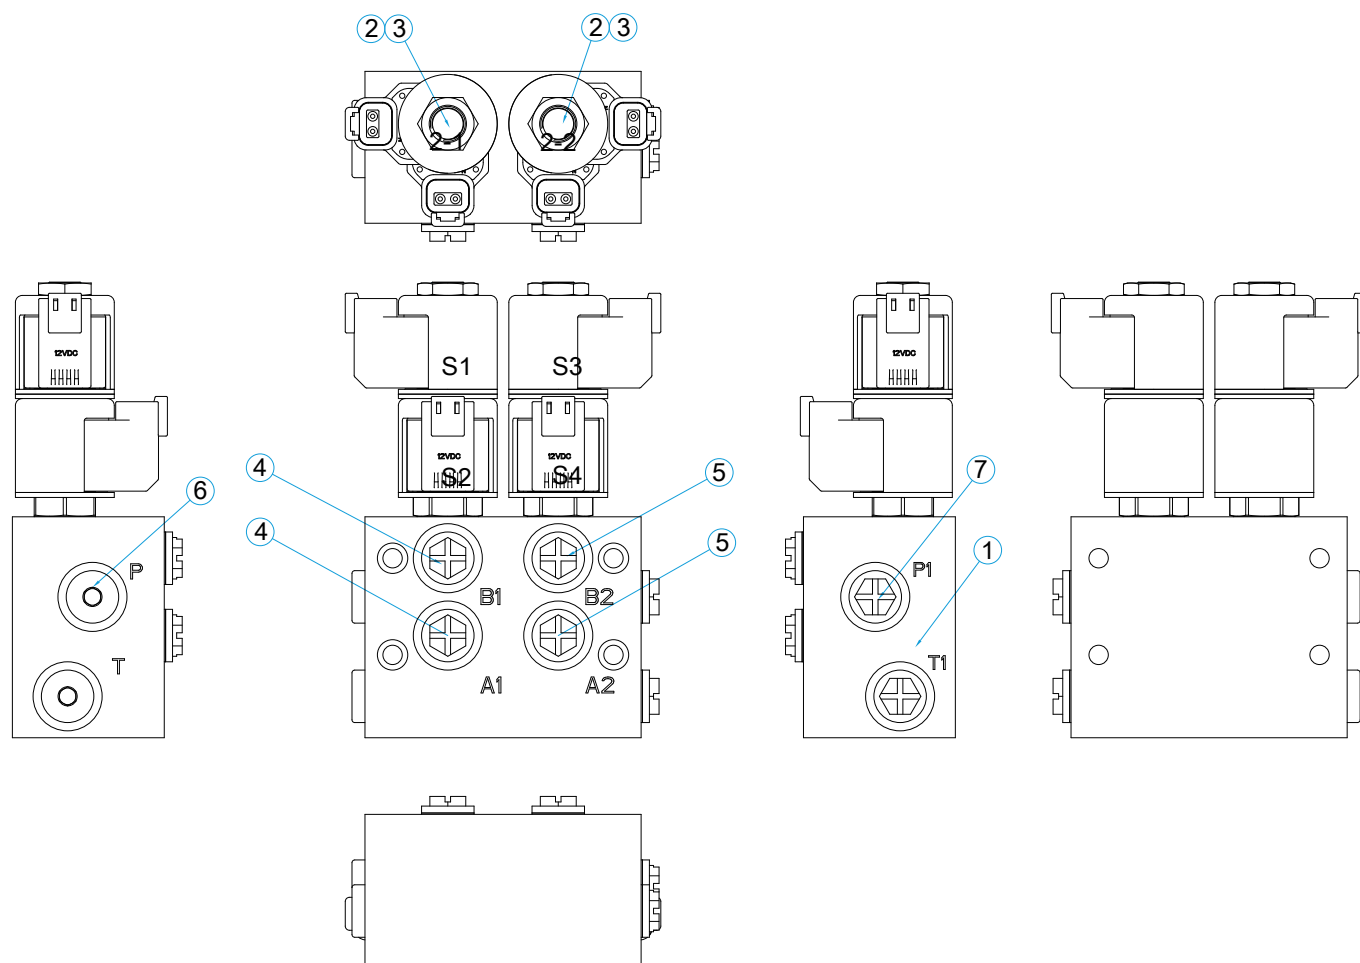


Fig. 17 Platform Duplex Valve Manifold (PN.202040003871)

Table 8-17 Platform Duplex Valve Manifold (PN.202040003871)

No.	Description	Installation torque	Function
2-1	Solenoid valve	23 – 27.2 Nm (17 – 20 ft-lb)	Control the direction of platform rotation
2-2	Solenoid valve	23 – 27.2 Nm (17 – 20 ft-lb)	Control the direction of jib up/down movement
4	Damper (ø0.8)	2.5 – 3.5 Nm (1.8 – 2.6 ft-lb)	\
5	Damper (ø1.5)	2.5 – 3.5 Nm (1.8 – 2.6 ft-lb)	\

Lift Counterbalance Valve (PN.202040000327)

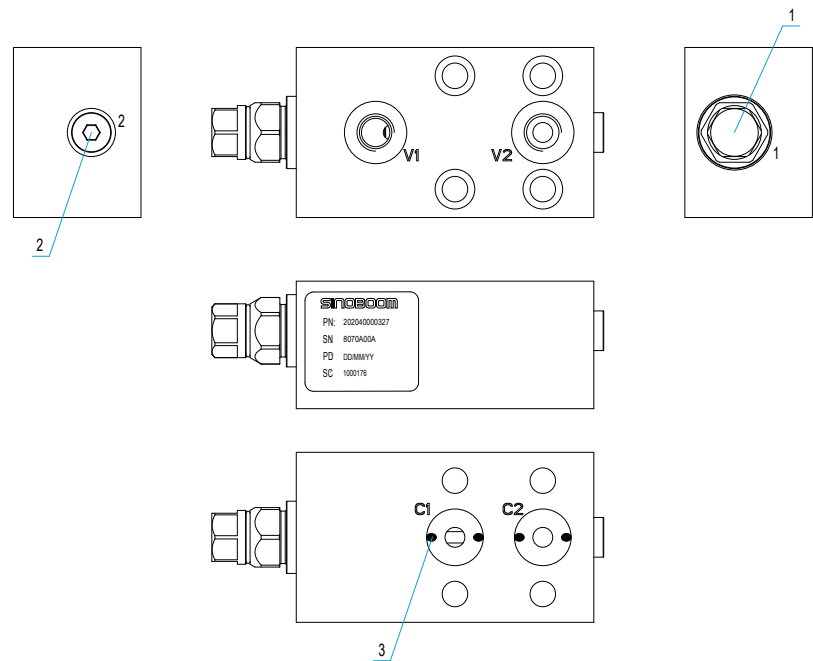


Fig. 18

Table 8-18

No.	Description	Installation torque	Function
1	Counterbalance valve	50 – 60 Nm (37 – 44 ft-lb)	Keep the load balanced
2	Damper (ø0.6)	5 Nm (4 ft-lb)	\

Lift Counterbalance Valve (PN.202040003967)

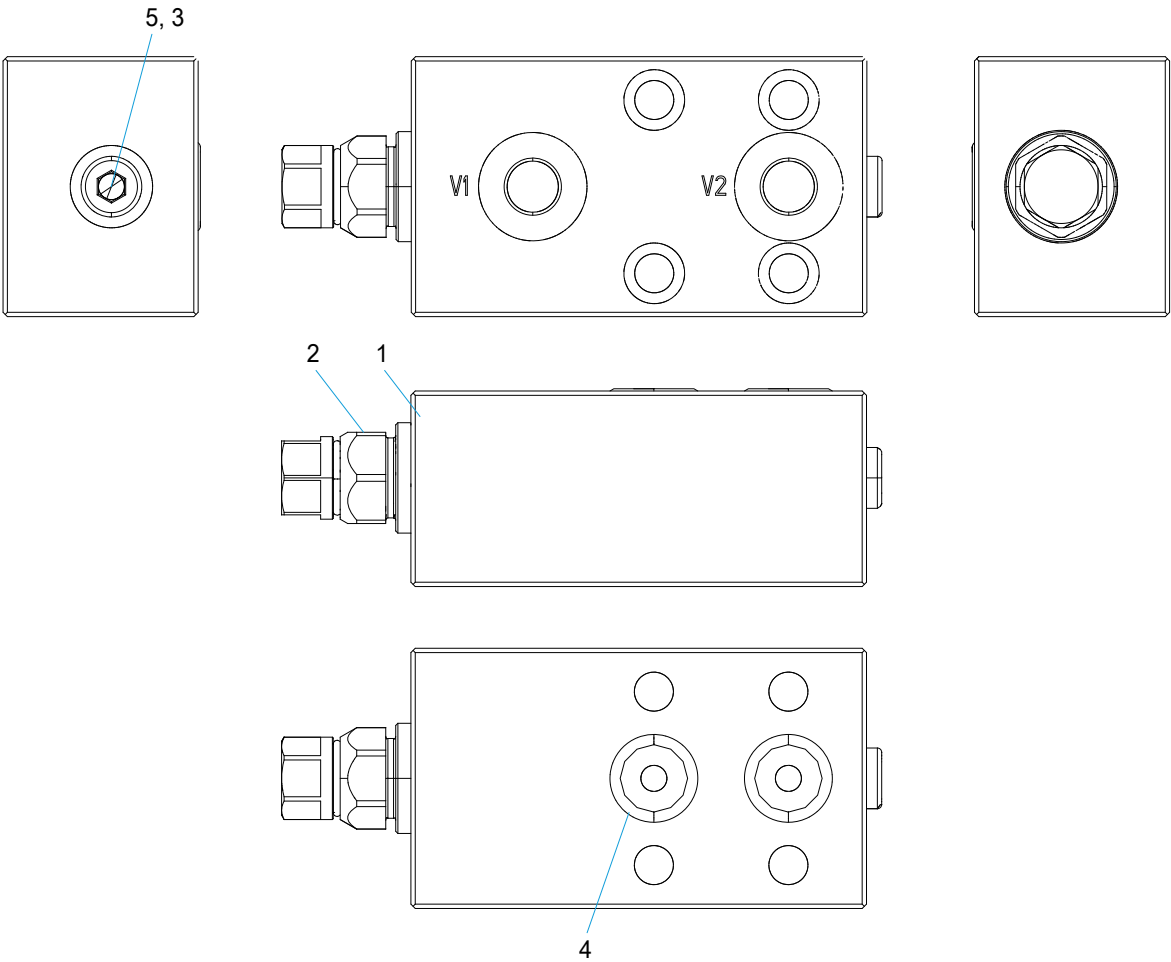


Fig. 19

Table 8-19

No.	Description	Installation torque	Function
1	Counterbalance valve	50 – 60 Nm (37 – 44 ft-lb)	Keep the load balanced
2	Damper (ø0.6)	5 Nm (4 ft-lb)	\

Lift Counterbalance Valve (PN.202040000309&202040003966)

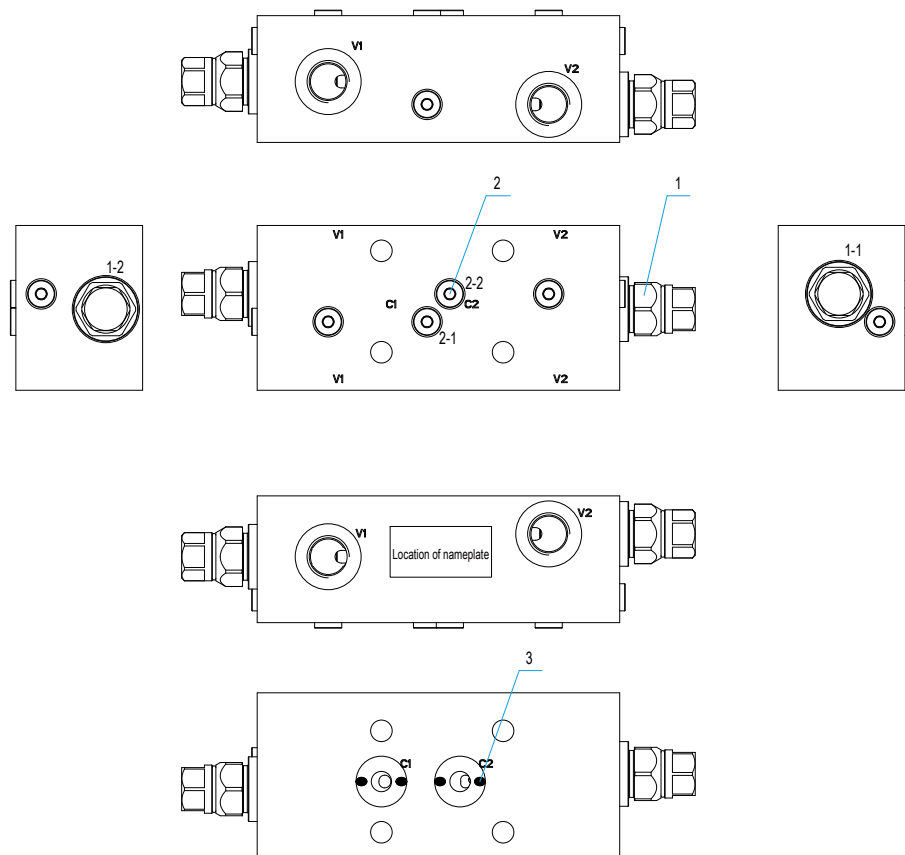


Fig. 20

Table 8-20

No.	Description	Installation torque	Function
1	Counterbalance valve	50 – 60 Nm (37 – 44 ft-lb)	Keep the load balanced
2	Damper (ø0.6)	5 Nm (4 ft-lb)	\

Leveling Counterbalance Valve (PN.202040000011)

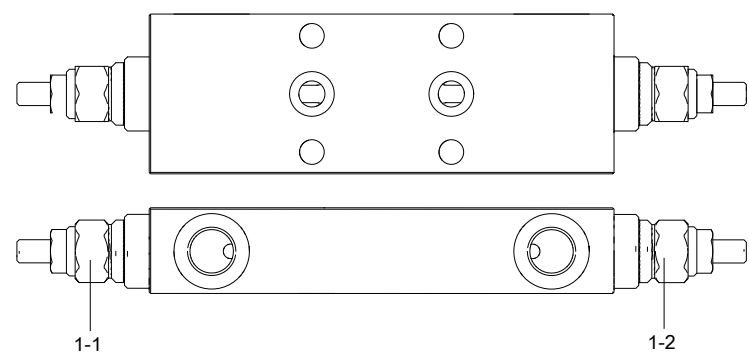


Fig. 21 Leveling Counterbalance Valve (PN.202040000011)

Table 8-21 Leveling Counterbalance Valve (PN.202040000011)

No.	Description	Installation torque	Function
1	Counterbalance valve	70 – 75 Nm (52 – 55 ft-lb)	Keep the load balanced

Bidirectional Counterbalance Valve (PN.202040003614)

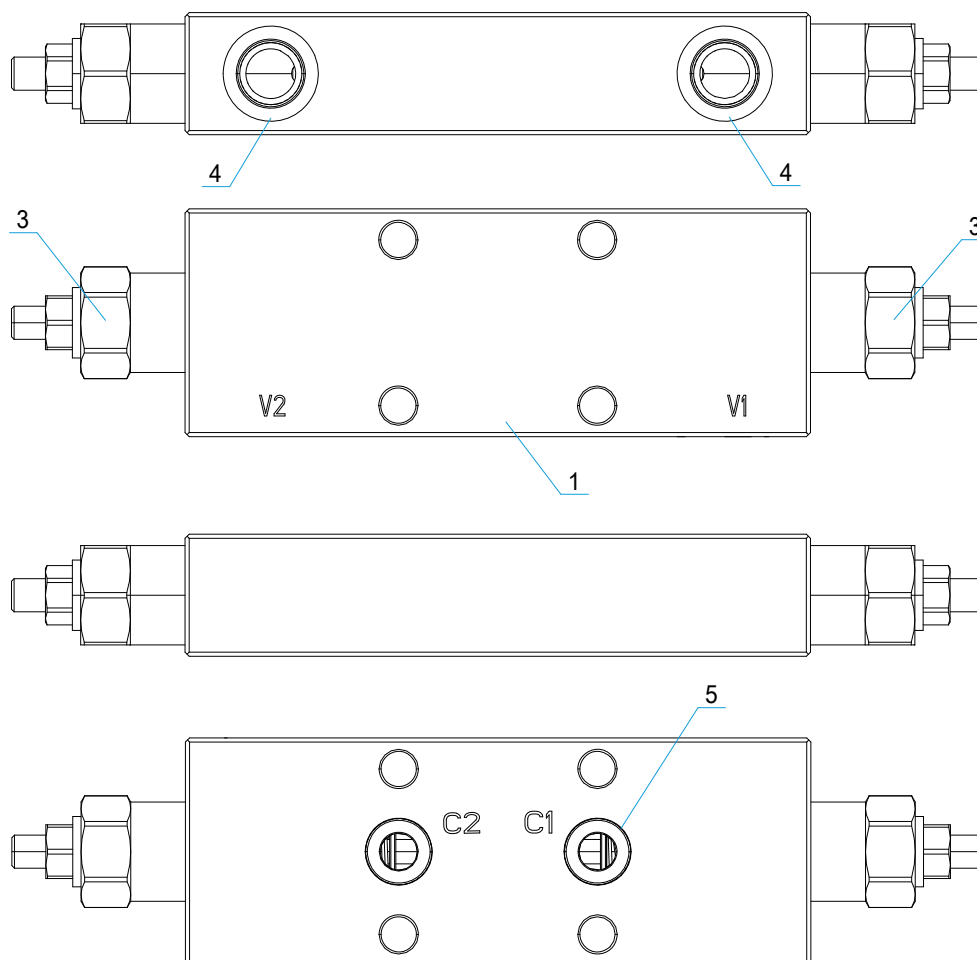


Fig. 22 Bidirectional Counterbalance Valve (PN.202040003614)

Table 8-22 Bidirectional Counterbalance Valve (PN.202040003614)

No.	Description	Installation torque	Function
3	Counterbalance valve	40 – 45 Nm (30 – 33 ft-lb)	Keep the load balanced

8.3 HYDRAULIC TANK

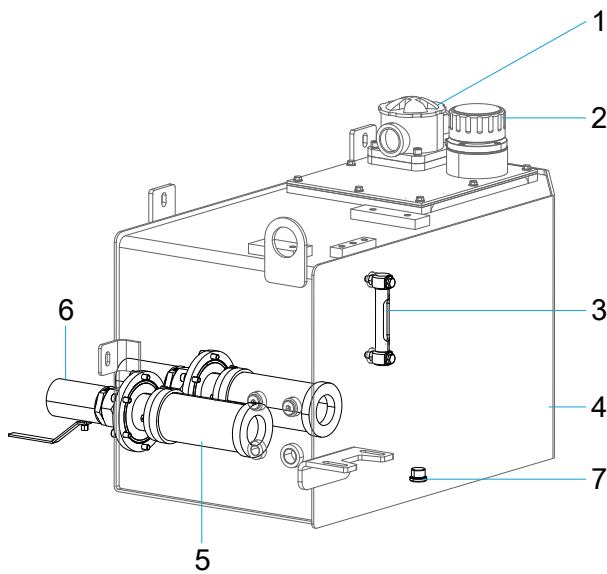


Fig. 23 Hydraulic Tank Structure

Table 8-23 Hydraulic Tank Components

No.	Description
1	Oil Return Filter
2	Air Filter
3	Level indicator
4	Tank body
5	Oil Suction Filter
6	Shut-off valve
7	Drain plug

Air Filter

It is recommended to clean the hydraulic tank air filter every 3 months or after 250 hours of operation, and replace it every 6 months or after 500 hours of operation. The replacement interval should be shorter in harsh operating environments.

The steps to check and clean the air filter are as follows:

1. Turn off the machine.
2. Locate the air filter at the top of the hydraulic tank.
3. Remove the air filter.
4. Check the hydraulic tank air filter: air should pass through the air filter smoothly.
5. If the air cannot pass through the air filter smoothly, clean the air filter with a neutral solvent and dry it using an air gun.

6. Check the air filter again, repeat as necessary until the air passes through the filter smoothly.
7. Install the air filter back onto the tank.

Oil Return Filter

It is recommended to replace the hydraulic tank oil return filter element after the first 50 hours of operation and every 3 months or 250 hours of operation thereafter. The replacement interval should be shorter in harsh operating environments.

1. Turn off the machine.
2. Open the turntable cover, and locate the return filter on top of the hydraulic tank.
3. Remove the oil return filter.
4. Loosen the cover at the top of the filter and remove the oil filter element.
5. Apply a thin film of oil to the gasket of the new oil return filter element.
6. Clean the oil return filter housing, install a new element and then reinstall the oil return filter.
7. Clean the hydraulic oil spilled during the process.
8. Start the machine from the ground.
9. Check the oil return filter and related components for leakage.

Oil Suction Filter

It is recommended to replace the hydraulic tank oil suction filter screen every year or after 1000 hours of operation. The replacement interval should be shorter in harsh operating environments.

Every time the hydraulic oil is replaced, the hydraulic tank oil suction filter screen should also be replaced.

8.4 HYDRAULIC OIL

Check the Oil Level

Maintaining the hydraulic oil at a proper level is essential for the normal operation of the machine. If the hydraulic oil level is too high, oil will overflow from the tank during operation. If the hydraulic oil level is too low the oil pump will suck in air during operation, which will lead to component damage.

1. Make sure the machine is in stowed position.
2. Locate the hydraulic tank, and visually inspect the side of the tank. The hydraulic oil level should be within the scale range of the tank's level gauge.

3. If necessary, fill with correct hydraulic oil according to the **Oil Specifications**, and do not overfill the tank.
4. Check the hydraulic tank and fittings for leakage.

Check the Cleanliness of the Hydraulic Oil

Check the hydraulic oil. If any of the following conditions are observed the hydraulic oil must be replaced.

- The hydraulic oil is milky white and cloudy.
- The hydraulic oil is black.
- Check a small sample of the hydraulic oil using a bright source of light to see if there are reflections of metal particles or rub the hydraulic oil with two fingers to locate metal particles.
- The hydraulic oil has an unusual smell.

Change the Hydraulic Oil

It is recommended to change the hydraulic oil every year or after 1000 hours of operation. The replacement interval should be shorter in harsh operating environments.

NOTICE

Every time the hydraulic oil is changed the hydraulic tank suction filter must be replaced.

1. Turn off the machine and make sure the hydraulic oil has cooled to room temperature.
2. Locate the hydraulic tank.
3. Close the hydraulic shut-off valve located on the side of the tank.
4. Place a suitable container under the drain plug at the bottom of the tank.
5. Remove the drain plug at the bottom of the tank and completely drain the oil into the container.
6. Install the drain plug.
7. Disconnect and plug the hydraulic tank suction pipe and return pipe.
8. Remove the cover from the tank after removing the upper cover fastening bolts of the hydraulic tank.
9. After cleaning the inside of the tank with a neutral solvent, open the drain plug to drain the solvent.
10. After the hydraulic tank is dry, install the cover and connect the suction pipe and return pipe to the hydraulic oil tank.
11. Fill with correct hydraulic oil according to the **Oil Specifications**, and never overfill the tank.

12. Open the hydraulic shut-off valve.

8.5 HYDRAULIC OIL HIGH-PRESSURE FILTER

It is recommended to replace the hydraulic oil high-pressure filter every 3 months or after 250 hours of operation. The replacement interval should be shorter in harsh operating environments.

1. Turn off the machine.
2. Locate the high-pressure filter.
3. Place a suitable container under the high-pressure filter.
4. Use a wrench to remove the filter housing.
5. Remove the filter element from the housing.
6. Check the seal on the mounting surface of the housing and, if necessary, replace the seal.
7. Install a new filter element into the housing.
8. Tighten the housing onto the filter fully and then loosen it by 1/4 turn.
9. Clean up any hydraulic oil that was spilled during the process.
10. Start the machine.
11. Check the high-pressure filter and related components for leakage.

8.6 LEVELING CYLINDER BLEEDING

Bleed the leveling cylinder before the machine is put into service for the first time, and after replacing the leveling cylinder or the counterbalance valve.

1. Make sure the platform is unloaded.
2. Turn the ground/platform control selector switch to the ground control position, and perform the following operations from the ground control position.
3. Operate the boom to lower into position.
4. Perform upward/downward platform leveling for 3–5 cycles:
 - 1) Activate platform leveling switch for upward leveling, hold at maximum position for 3–5 sec.
 - 2) Activate platform leveling switch for upward leveling, hold at minimum position for 3–5 sec.
5. Operate the boom to lift into position.

6. Perform upward/downward platform leveling for 3–5 cycles:
 - 1) Activate platform leveling switch for upward leveling, hold at maximum position for 3–5 sec.
 - 2) Activate platform leveling switch for upward leveling, hold at minimum position for 3–5 sec.
7. Perform 3–5 complete cycles (Steps 1–4) until leveling movements exhibit no overshooting and no response lag.

8.7 BLEED THE OSCILLATING CYLINDER

Bleed the oscillating cylinder before the machine is put into service for the first time, and after replacing the oscillating cylinder or the counterbalance valve.

1. Make sure the machine is in stowed position.
2. Place a beveled wooden block measuring 120mm (4.7 in) in height in front of the machine.
3. Drive machine to place the left front wheel onto the wooden block, and then drive off the wooden block.
4. Drive machine to place the right front wheel onto the wooden block, and then drive off the wooden block.
5. Repeat steps 3 and 4 until bleeding of the left/right oscillating cylinders is complete.
6. Perform a counterbalance valve locking check.

8.8 OSCILLATING FUNCTION CHECK

After bleeding the oscillating cylinder perform a counterbalance valve locking check. The oscillating function must be checked every 3 months or 250 hours of operation, or after any system components have been replaced, or in case of abnormal system operation.

Check Counterbalance Valve Locking

It is recommended to check the counterbalance valve locking before the machine is put into use for the first time, and afterwards every 3 months or 250 hours of operation. If any hydraulic component such as the oscillating cylinder or the counterbalance valve is replaced later, the counterbalance valve must also be checked for locking.

1. Place a beveled wooden block measuring 120mm (4.7 in) in height in front of the machine.

2. Adjust the boom to horizontal and fully extended position, and slowly rotate the turntable to position the boom above the right front wheel.
3. Drive machine to place the left front wheel onto the wooden block.
4. Turn off the machine, and measure the extension and retraction length of right front oscillating cylinder immediately.
5. After 15 mins, measure the extension and retraction length of right front oscillating cylinder again.
6. Compare the two measured lengths: the oscillating cylinder on the load-bearing side shall not retract (the retraction length within 1mm is normal).
7. Repeat the above steps to check the left front wheel oscillating cylinder.
8. If the oscillating cylinder does not work properly have qualified maintenance personnel rectify the issue before you continue to operate the machine.

Check the Tie Rod of the Oscillating Multi-way Valve

Visually check whether the tie rod of the oscillating multi-way valve is properly tightened.

Oscillating Axle Function Test

1. Make sure the boom is in stowed position.
2. Place a beveled wooden block measuring 120mm (4.7 in) in height in front of the machine.
3. Drive machine to place the right steered wheel onto the wooden block.
4. Have an assistant check that the remaining three wheels have close contact to the ground.
5. Drive the machine off the wooden block.
6. Drive machine to place the left steered wheel onto the wooden block.
7. Have an assistant check that the remaining three wheels have close contact to the ground.

8.9 CYLINDER DRIFT INSPECTION

Minor cylinder drift within specified tolerances is considered normal operation, while excessive drift may indicate hydraulic leakage. In order to ensure normal operation of the machine, it is recommended to conduct a drift inspection on the platform every 3 months or after 250 hours of operation to determine whether a drift inspection of the cylinder is required.

Place rated load on the platform, fully extend the main boom. Measure the drift from the platform to the ground with the machine powered off. If the platform drifts down more than 50 mm (1.97 in) in 15 minutes, perform a cylinder drift inspection as per the following procedures.

1. Place the machine in an environment with stable ambient temperature.
2. Place rated load on the platform, fully extend the main boom.
3. Measure drift at the cylinder piston rod with a calibrated dial indicator.
4. The maximum allowable drift for cylinders with different bores is shown in the table below. If the measured value is less than the maximum allowable drift, the cylinder is operating normally. If the measured value is greater than the maximum allowable drift the cylinder is not operating normally. Contact qualified service technicians for inspection and repair.

Table 8-24 Maximum allowable drift for different cylinder bore diameters

Cylinder bore diameter (mm/in)	Maximum allowable drift in 15 minutes (mm/in)
63/2.48	0.96/0.037
80/3.15	0.63/0.025
100/3.94	0.39/0.015
125/4.92	0.23/0.009
160/6.30	0.14/0.006
180/7.09	0.13/0.005
200/7.87	0.10/0.0038
220/8.66	0.08/0.0030

NOTICE




The data is based on a cylinder leakage value of 6 drops per minute. Since the hydraulic oil expands and contracts depending on temperature, the tolerance for the cylinder drift is up 7/10000 or 0.07 % for each temperature change of 1°C.

NOTICE


All hydraulic cylinders that may potentially cause platform drift – including lift cylinders, upper leveling cylinders, jib cylinders, etc. – must undergo dedicated drift testing.

8.10 HYDRAULIC SYMBOLS

   Table 8-25


Symbols	Name
	Filter
	Brake
	Emergency power unit
	Hydraulic motor
	Pressure-relief valve
	3-position 4-way solenoid directional valve
	2-position 4-way solenoid directional valve
	Priority valve
	Check valve

8.11 HYDRAULIC SCHEMATIC DIAGRAM

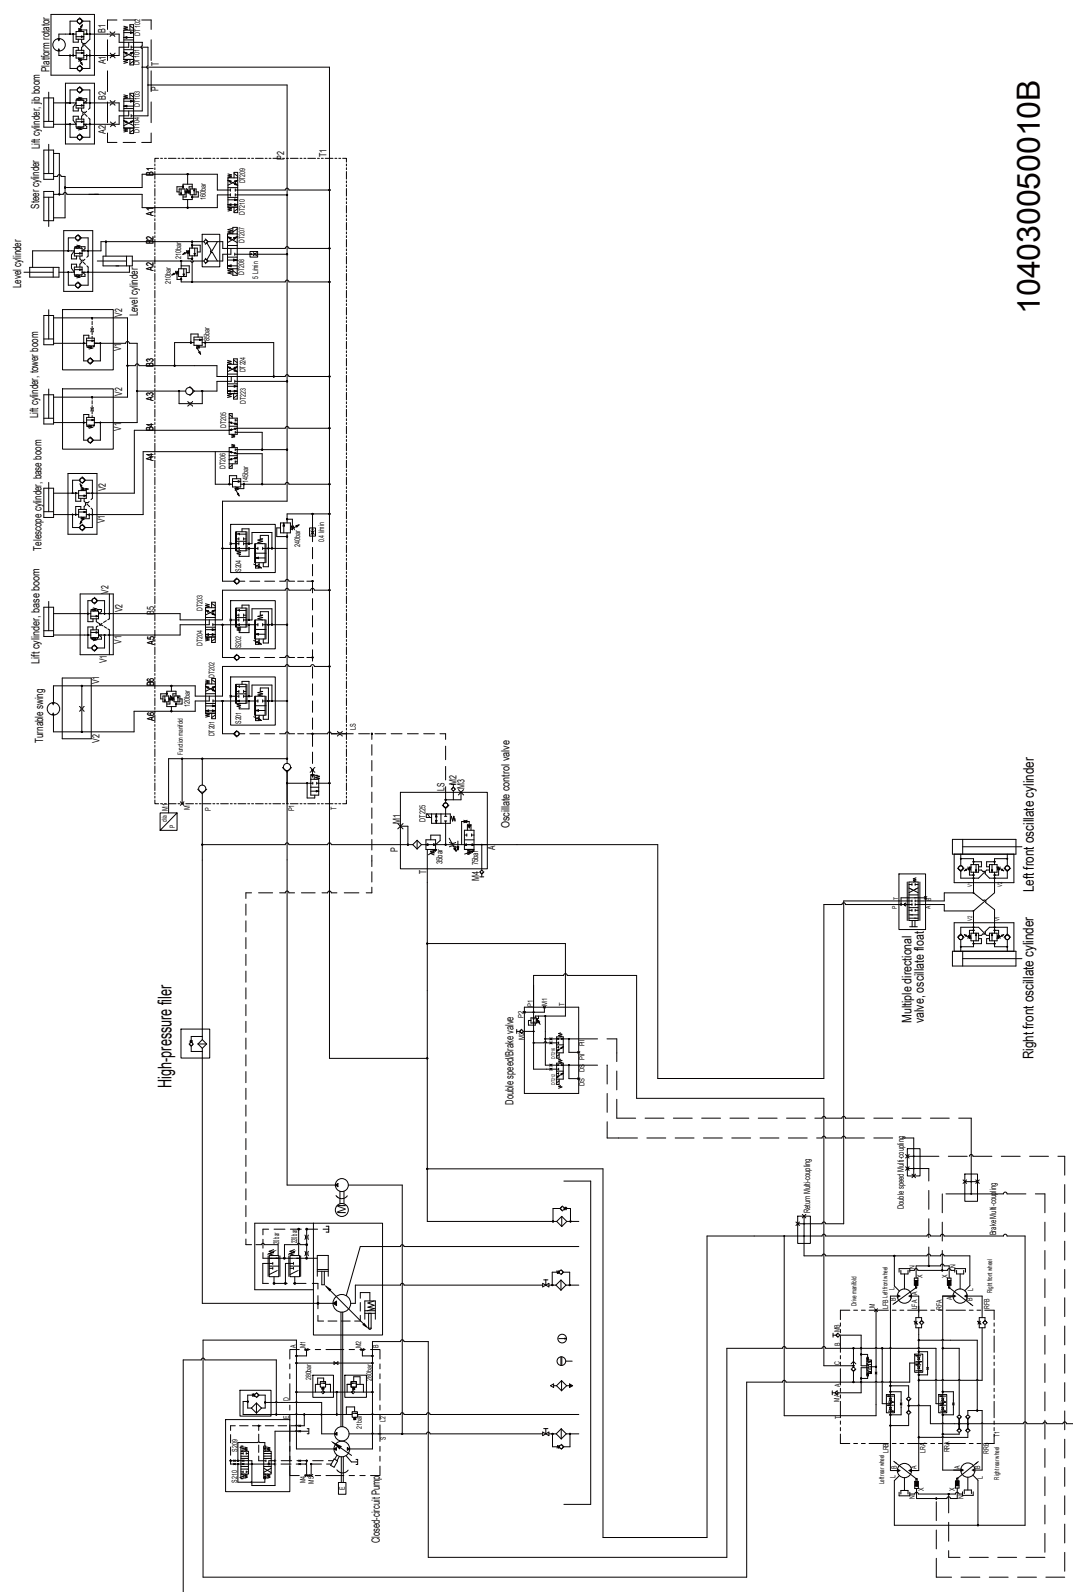

104030050010B

Fig. 24 Hydraulic Schematic Diagram (Non-continuous Slewing)

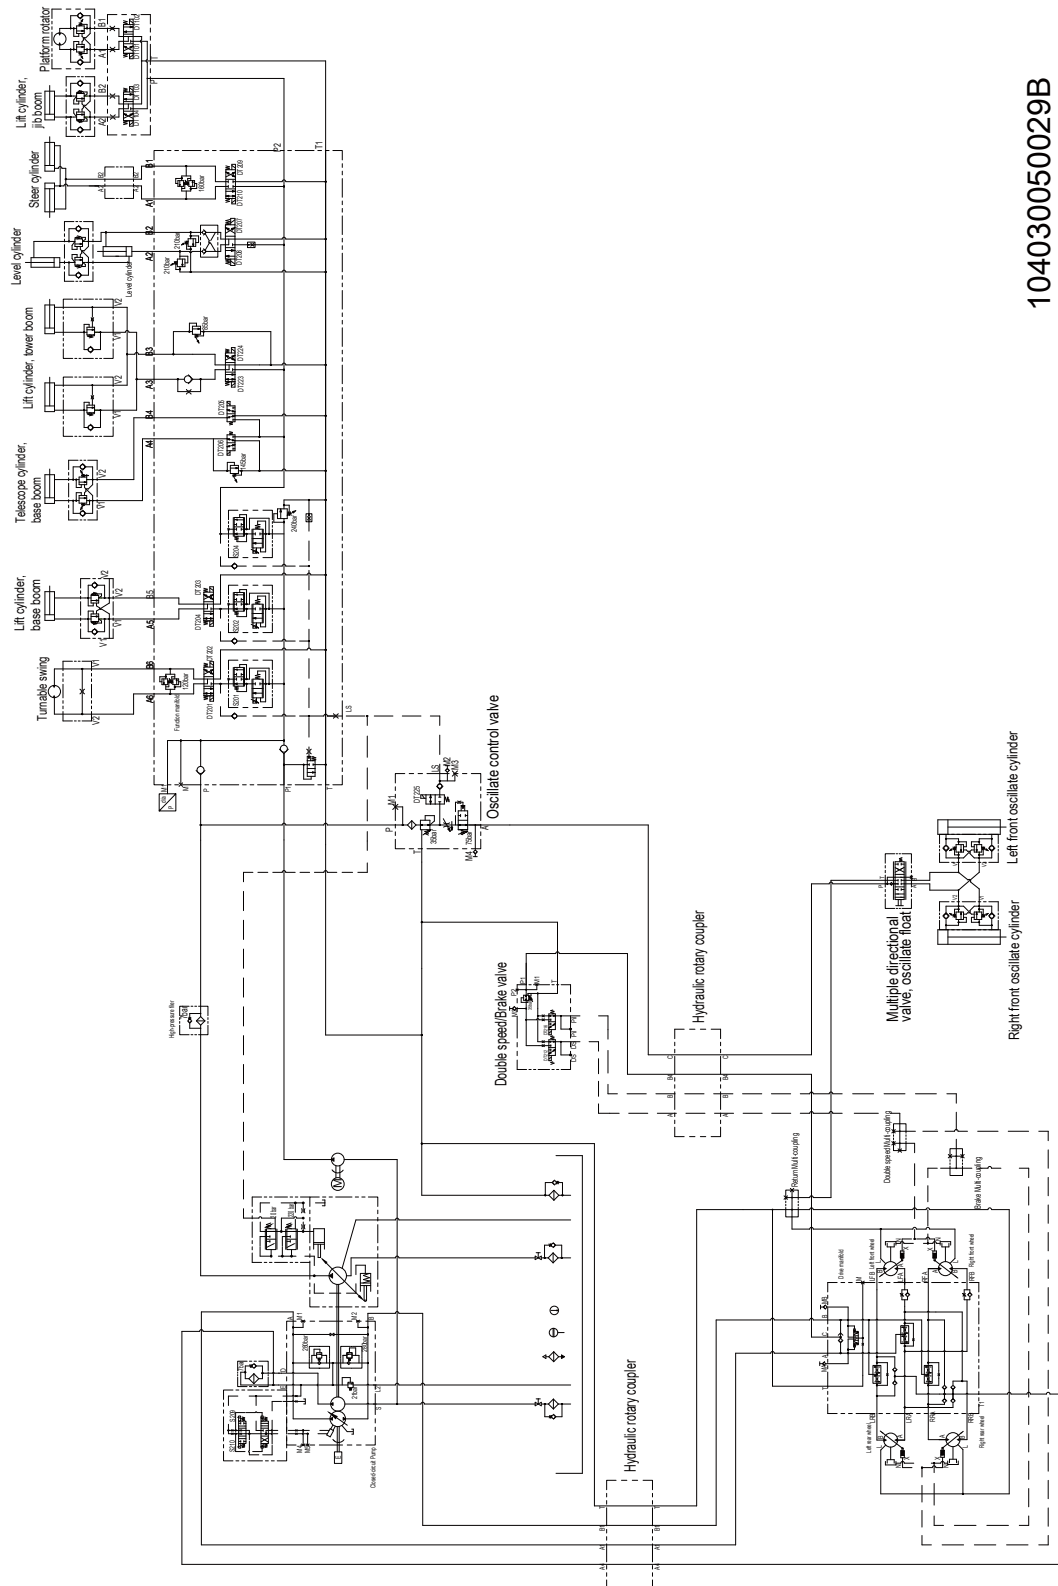

104030050029B

Fig. 25 Hydraulic Schematic Diagram (Continuous Slewing)

This Page Intentionally Left Blank

9 ELECTRICAL SYSTEM

Lead-acid batteries are used to provide power for the engine, emergency pump and electrical control system. The batteries are charged through the DC generator in the engine. The control system is protected by a power-off switch.

Proper maintenance of the electrical equipment is essential for the proper and safe operation of the machine. If the machine operates with the electrical components damaged or corroded, it may lead to unsafe operation or serious personal injury.

9.1 LAYOUT OF ELECTRICAL ELEMENTS

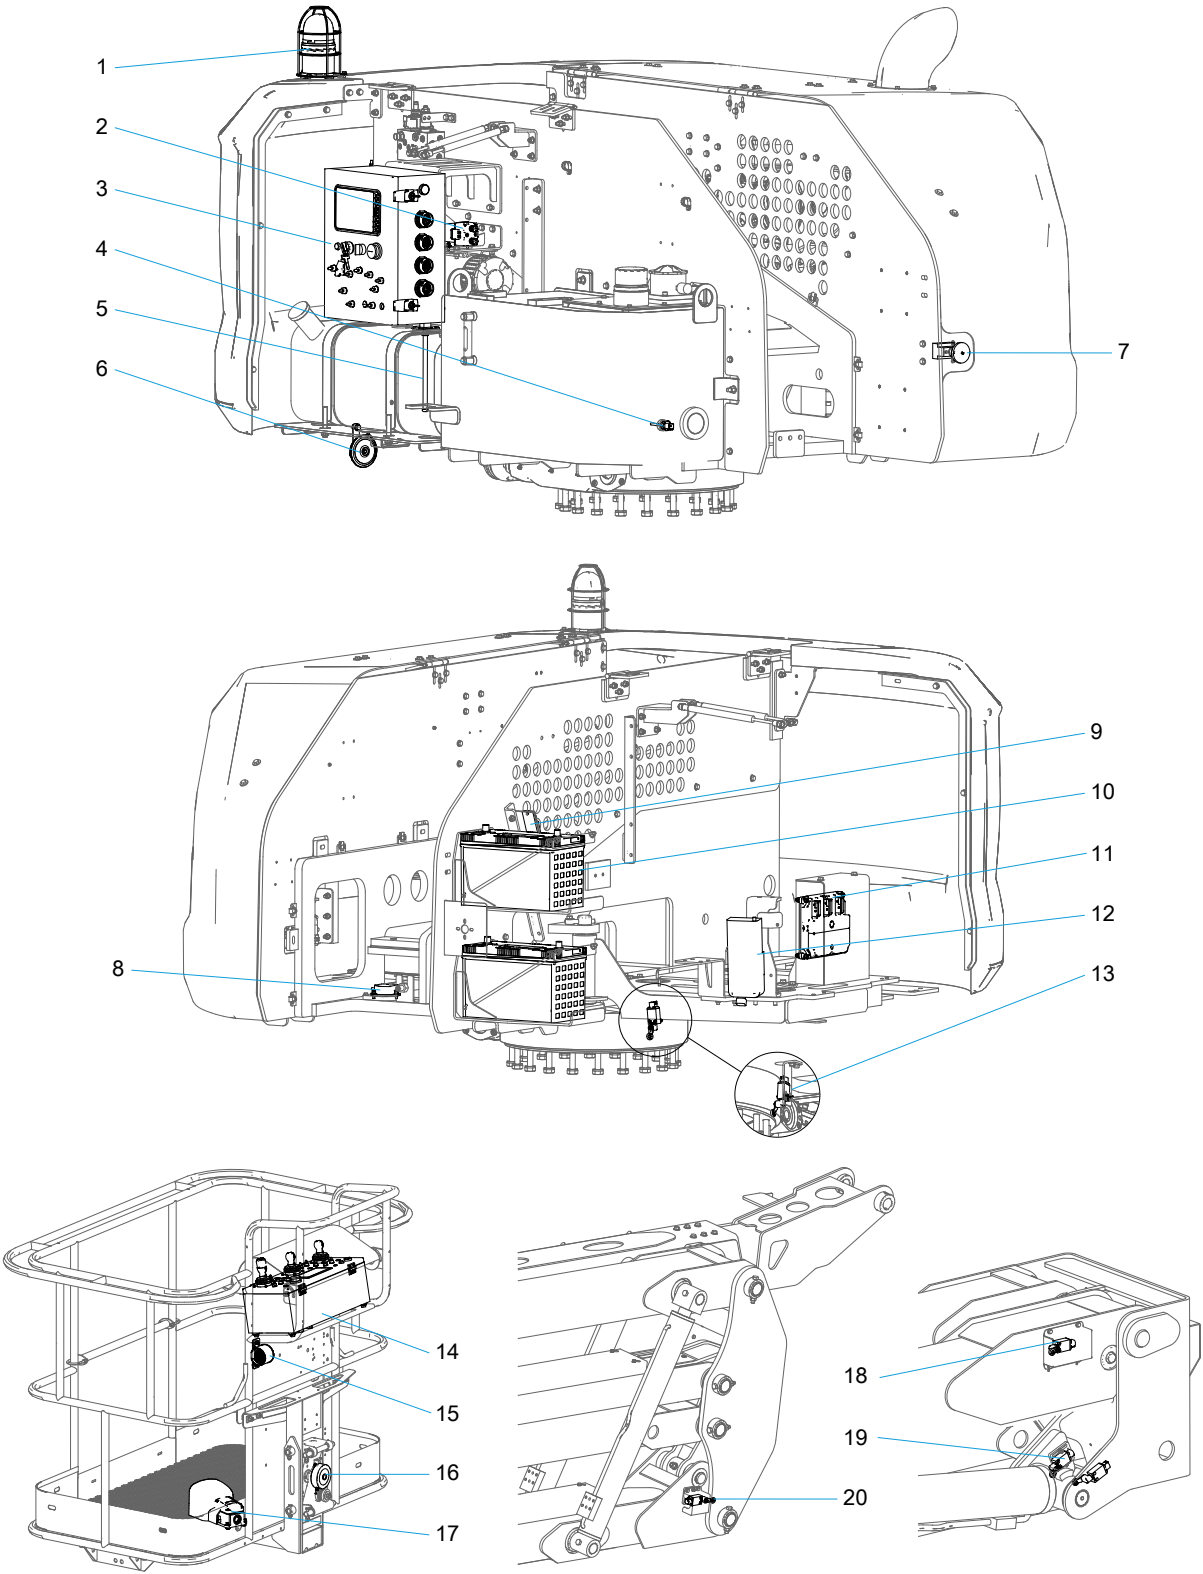


Fig. 1

Table 9-1

1. Warning light	2. Contactor	3. Turntable controller assembly
4. Temperature sensor	5. Liquid level sensor	6. Horn
7. Power-Off Switch	8. Level sensor	9. Fuse
10. Starting battery	11. Power switch box	12. Start-stop controller
13. Limit switch	14. Platform controller assembly	15. Voice horn
16. Weighing sensor	17. Foot switch	18. Limit switch
19. Limit switch	20. Limit switch	

9.2 MAINTENANCE-FREE LEAD-ACID BATTERY

- Check cable connections and securing nuts for looseness monthly.
- Inspect the battery casing for bulging, leakage, or cracks quarterly.
- Clean terminals to prevent oxidation quarterly (use a baking soda solution, then apply petroleum jelly or anti-oxidation grease). Disconnect the battery before cleaning, and wear proper hand/face protection.
- Avoid storing the battery in a discharged state, as this will shorten its lifespan.

9.3 ELECTRICAL SYMBOLS

Table 9-2

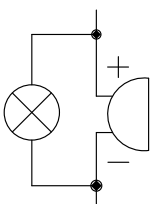
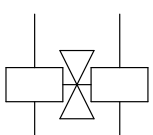
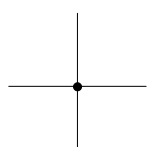
Symbols	Description
	Buzzer
	Valve
	Two lines, connected

Table 9-2 (continued)

 
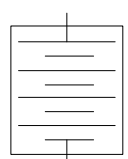
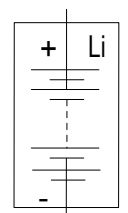
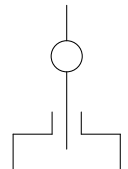
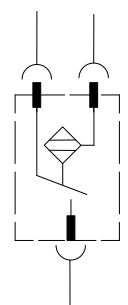
Symbols	Description
	Electric motor
	Storage battery
	Lithium Battery
	Toggle switch
	Level switch

Table 9-2 (continued)

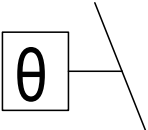
 
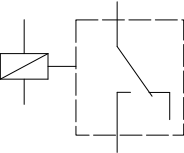
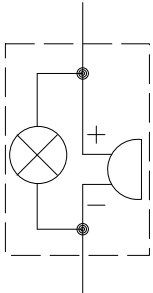
 
 
 
 
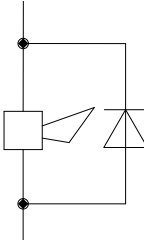
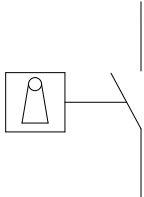
Symbols	Description
	Oil temperature switch
	Delay relay
	Power-off switch
	Relay
	Warning light
	Valve
	Two lines, not connected

Table 9-2 (continued)

Symbols	Description
	Proximity switch pressure sensor
	Fuel level sensor
	Horn
	Key switch
	Preheating wire

104030060008A


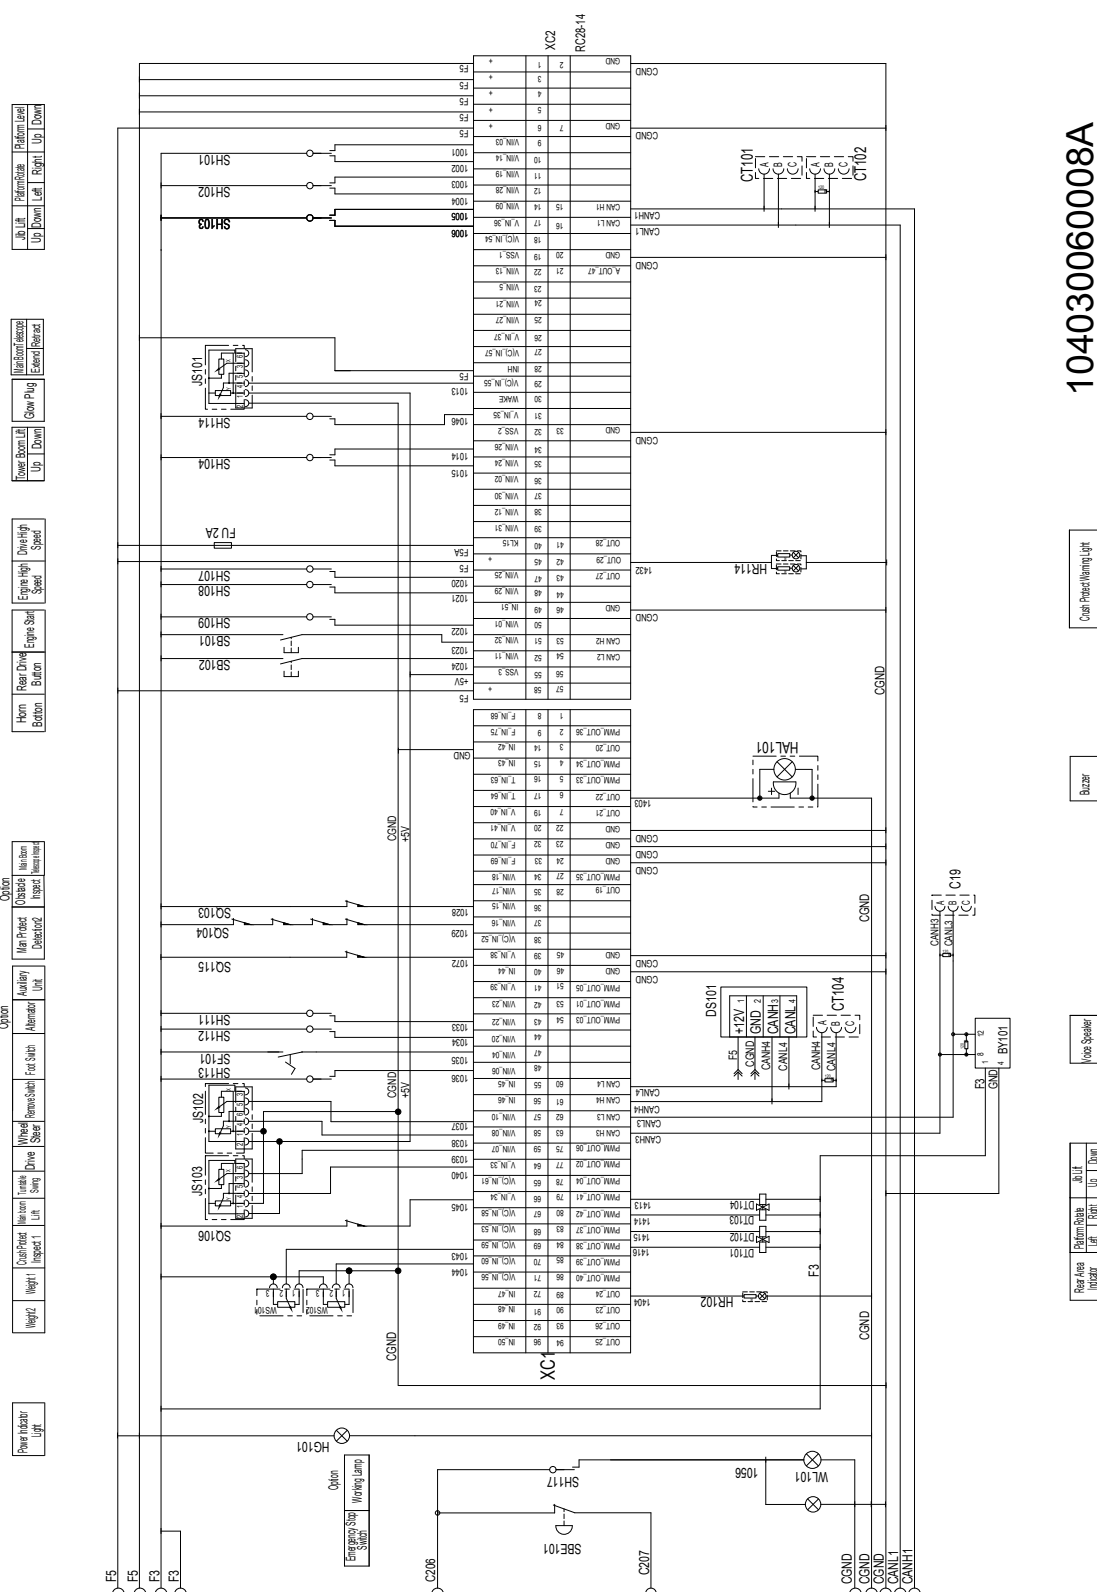


Fig. 2 Electrical Schematic Diagram – Platform



CT04)



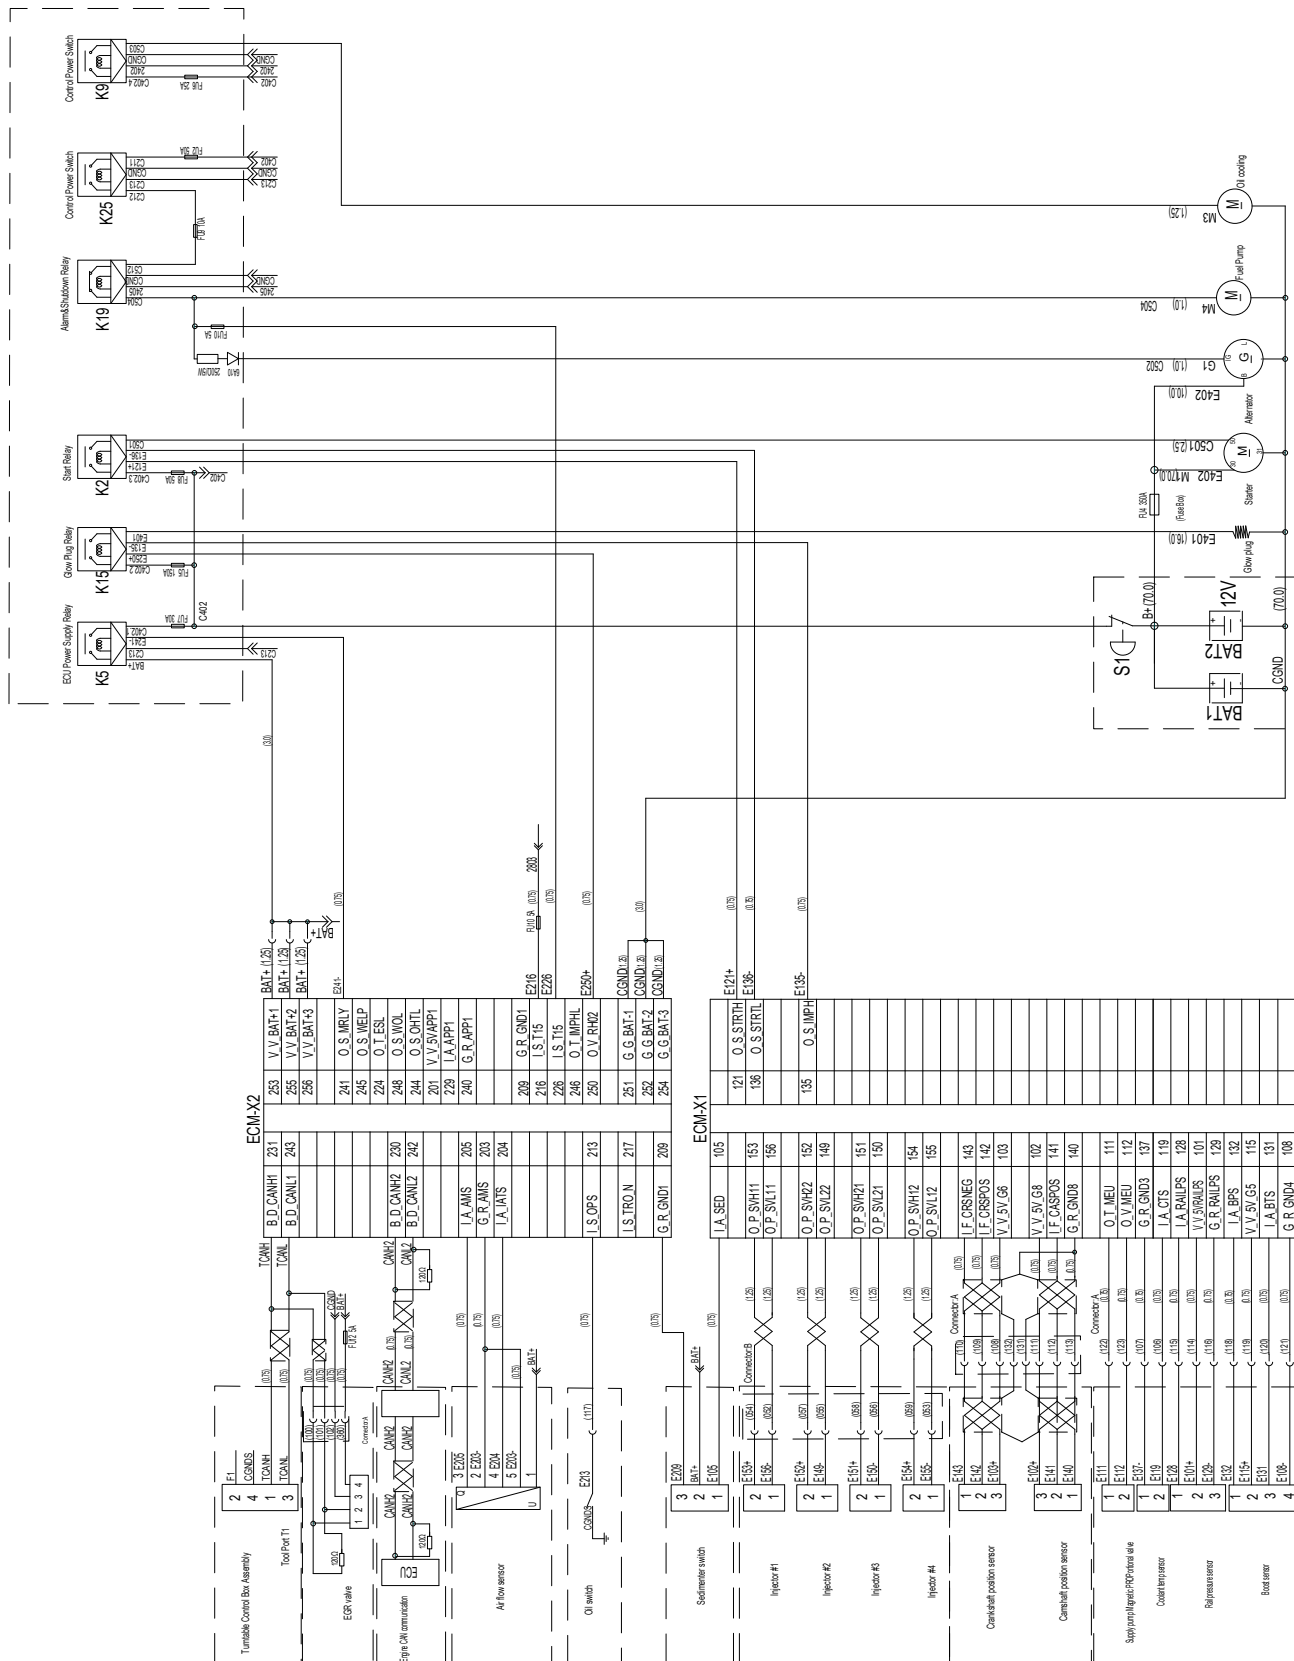

105084063086A

Fig. 5 Electrical Schematic Diagram – Engine (Kubota V2403-CR-TIE4B)

10 TROUBLESHOOTING GUIDE

10.1 FAULTS DESCRIPTION

In case of an alarm or fault, you can check the alarm message on the **ALARM INFO** interface of the turntable controller.

Table 10-1 Faults Description

Fault description	Inspection method
Alarm message	
CAN Alarm	Check the CAN communication line for normal power supply and wiring.
Main Controller Alarm	Main controller fault: Check if the turntable controller works normally and if its program is correct.
Motor Controller Alarm	Electric motor controller communication fault: Check if the communication between the electric motor controller and the main controller is normal and if the electric motor controller works normally.
Chassis Controller Alarm	Chassis controller communication fault: Check if the communication between the chassis controller and the main controller is normal and if the chassis controller program is correct.
Platform Controller Alarm	Platform controller communication fault: Check if the communication between the platform controller and the main controller is normal and if the platform controller program is correct.
Engine ECU Alarm	Engine ECU communication fault: Check if the communication between the engine ECU and the main controller is normal and if the engine ECU program is correct.
TBox Alarm	TBox communication fault: Check the connection of the communication line and other wires; if the problem persists, try replacing the TBox module or the turntable controller.
Engine Water Temp. Alarm	Engine coolant temperature being too high: Check the temperature sensor and its wiring harness for proper function
Hydraulic Temp. Alarm	Hydraulic oil temperature being too high: Shut down the machine, allowing the hydraulic oil to cool down to normal temperature; check the temperature sensor and its wiring harness for proper function
Scope Alarm	Boom has exceeded the specified working envelope: Check the actual boom position and the actual value and AD value of the sensor, and check the wiring harness
Overload Alarm	Load on the platform has exceeded its rated load: Check whether the platform load exceeds the rated load, and whether the weighing sensor has been calibrated normally
Sys_Pressure Alarm	Check the system pressure sensor and its wiring harness for proper function
Air Filter Alarm	Air filter element clogged: Check if the air filter element is clogged; if so, change the air filter
Obstacle Inspect Alarm	Check the obstacle detection switch and its wiring harness for proper function

Table 10-1 Faults Description (continued)

Fault description	Inspection method
Heavy Load Warning	Load on the platform has exceeded the design load: Check the platform load and the actual value and AD value of the sensor.
Float Pressure Alarm	Check the oscillating pressure sensor and its wiring harness for proper function
Fuel Level/Battery Capacity	Check whether the fuel level is too low, whether the sensor is correctly wired, and whether the sensor works normally; Check if the battery voltage is too low, and if the battery has been damaged
Rope Broken Alarm	Check the boom wire ropes and the wiring of the proximity switch, and check the harness
Turntable Tilt Alarm	Check whether the machine tilt angle has exceeded the maximum allowable inclination (see Machine Specifications), and check the wiring harness.
Engine Alarm	See Engine Fault Codes for details.
Crush Protect Alarm	The operator protective function has been triggered, you can release action restrictions and remove the alarm as follows: - Depress the foot switch while operating the release switch on the platform controller – the boom may be retracted and lowered, and the turntable may rotate slowly. - Ensure the machine is in a safe position, lift the round bar up until the angle brackets on both sides are attracted by the magnet again. Then, the strobe light will turn off, and the machine will resume all operations.
Engine Oil Pre. Alarm	Lubricating oil pressure being too low: Check the pressure sensor and its wiring harness for proper function
Platform Tilt Alarm	Check whether the platform tilt angle exceeds the limit.
Engine Fault Alarm	See Engine Fault Codes for details.
Fault message	
Action Enable Ab.	Footswitch or enable switch 7-second limit alarm: Check the foot switch or enable switch for proper function.
Platform SW Ab.	Check whether the platform switch has been pressed or pushed-down erroneously; if this does not solve the problem, please try to replace the platform controller.
Turntable SW Ab.	Check whether the turntable switch has been pressed or pushed-down erroneously; if this does not solve the problem, please try to replace the turntable controller.
Platform Potentionmeter Fa.	Check the platform potentionmeter data, and check the CAN communication between the turntable and platform
Engine Speed Fault	Check the engine speed signal or the engine for fault.
Fuel Level Fault	Check the fuel level sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the fuel level sensor.
MB Length 1 Fault	Check the length sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the main boom length sensor.
MB Length 2 Fault	Check the length sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the main boom length sensor.

Table 10-1 Faults Description (continued)

Fault description	Inspection method
MB Angle 1 Fault	Check the angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the main boom angle sensor.
MB Angle 2 Fault	Check the angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the main boom angle sensor.
TB Angle 1 Fault	Check the angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the articulating boom angle sensor.
TB Angle 2 Fault	Check the angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the articulating boom angle sensor.
Main Valve System Pre. Fa.	Check the main system pressure sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the main system pressure sensor.
MB Angle Comp. Fault	Check whether the actual value and AD value of main boom angle sensor 1 and 2 are normal, and whether the sensor wiring is proper; try to calibrate the main boom angle sensor.
MB Length Comp. Fault	Check whether the actual value and AD value of main boom length sensor 1 and 2 are normal, and whether the sensor wiring is proper; try to calibrate the main boom length sensor.
MB Telescope Joystick Fault	Check the main boom telescope joystick data, and check the CAN communication between the turntable and platform
MB Lift Joystick Fault	Check the main boom lift joystick data, and check the CAN communication between the turntable and platform
Turntable Swing Joystick Fault	Check the turntable slew joystick data, and check the CAN communication between the turntable and platform
Drive Joystick Fault	Check the travel joystick data, and check the CAN communication between the turntable and platform
Steer Joystick Fault	Check the steer joystick data, and check the CAN communication between the turntable and platform
Jib Rotate Joystick Fault	Check the jib rotate joystick data, and check the CAN communication between the turntable and platform
TB Angle Comp. Fault	Check whether the actual value and AD value of articulating boom angle sensor 1 and 2 are normal, and whether the sensor wiring is proper; try to calibrate the articulating boom angle sensor.
Axle Sensor Fault (Front-Left)	Check the front-left axle angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the front-left axle angle sensor.
Axle Sensor Fault (Front-Right)	Check the front-right axle angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the front-right axle angle sensor.
Axle Sensor Fault (Rear-Left)	Check the rear-left axle angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the rear-left axle angle sensor.
Axle Sensor Fault (Rear-Right)	Check the rear-right axle angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the rear-right axle angle sensor.

Table 10-1 Faults Description (continued)

Fault description	Inspection method
Sensor Weight 1 Fault	Check the weighing sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the weighing sensor.
Sensor Weight 2 Fault	Check the weighing sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the weighing sensor.
Sensor Level 1 Fault	Check the leveling sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the leveling sensor.
Sensor Level 2 Fault	Check the leveling sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the leveling sensor.
Jib Angle Fault	Check the angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the jib angle sensor.
Weight Sensor Comp. Fa.	Check whether the actual value and AD value of weighing sensor 1 and 2 are normal, and whether the sensor wiring is proper; try to calibrate the weight.
Level Sensor Comp. Fa.	Check whether the actual value and AD value of leveling sensor 1 and 2 are normal, and whether the sensor wiring is proper; try to calibrate the platform leveling relative angle sensor.
Steer Sensor Fault (Rear-Right)	Check the rear-right wheel angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the rear-right wheel angle sensor.
Steer Sensor Fault (Rear-Left)	Check the rear-left wheel angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the rear-left wheel angle sensor.
Steer Sensor Fault (Front-Right)	Check the front-right wheel angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the front-right wheel angle sensor.
Steer Sensor Fault (Front-Left)	Check the front-left wheel angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the front-left wheel angle sensor.
MB Relative Angle 1 Fault	Check the main boom relative angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the main boom relative angle sensor.
MB Relative Angle 2 Fault	Check the main boom relative angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the main boom relative angle sensor.
MB Relative Angle Comp. Fault	Check whether the actual value and AD value of main boom relative angle sensor 1 and 2 are normal, and whether the sensor wiring is proper; try to calibrate the main boom relative angle sensor.
TB Relative Angle 1 Fault	Check the articulating boom relative angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the articulating boom relative angle sensor.
TB Relative Angle 2 Fault	Check the articulating boom relative angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the articulating boom relative angle sensor.
TB Relative Angle Comp. Fault	Check whether the actual value and AD value of articulating boom relative angle sensor 1 and 2 are normal, and whether the sensor wiring is proper; try to calibrate the articulating boom relative angle sensor.

Table 10-1 Faults Description (continued)

Fault description	Inspection method
TB Telescope Pressure 1 Fault	Check the articulating boom telescope pressure sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the articulating boom telescope pressure sensor.
TB Telescope Pressure 2 Fault	Check the articulating boom telescope pressure sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the articulating boom telescope pressure sensor.
TB Lift Pressure 1 Fault	Check the articulating boom lift pressure sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the articulating boom lift pressure sensor.
TB Lift Pressure 2 Fault	Check the articulating boom lift pressure sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the articulating boom lift pressure sensor.
Connection Tilt Alarm	Check if the pivot has tilt; if so, reset the pivot.
Connection Angle Fault	Check the pivot angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the pivot angle sensor.
Turntable H-Sensor X Comp. Fault	Check whether the level sensor is normal, and whether the sensor wiring is proper; try to calibrate the turntable level sensor X.
Turntable H-Sensor X Fault	Check the level sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the turntable level sensor.
Turntable H-Sensor Y Fault	Check the level sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the turntable level sensor.
Turntable H-Sensor Y Comp. Fault	Check whether the level sensor is normal, and whether the sensor wiring is proper; try to calibrate the turntable level sensor Y.
TB Length 1 Fault	Check the articulating boom sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the articulating boom length sensor.
TB Length 2 Fault	Check the articulating boom sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the articulating boom length sensor.
TB Length Comp. Fault	Check whether the actual value and AD value of articulating boom length sensor 1 and 2 are normal, and whether the sensor wiring is proper; try to calibrate the articulating boom length sensor.
Electromagnetic Clutch Fault	Check the electromagnetic clutch for proper operation, and check if the wiring harness is disconnected.
Lift Motor Controller Fault	See Motor Controller Fault Codes for details.
Drive Motor Controller Fault	See Motor Controller Fault Codes for details.
BMS Fault	See Lithium Battery BMS Fault Codes for details.
Motor Driver Fault	See Motor Driver Fault Codes for details.

Table 10-1 Faults Description (continued)

Fault description	Inspection method
Cover not closed	The turntable cover is not closed properly, automatically disconnecting the high-voltage power supply. Re-close the turntable cover to engage the travel switch, then the lithium battery can be powered on normally.
Charging Pack Level 1 Fault	Contact Sinoboom after-sales personnel to check the specific backend data and find out the fault cause.
Battery pack maintenance switch disconnected	The maintenance switch at the bottom of the main lithium battery box has been disconnected. It is recommended to verify whether the machine meets the conditions for the installation of the maintenance switch.
Charging Pack Level 2 Fault	Contact Sinoboom after-sales personnel to check the specific backend data and find out the fault cause.
Low battery level	Check the battery voltage, and check whether the battery has been damaged
Insufficient Fuel	Check whether the fuel level is too low and if the sensor is correctly wired, and check the sensor for proper function
MB Angle Limit	Main boom lifting angle exceeded the specified angle: Check the actual lift angle of main boom and the actual value and AD value of the sensor, and check the wiring harness
Jib luffing relative angle fault	Check the jib luffing relative angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the jib luffing relative angle sensor.
Jib rotation relative angle fault	Check the jib rotating relative angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the jib rotating relative angle sensor.
Jib leveling relative angle fault	Check the jib leveling relative angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the jib leveling relative angle sensor.
Platform level relative angle fault	Check the platform level relative angle sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the platform level relative angle sensor.
MB luffing pressure 1 fault	Check the main boom lift pressure sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the main boom lift pressure sensor.
MB luffing pressure 2 fault	Check the main boom lift pressure sensor and sensor wiring for proper function; if this does not solve the problem, please try replacing the main boom lift pressure sensor.
Swing Limit Alarm	Turntable slewing angle exceeded the specified angle: Check the actual slewing angle of turntable and the actual value and AD value of the sensor, and check the wiring harness

10.2 ENGINE FAULT CODES

For the description of fault codes, please refer to the engine maintenance manual provided with the machine.

10.3 BASIC TROUBLESHOOTING

If encountering a special malfunction not mentioned in this manual, repairs must be conducted by professional personnel. Please contact our after-sales service staff for assistance.

Table 10-2 Electrical System Troubleshooting

Fault	Cause	Solution
Platform power indicator not ON	Machine is not powered on.	Check whether the power-off switch has been turned on Check whether the key switch is in the middle position or in the "OFF" position Check whether the emergency stop button on the platform controller or turntable controller is pressed down Check whether the platform controller has any abnormalities or if the system was not powered off and then restarted after downloading the program Check whether the turntable controller has any abnormalities, or if the system was not powered off and then restarted after downloading the program
	Electrical failure	Check whether the leads for power supply and communication are inserted incorrectly or securely Inspect whether each pin wiring of the Deutsch connector on the cables between the platform and turntable matches the drawings Check whether the platform controller plug or the plug of the connecting cable between the platform controller and the turntable controller are in good contact Check whether the platform controller is malfunctioning Check whether the Deutsch plug of the turntable controller is firmly and correctly connected Check if the starting battery is over-discharged or damaged Check if the fuse is burned out
Tilt alarm sounds even with the machine in level position	The level switch is not connected or is defective The machine tilt angle exceeds the maximum allowable inclination	Inspect whether the level switch is inserted properly and firmly Check the level switch for malfunctions Check if the machine is parked on a level surface
Platform fails to be leveled	Electrical failure	Check whether the circuit and the control program have any abnormalities
Platform leveling function not responding	Electrical failure	Check whether the wiring and the control program have any abnormalities
Boom movement switches on platform controller not responding	The switch is not in the correct position	Check whether the key switch is in the middle position or in the "OFF" position Inspect whether the ground/platform control selector switch at the turntable is in Ground control position Inspect whether the emergency stop button at the turntable or platform is pressed down
	Boom function switch not enabled in 7s after the foot switch depressed	Depress the foot switch again
	Electrical failure	Check whether the circuit and the control program have any abnormalities

Table 10-2 Electrical System Troubleshooting (continued)

Fault	Cause	Solution
	Boom function switch failure	Repair or replace the control switch and perform a system test
Boom movement switches on turntable controller not responding	The switch is not in the correct position	Check whether the key switch is in the middle position or in the "OFF" position Inspect whether the ground/platform control selector switch at the turntable is in platform control position Inspect whether the emergency stop button at the turntable or platform is pressed down
	Electrical failure	Check whether the circuit and the control program have any abnormalities
	Boom function switch failure	Repair or replace the control switch and perform a system test
Turntable fails to rotate into a certain direction	Rotation control handle malfunctioning	Clean, repair or replace the rotation control handle
	Foreign matters squeezed between the slewing reducer pinion and slewing bearing gear (only for non-integrated slewing bearing)	Clean foreign matters and check the gear for wear
	Electrical failure	Check whether the circuit and the control program have any abnormalities
Turntable rotating abnormally to the left/right	Insufficiently lubricated slewing bearing or slewing reducer	Lubricate as needed
	Slewing bearing or slewing reducer excessively worn	Replace the slewing bearing
	Electrical failure	Check whether the circuit and the control program have any abnormalities
Machine fails to steer	The switch is not in the correct position	Check whether the key switch is in the middle position or in the "OFF" position Inspect whether the ground/platform control selector switch at the turntable is in Ground control position Inspect whether the emergency stop button at the turntable or platform is pressed down
	Steer control handle malfunctioning	Clean, repair or replace the steer control handle
	Electrical failure	Check whether the circuit and the control program have any abnormalities
Travel control not responding	The switch is not in the correct position	Check whether the key switch is in the middle position or in the "OFF" position Inspect whether the ground/platform control selector switch at the turntable is in Ground control position Inspect whether the emergency stop button at the turntable or platform is pressed down
	Electrical failure	Check the wiring and the control program Inspect whether the display screen has electrical output
	Equipment offline	Inspect whether the Deutsch plug of the platform or turntable controller is wired firmly and/or correctly.

Table 10-2 Electrical System Troubleshooting (continued)

Fault	Cause	Solution
	Movement disabled	Check whether the machine is overloaded or tilted leading to travel function disabled Inspect whether the brake has not been released
Forward traveling function fails without warning	Forward traveling function is malfunctioning	Check whether the PWM plug of the turntable controller is inserted correctly and securely Check whether the forward valve has correct wiring and normal function Check the turntable controller for malfunctions
Reverse traveling function fails without warning	Reverse traveling function is malfunctioning	Check whether the PWM plug of the turntable controller is inserted correctly and securely Check whether the forward valve has correct wiring and normal function Inspect the turntable controller for malfunctions
Tilt warning	Level switch not functioning properly	Inspect whether the air bubble of level switch is not centered Inspect whether the level switch is not connected properly or firmly Inspect the turntable controller for malfunctions
No overload warning	Weight sensor not calibrated for rated load or calibrated with wrong lift height	Check whether the sensor is not calibrated Check whether the wiring of the weighing sensor is incorrect Check whether the sensor has any abnormalities
Machine travels and then stops intermittently after wheels assembled	Battery level low/incorrect calibration	Re-calibrate steering angle sensor Check if the battery level is too low (not as indicated by the battery gauge)
Parameters after setting could not be saved successfully after several attempts.	Saving error	Check whether the set parameters are within the threshold values Inspect the turntable controller for malfunctions Software error, program needs to be upgraded

Table 10-3 Hydraulic System Troubleshooting

Fault	Cause	Solution
Boom and steer movements at platform controller not responding	Oil tank ball valve is closed, and hydraulic oil is insufficient	Inspect whether the ball valve is open, fill with hydraulic oil
	The standby pressure of the variable pump is not 20 bar	Check the system main pressure value on the display screen; inspect if movements can be operated using emergency power, if so, inspect LS feedback pressure of check valve at main valve P-port; inspect variable pump or engine coupling
Platform fails to be leveled during operation	Air is entrained in the pipes of leveling system	Perform manual leveling to bleed air in the system
	Upward and downward leveling cylinders have internal leaks	Inspect and repair the leaking cylinder
	The upward leveling counterbalance valve of main valve has leaks	Replace the counterbalance valve
Oil cylinder lowers automatically	Excessive leakage in counterbalance valve	Replace the counterbalance valve

Table 10-3 Hydraulic System Troubleshooting (continued)

Fault	Cause	Solution
	Excessive internal leakage in cylinder	Inspect and repair the leaking cylinder
Machine fails to travel normally	Closed variable pump with no variable displacement	Inspect and repair the variable pump and motor
	Closed variable pump and coupling worn out	Inspect and repair the variable pump and coupling
	Travel valve fault	Inspect and repair the travel valve
	Brake and two-speed valve fault	Inspect and repair the brake and two-speed valve
	Speed reducer brake fault	Inspect and repair the speed reducer brake
	Excessive leakage in hydraulic motor	Inspect and repair the hydraulic motor
Machine travels normally but has trouble with climbing a slope	Two-speed valve element has seizure abnormally	Inspect if the pressure of traveling at high and low speeds on level ground is abnormal Inspect if the brake and two-speed valve element has seizure
	High-speed control pipe has abnormal pressure relief	Inspect if the damper of the brake and two-speed valve element has clogging
Long braking distance during traveling	Travel joystick has an abnormal neutral position value	Re-calibrate the joystick
	Inappropriate current parameters	Adjust the travel stopping proportion and minimum current value
Machine travels at low speed on level ground automatically after starting engine (if equipped with engine)	Variable pump with incorrect zero position	Measure the standby pressure of variable pump, inspect and repair the variable pump
	Inappropriate current parameter	Inspect the minimum travel current
Display screen shows main system over-pressure and engine can't start normally while starting the engine (if equipped with engine)	Abnormal LS feedback	Inspect or replace the proportional valve of main valve
Boom fails to retract	Proportional valve is not open	Inspect the proportional valve
	Switching valve is not open	Inspect the switching valve
Boom retracting with no buffering	Inappropriate current parameters	Adjust the retract limit speed proportion or retracting minimum current
	Abnormal length sensor	Re-calibrate the length sensor
System remains in high pressure after boom movements stop	The solenoid valve signal of related movements is not cut off in time	Inspect the power-off condition of the solenoid valve
	Proportional valve element has seizure	Replace or clean the proportional valve

Table 10-3 Hydraulic System Troubleshooting (continued)

Fault	Cause	Solution
	LS relief valve of main valve is clogged	Replace or clean the LS relief valve of main valve
	The LS valve of variable pump has seizure and fails to reset	Replace LS valve of variable pump
	The swash plate of variable pump has seizure	Repair or replace the variable pump

Table 10-4 Engine Troubleshooting

Fault	Cause	Solution
Engine fails to start	Starter motor fault	Inspect the starter motor Inspect the fuse of starter motor
	Engine harness protection diode breakdown	Inspect the protection diode on the harness (next to the electronic fuel feed pump) Replace the protection diode
	Abnormal engine oil, coolant	Check the engine oil level Check the coolant level and coolant temperature switch
	Starting battery damaged or low battery level or insufficient cold starting current	Inspect the battery voltage Replace the starting battery
	Electrical harness with poor contact or abnormal wiring	Inspect the harness connector Inspect the wiring circuit Re-plug the harness connector

This Page Intentionally Left Blank

11 FUNCTIONAL TEST

11.1 MACHINE POSITIONS

The machine positions/states covered in this manual are stowed position, transport position, operating position, and non-operating position. Each position is described in detail below:

- **Stowed position:** The articulating boom is fully lowered, and the main boom is fully retracted and lowered.
- **Transport position:** The articulating boom is fully lowered, and the main boom is fully retracted and lowered. The jib and the platform are positioned as appropriate for transportation by trailer or other means.
- **Operating position (elevated):** The down limit switch of the main boom or the articulating boom is not engaged, or the retraction limit switch of the main boom is not engaged.
- **Non-operating position:** The down limit switch of the main boom and the articulating boom is engaged, and the retraction limit switch of the main boom is engaged.

11.2 DRIVE FUNCTION

Driving at a speed that is appropriate for the given circumstances is essential for ensuring machine safety. The drive function should respond quickly and smoothly to the operator's control inputs. Travel operation should be normal, without vibration, impact, and abnormal noise across the full controllable speed range. To ensure proper functioning of the drive system and to check its condition, it is recommended to check the drive functions every 3 months or every 250 hours of operation.

Select a flat, level, unobstructed and solid surface to perform the following tests with the stowed platform carrying one person:

1. Mark two straight lines on the ground at a distance of 30 m (98.4 ft) from each other as the test start and stop lines.
2. Start the machine.
3. Depress the foot switch.
4. Slowly push the travel/steer joystick forward to the full drive position.
5. Move the high/low engine speed selector switch at the platform control box to switch the engine speed to high speed.
6. Push the high/low travel speed selector switch at the platform controller to the upper position to switch the travel speed to high speed.
7. When the front wheels touch the test start line, press a timer to start timing.
8. Keep the machine running at high speed. Stop the timer when the front wheel touches the test stop line.
9. Calculate the travel speed using the measured data, and compare it with the specified maximum travel speed in stowed position.

NOTICE

If the result exceeds the maximum stowed travel speed by 10 % or more, turn off and tag the machine, and contact a qualified service technician for inspection and repair.

11.3 BRAKING FUNCTION

Proper functioning of the brakes is essential for the safe operation of the machine. The brakes should respond to the operator's control inputs quickly and smoothly without any abnormal noise. To ensure proper brake functioning and to check their condition, it is recommended to check the brakes every 3 months or every 250 hours of operation.

Ensuring the machine's braking distance is within the normal range is an important indicator of the braking function being normal. Select a flat, level, unobstructed and solid surface to perform the following tests with the stowed platform carrying one person:

1. Check and make sure that brakes have not been released.
2. Mark a test line on the ground as a reference.
3. Start the machine.
4. Depress the foot switch.
5. Slowly push the travel/steer joystick forward to the full drive position.
6. Move the high/low engine speed selector switch at the platform control box to switch the engine speed to high speed.
7. Push the high/low travel speed selector switch at the platform controller to the upper position to switch the travel speed to high speed.

8. When the front wheel contacts with the test start line, ensure the machine is traveling at high speed and release the travel/steer joystick quickly.
9. Measure the horizontal distance between the test line and the contact point between the front wheel and the ground, which is the braking distance.
10. Compare the measured distance with specified braking distance at full travel speed.

NOTICE

If the measured distance exceeds the specified maximum braking distance, immediately lower the platform to the stowed position, turn off and mark the machine, and contact a qualified service technician for inspection and repair.

11.4 TILT PROTECTION FUNCTION

The proper functioning of the tilt sensing system is essential for the safe operation of the machine. It is recommended to check the tilt sensing system every 3 months or after 250 hours of operation.

Select a flat, level, unobstructed and solid surface to perform the following tests:

In the non-operating position:

1. Start the machine.
2. Push the level switch in the X (left-right)/Y (front-rear) direction by more than 5°. At this point, the tilt alarm should be triggered, the chassis tilt indicator light should flash, all functions should remain unrestricted.
3. Drive the machine so that the two left (or right) wheels are positioned on a slope with an angle greater than 5°. At this point, the tilt alarm should be triggered, the chassis tilt indicator light should flash, all functions should remain unrestricted.
4. Drive the machine off the slope.
5. Drive the machine so that the two front (or rear) wheels are positioned on a slope with an angle greater than 5°. At this point, the tilt alarm should be triggered, the chassis tilt indicator light should flash, all movements should remain unrestricted.
6. Drive the machine off the slope.

In the operating position:

1. Start the machine.
2. Push the level switch in the X (left-right)/Y (front-rear) direction by more than 5°. Then, the tilt alarm should be triggered, the chassis tilt indicator should flash, and certain movements will be restricted. But the following movements are allowed: main boom

retracting and lowering, articulating boom lowering, and slow slewing of turntable.

3. Drive the machine so that the two left (or right) wheels are positioned on a slope with an angle greater than 5°. At this point, the tilt alarm should be triggered, the chassis tilt indicator light should flash, certain movements will be restricted; but the following movements are allowed: main boom retracting and lowering, articulating boom lowering, and slow slewing of turntable.
4. Adjust the boom to the non-operating position, drive the machine off the slope.
5. Drive the machine so that the two front (or rear) wheels are positioned on a slope with an angle greater than 5°. At this point, the tilt alarm should be triggered, the chassis tilt indicator light should flash, certain movements will be restricted; but the following movements are allowed: main boom retracting and lowering, articulating boom lowering, and slow slewing of turntable.
6. Adjust the boom to the non-operating position, drive the machine off the slope.

NOTICE

If during the test it is found that the machine's movements are not restricted as expected, lower the platform to the stowed position, shut down the machine, tag it accordingly, and contact qualified maintenance technicians for inspection and repair.

11.5 WORKING ENVELOPE LIMIT AND OVERLOAD LIMIT FUNCTIONS

The machine's system can detect the position of the boom by means of the travel switch. When the boom reaches the maximum position, the machine movement will be limited.

The system measures the platform load weight by means of the load sensor on the platform. When the platform is overloaded, the machine movement will be limited.

The working envelope limiting function and overload limiting function are essential for the safe operation of the machine. Their failure may affect the stability of the machine. It is required to check the maximum working envelope limit function and overload limit function every 3 months or after 250 hours of operation.

NOTICE

If the machine fails any of the following tests, immediately lower the platform to the stowed position, and turn off the machine. Contact a qualified service technician for inspection and repair.

Select flat, level, unobstructed and solid ground to perform the following procedures with the machine unloaded:

1. Start the machine.
2. Fully raise and lower the boom, retract and extend it twice to make sure that the machine operates free from obvious vibrations and other abnormalities, and is properly lubricated.

Horizontal Reach Restriction Function

From the ground control position:

1. Make sure to fully lower the tower boom and retract the main boom.
2. Adjust the main boom and jib (if equipped) to be level, and extend the main boom until it stops extending. At this point, the buzzer will sound at both the turntable control position and the platform control position.
3. Measure the distance from the center of the slewing bearing to the outermost edge of the platform: the tolerance of the measured value should not exceed the maximum horizontal reach ± 200 mm (7.87 in).
4. Try to operate the main boom extend and lift/lower functions, which should be inoperative.
5. Try to operate the main boom retract and turntable slew functions, which should be operative normally.

Overload limit function

From the ground control position:

1. Lift the articulating boom in place.

NOTICE

During the articulating boom lift's movement, always monitor the platform's position. If necessary, adjust the main boom and jib to ensure the platform maintains a safe distance from the ground.

2. Adjust the main boom and jib to be horizontal, and extend the main boom until it stops extending.
3. Apply loads higher than the rated load at the center of platform, the buzzer on the turntable control position and platform control position should sound, and the overload alarm indication icon will illuminate on the display.
 - In KG mode (with the icon KG  displayed in the upper right corner of the turntable display):

- 1) Try to operate the machine from the ground control position or platform control position, all functions will be inoperative except auxiliary power.
 - 2) After removing the loads from the platform, all functions will be operative.
- In non-KG mode (without the icon KG  displayed in the upper right corner of the turntable display):
 - 1) While operating from the ground control position or platform control position, the main boom can be retracted, the turntable can slew slowly, and the main boom and the articulating boom can be lowered after the main boom has been fully retracted, but other functions will be inoperative.
 - 2) After removing the loads from the platform, all functions will be operative.

This Page Intentionally Left Blank

12 CONTROL SYSTEM

DANGER

All operations in this section must be performed by authorized and qualified personnel who have undergone professional training by Sinoboom. Not meeting this requirement may lead to personal injury or death. Our company will not be liable for any adverse consequences arising from the failure to operate and use the machine in accordance with this manual.

WARNING

Unsafe Operation Hazard



- The machine has been programmed before delivery. It's forbidden to modify the system settings and/or update the software without authorization from Sinoboom.

Due to different machine configurations, certain descriptions below may not apply to your machine. If questions arise during operation of the machine in accordance with the manual please hold the operation and contact Sinoboom after sales personnel in time.

- Not operating the machine properly may result in death, serious injury or machine damage.

NOTICE

Controllers, sensors, etc. are precisely adjusted and have received protective treatment before delivery. Therefore, persons who have not been professionally trained and authorized by Sinoboom may not disassemble the respective housings, otherwise moisture and dust ingress may affect proper functioning of these devices.

12.1 DISPLAY INTERFACE NAVIGATION

The system interface is as shown in the figure below:

Note: some interfaces can only be accessed with a password (the password can only be provided to personnel professionally trained and authorized by Sinoboom).

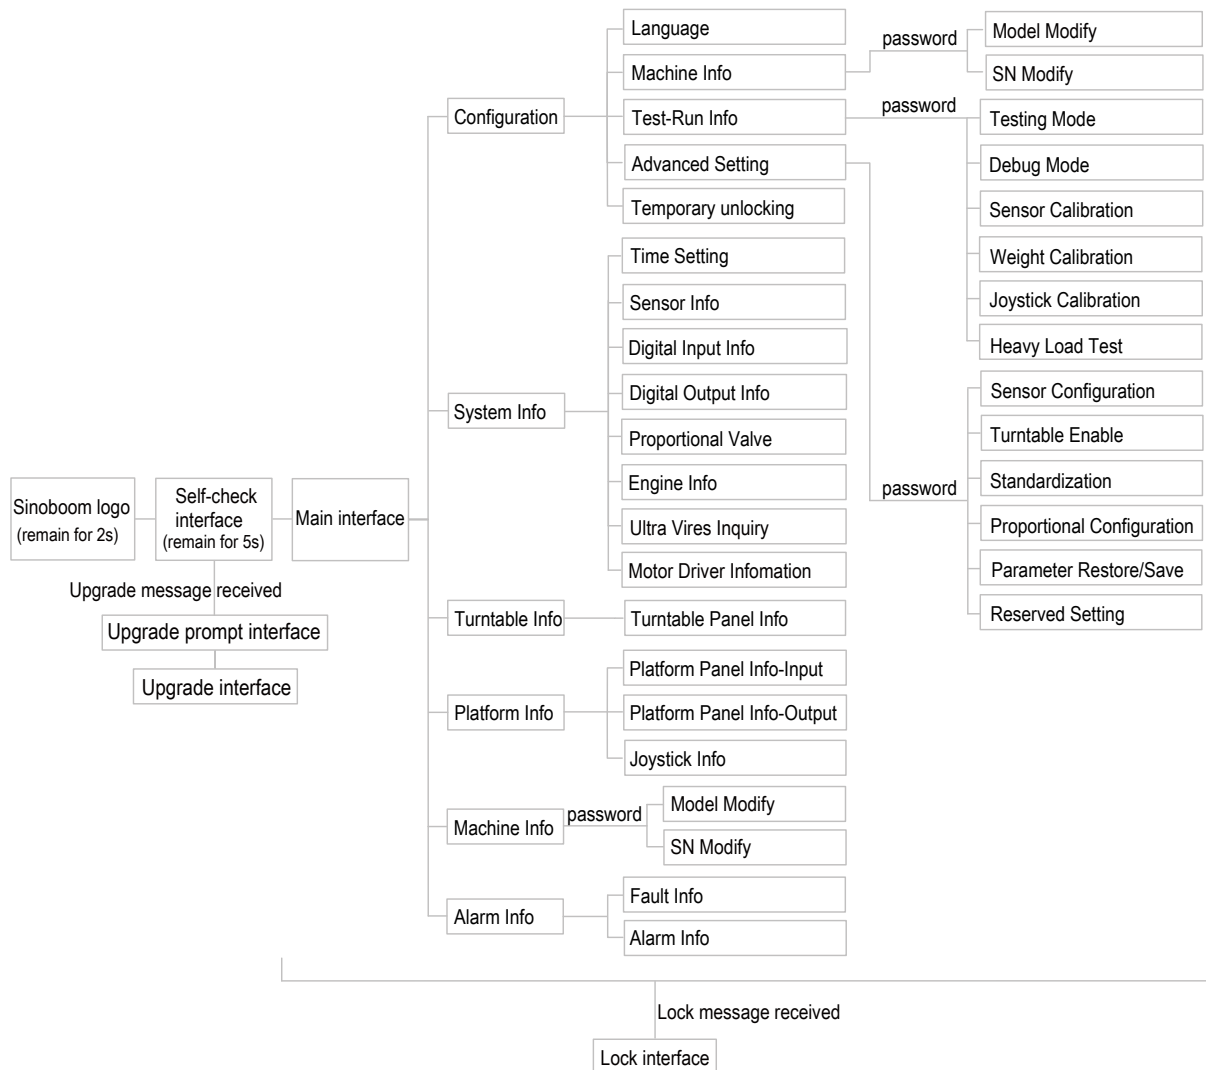


Fig. 1 Display interface navigation diagram

- “Engine Info” interface is only applicable to models equipped with engine meeting.
- “Motor Driver Information” interface is only applicable to HD models.



12.2 MAIN INTERFACE AFTER BOOTING

1. Turn the ground/platform selector switch at the turntable controller to the ground control position, pull out the emergency stop button to the ON position, and turn the key switch to the ON position, and the system will be powered on.
2. The display screen will show Sinoboom logo for 2s.

Fig. 2 Startup logo

3. The display screen will show self checking for 5s.

Self Checking...

Fig. 3 Self Checking

- After the self-checking is completed without errors, the display screen will show the main interface.



Fig. 4 Main Interface

12.3 CONFIGURATION

On the main interface, press  to enter CONFIGURATION interface.

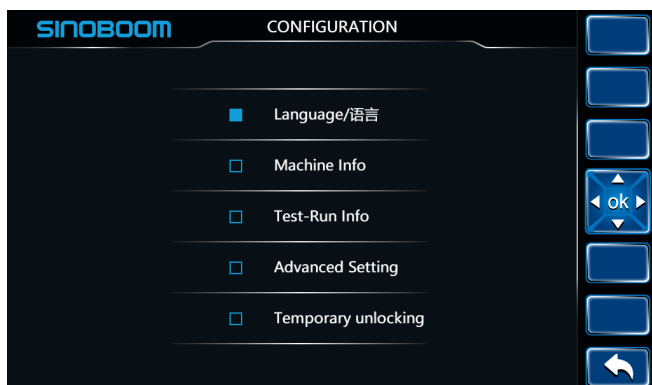


Fig. 5 Configuration

- Press  to enter the desired configuration page.
- Press  to return to the main interface.

LANGUAGE

On the CONFIGURATION interface, select “语言/Language”, and press OK button of  to enter “LANGUAGE” interface.

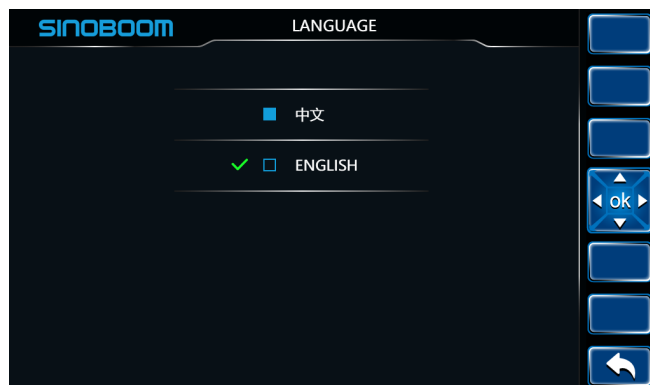


Fig. 6 LANGUAGE

- Press  to select your desired language, and press OK button for confirmation.
- Press  to return to CONFIGURATION interface.

Machine Information

On the “CONFIGURATION” interface, press  to select “Machine Info”, press OK button to enter the MACHINE INFO (1/2) interface.

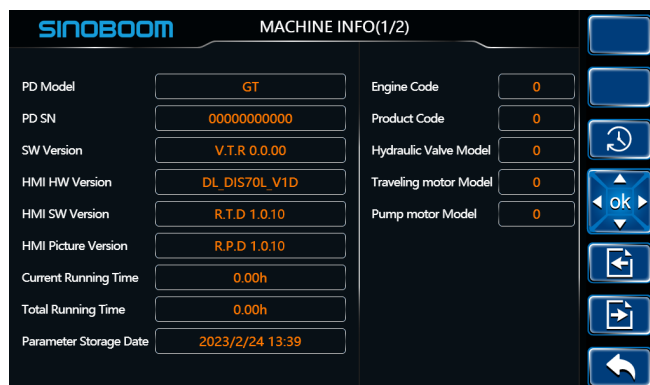


Fig. 7 MACHINE INFO (1/2)

- If you need to modify the product model, press  to enter the corresponding interface.

- If you need to modify the product SN, press  to enter the corresponding interface.
- Press  or  to change the interface.
- Press  to return to CONFIGURATION interface.
- Engine configuration number corresponding information:

Table 12-1

Engine configuration number	Description
0	Cummins electronic control engine
1	Deutz electronic control engine
2	Perkins engine
3	Deutz mechanical engine
4	Hybrid Kubota mechanical engine
5	Yanmar Euro 5 engine
6	Yanmar China III mechanical engine (36 kW)
7	Yanmar China III electronic control engine
8	Weichai China IV/Yuchai China IV engine
9	Electric drive model

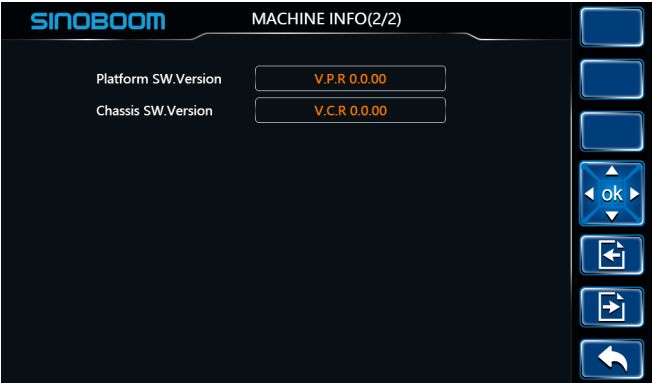


Fig. 8 MACHINE INFO (2/2)

- Press  or  to change the interface.
- Press  to return to CONFIGURATION interface.

Modify product model

1. Press  to enter “MODEL MODIFY (1/2)” interface (password required).

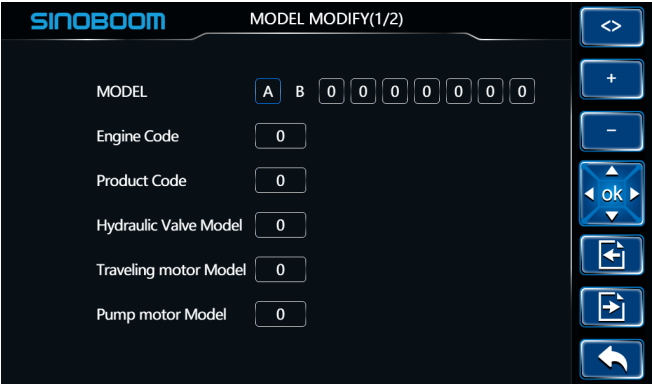


Fig. 9 MODEL MODIFY (1/2)

- Press  or , , ,  or other buttons to set the correct product model, press and hold OK button for 3s until the right top corner shows  displays next to the setting item, indicating successful setting.
- Press  or  to switch to the “SN MODIFY (2/2)” interface.
- Press  to return to CONFIGURATION interface.

Modify product SN

1. Press  to enter “SN MODIFY (2/2)” interface (password required).

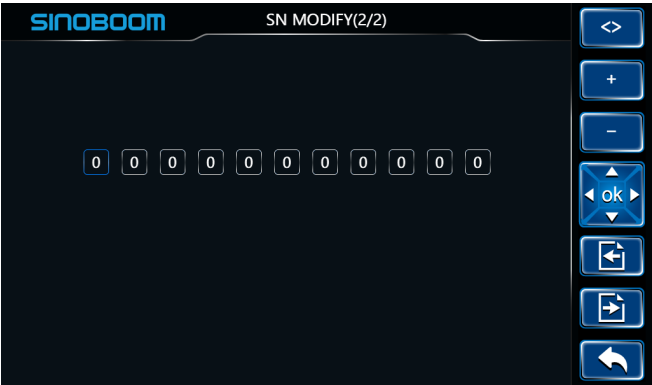


Fig. 10 SN MODIFY (2/2)

- Press  or , , ,  or other buttons to set the correct product SN, press and hold OK button for 3s until the right top corner shows  displays next to the setting item, indicating successful setting.
- Press  or  to switch to the “MODEL MODIFY (1/2)” interface.
- Press  to return to CONFIGURATION interface.

TEST-RUN INFO

! DANGER

Test-run Information (including testing mode, debug mode, sensor calibration, weight calibration, joystick calibration and heavy load test) can only be modified by authorized and qualified personnel who have undergone professional training by Sinoboom. Not meeting this requirement may lead to personal injury or death. Our company will not be liable for any adverse consequences arising from the failure to operate and use the machine in accordance with this manual.

1. On the "CONFIGURATION" interface, press  to select "Test-Run Info", press OK button to enter the "TEST-RUN INFO" interface (password required).

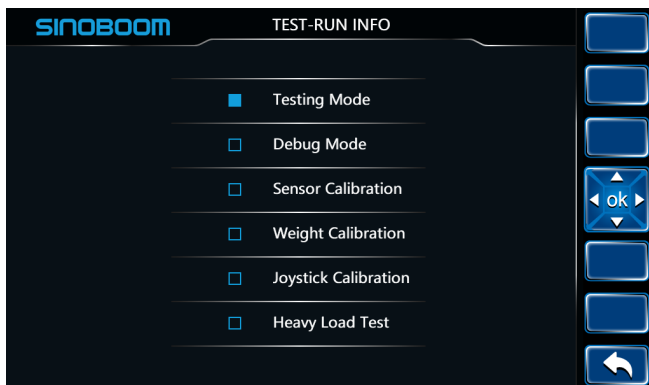


Fig. 11 TEST-RUN INFO

- Press  to enter the desired test-run information page.
- Press  to return to CONFIGURATION interface.

Testing Mode

! DANGER

- Testing mode can only be activated by authorized and qualified personnel who have undergone professional training by Sinoboom. Not meeting this requirement may lead to personal injury or death.
- In testing mode, only qualified personnel are permitted to operate via the turntable controller. Operation from the platform controller is strictly prohibited. In testing mode, the travel alarm light will sound as a reminder. All movements are unrestricted by safety limits. Operate with extreme caution.
- Our company will not be liable for any adverse consequences arising from the failure to operate and use the machine in accordance with this manual.

Enter testing mode

1. Confirm that the operator is qualified to operate the machine in testing mode and has a clear understanding that operation from the platform controller is prohibited in this mode.
2. Activate the "emergency power switch" or "enable switch" on the turntable controller. Simultaneously, select "Testing Mode" by pressing  in the "TEST-RUN INFO" Interface, then press the OK button.

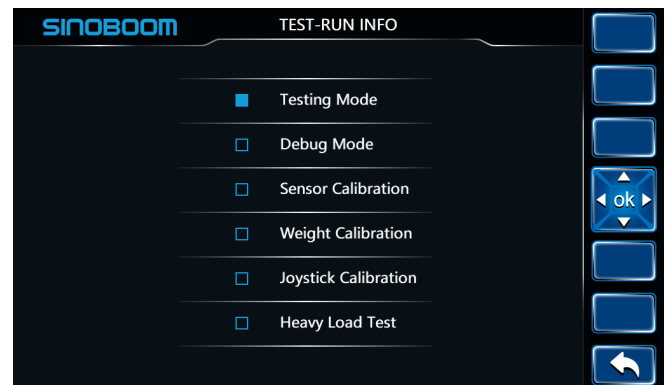


Fig. 12 TEST-RUN INFO

3. A safety warning will pop up. In this interface:
 - Press  to enter the testing mode.
 - Press  to return to the "TEST-RUN INFO" Interface.

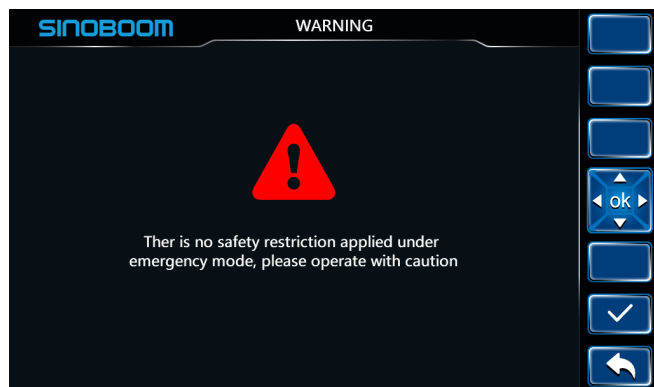


Fig. 13

Exit testing mode

- Method 1: Press  to exit the testing mode interface.
- Method 2: Turn the ground/platform control selector switch to the platform control position.
- Method 3: Cycle power. Press the emergency stop switches on the turntable control position and platform control position to the "OFF" position, or turn the key switch to the "OFF" position and remove the key, or switch the power-off switch to the "OFF" position.

Debug Mode

 **DANGER**

- **Debug mode can only be activated by authorized and qualified personnel who have undergone professional training by Sinoboom. Not meeting this requirement may lead to personal injury or death.**
- **In debug mode, only qualified personnel are permitted to operate via the turntable controller. Operation from the platform controller is strictly prohibited. In debug mode, all movements are unrestricted by safety limits. Operate with extreme caution.**
- **Our company will not be liable for any adverse consequences arising from the failure to operate and use the machine in accordance with this manual.**

Note:

- The debug mode is mainly used for checking the circuits and pipelines of each movement for any errors before the machines go off-line, and also used to find the minimum current of the proportional valve for the corresponding action during the debugging process. Besides, it can be used for emergency operations in emergency situations.

- When the control method for the selected action is "proportional valve + switching valve", it is necessary to first open the switching valve of the corresponding action (i.e., the output test item), then open the proportional valve of the corresponding action (i.e., the proportional valve test item), and set an appropriate current proportional value, before the corresponding action can be performed.
- When testing the travel action, it is necessary to select and open the "Drive Brake Valve" test item first; otherwise, there will be no travel action or the travel may have a strong impact.

Enter debug mode

1. Confirm that the operator is qualified to operate the machine in debug mode and has a clear understanding that operation from the platform controller is prohibited in this mode.
2. Activate the "emergency power switch" or "enable switch" on the turntable controller. Simultaneously, select "Debug Mode" by pressing  in the "TEST-RUN INFO" Interface, then press the OK button.

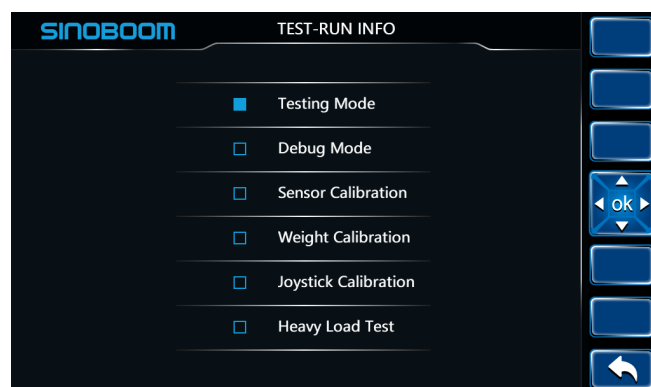


Fig. 14 TEST-RUN INFO

3. After entering debug mode, the "OUTPUT TEST (1/3)" interface will be displayed first. In this interface:
 - Press  to select the test item, and press OK button to make  changing to , to confirm the output, press OK button again to make  changing to , resetting to non-output status.
 - Press  or  to change the interface.
 - Press  to return to the "TEST-RUN INFO" Interface.

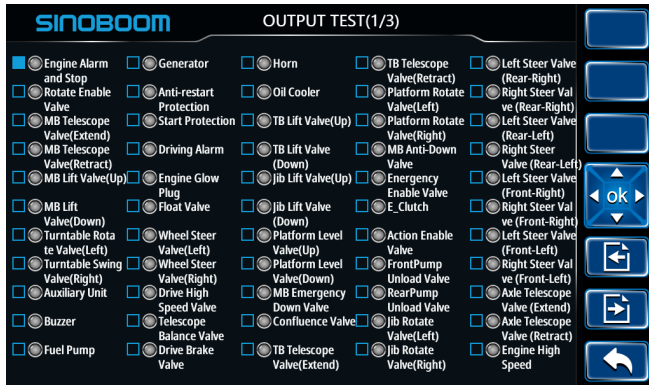


Fig. 15 OUTPUT TEST (1/3)

4. Press or to switch to "PLATFORM OUTPUT TEST (2/3)" interface. In this interface:
 - Press to select the test item, and press OK button to make changing to , to confirm the output, press OK button again to make changing to , resetting to non-output status.
 - Press or to change the interface.
 - Press to return to the "TEST-RUN INFO" Interface.

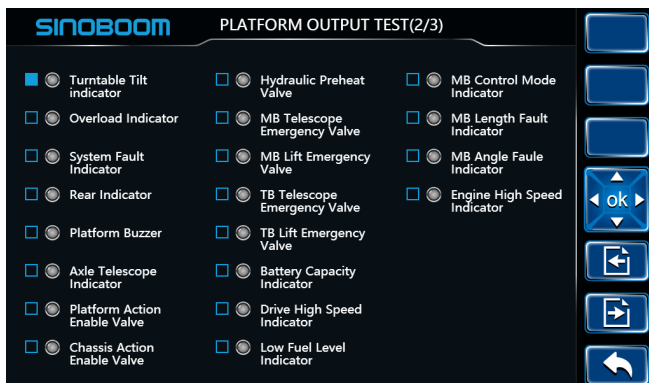


Fig. 16 PLATFORM OUTPUT TEST (2/3)

5. Press or to switch to "PROPORTIONAL VALVE (3/3)" interface. In this interface:
 - Press to select the test item, and press , to set the current proportion, press OK button to make changing to , to confirm the output, press OK button again to make changing to , resetting to non-output status.
 - Press or to change the interface.
 - Press to return to the "TEST-RUN INFO" Interface.

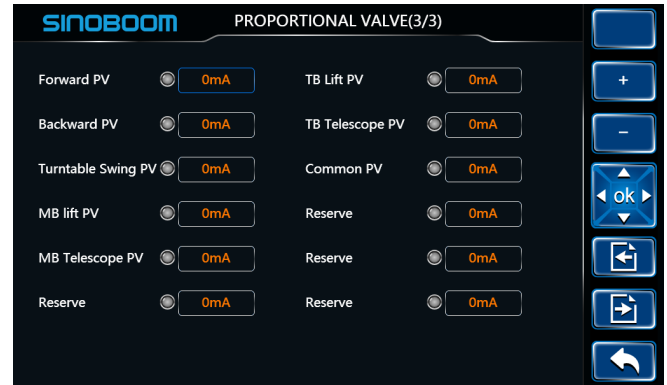


Fig. 17 PROPORTIONAL VALVE (3/3)

Exit Debug Mode

- Method 1: Press to exit the debug mode interface.
- Method 2: Turn the ground/platform control selector switch to the platform control position.
- Method 3: Cycle power. Press the emergency stop switches on the turntable control position and platform control position to the "OFF" position, or turn the key switch to the "OFF" position and remove the key, or switch the power-off switch to the "OFF" position.

Sensor Calibration

- This operation is to calibrate sensors other than the weighing sensor (its calibration method will be described in detail in the **Weight Calibration**).
- If the machine is equipped with a dual-channel sensor, it is sufficient to select only one channel for calibrating the maximum and minimum values.

On the TEST-RUN INFO Interface, press to select "Sensor Calibration", and press OK button to enter "SENSOR CALIBRATION (1/4)" interface.

	AD Value	Actual Value	Act Val(Zero)	Act Val(Full)
MB Length 1	0	0.00		
MB Angle 1	0	-100.00		
MB Length2	0	0.00		
MB Angle2	0	-100.00		
Weight 1	0	0.00		
Weight 2	0	0.00		
TB Angle1	0	-100.00		
TB Angle2	0	-100.00		
Fuel Level	0	0.00		
Main Valve System Pre.	0	0.00		
Hydraulic System Temp.	0	-100.00		
Jib Angle Sensor	0	-100.00		
Level Sensor 1	0	-100.00		
Level Sensor 2	0	-100.00		

Fig. 18 SENSOR CALIBRATION (1/4)

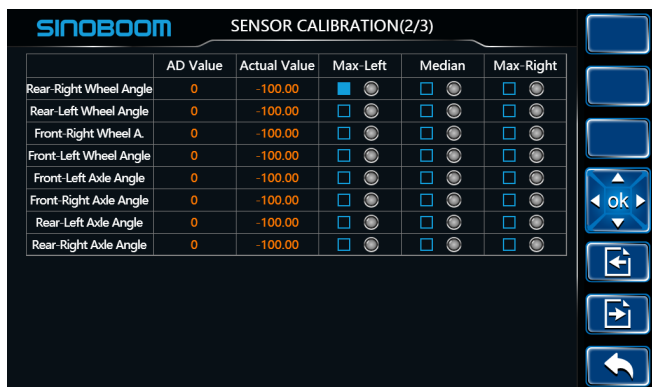


Fig. 19 SENSOR CALIBRATION (2/4)

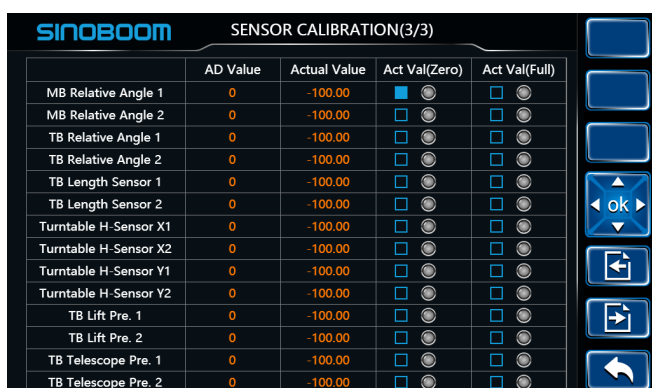


Fig. 20 SENSOR CALIBRATION (3/4)

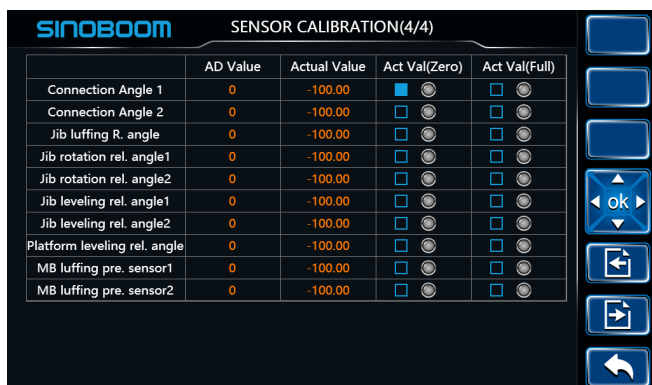


Fig. 21 SENSOR CALIBRATION (4/4)

- Press to select the item to be calibrated, press and hold OK button for 3s until changing to , indicating successful calibration, the corresponding actual value will be changed.
- Press or to change the interface.
- Press to return to the "TEST-RUN INFO" Interface.

Length sensor calibration – telescoping boom lift

1. Ensure that there are no obstacles or unrelated personnel around and above the machine, and confirm that there is sufficient space for the boom to operate.
2. Start the machine.
3. If the machine is equipped with extending axles, fully extend the extending axles and confirm that the extending axle extend icon is illuminated on the display screen.
4. Enter the "SENSOR CALIBRATION" interface on the turntable display screen.
5. Make sure the machine is in stowed position.
6. Press to select "Act Val (Zero)" of "MB Length 1", press and hold OK button for 3s until changing to , indicating successful calibration. Calibrate the "Act Val (Zero)" of "MB Length 2" using the same method.
7. Lift the main boom in place, and extend the main boom in place.
8. Press to select "Act Val (Full)" of "MB Length 1", press and hold OK button for 3s until changing to , indicating successful calibration. Calibrate the "Act Val (Full)" of "MB Length 2" using the same method.

Length sensor calibration – articulating boom lift

1. Ensure that there are no obstacles or unrelated personnel around and above the machine, and confirm that there is sufficient space for the boom to operate.
2. Start the machine.
3. If the machine is equipped with extending axles, fully extend the extending axles and confirm that the extending axle extend icon is illuminated on the display screen.
4. Enter the "SENSOR CALIBRATION" interface on the turntable display screen.
5. Make sure the machine is in stowed position.
6. Press to select "Act Val (Zero)" of "MB Length 1", press and hold OK button for 3s until changing to , indicating successful calibration. Calibrate the "Act Val (Zero)" of "MB Length 2" using the same method.
7. Press to select "Act Val (Zero)" of "TB Length 1", press and hold OK button for 3s until changing to , indicating successful calibration. Calibrate the "Act Val (Zero)" of "TB Length 2" using the same method.

8. Lift the articulating boom in place, and extend the articulating boom in place; lift the main boom in place, and extend the main boom in place.
9. Press  to select "Act Val (Full)" of "MB Length 1", press and hold OK button for 3s until  changing to , indicating successful calibration. Calibrate the "Act Val (Full)" of "MB Length 2" using the same method.
10. Press  to select "Act Val (Full)" of "TB Length 1", press and hold OK button for 3s until  changing to , indicating successful calibration. Calibrate the "Act Val (Full)" of "TB Length 2" using the same method.

Weight Calibration

On the TEST-RUN INFO Interface, press  to select "Weight Calibration", and press OK button to enter "WEIGHT CALIBRATION" interface.



Fig. 22 Weight Calibration

No-load calibration

1. Make sure the platform is unloaded and stable.
2. Please perform the corresponding operation according to the configuration of the accessory devices:
 - If no accessory device is installed on the platform: Press  to select "No-load" under "Loading" on the right side of the display screen, press ,  to set the value to 0, press and hold OK button for 3s.
 - If an accessory device is installed on the platform: Press  to select "No-load" under "Loading" on the right side of the display screen, press ,  to set the value to weight value of accessory device, press and hold OK button for 3s.

3.  displaying next to the calibrated item indicates successful calibration.

Full-load calibration

1. Place a load with the weight equal to the rated load of the machine on the platform, making sure that the platform is stable/not shaking.
2. Please perform the corresponding operation according to the configuration of the accessory devices:
 - If no accessory device is installed on the platform: Press  to select "Heavy-load" under "Loading" on the right side of the display screen, press ,  to set the value to weight value of platform load, press and hold OK button for 3s.
 - If an accessory device is installed on the platform: Press  to select "Heavy-load" under "Loading" on the right side of the display screen, press ,  to set the value to the combined weight value of platform load and accessory device, press and hold OK button for 3s.

NOTICE

- It is recommended to keep the combined weight of the platform load and accessory device below 500 kg (1102 lb). If this limit is exceeded, the system will not be able to record a valid "heavy-load" value, in which case it is advisable to appropriately reduce the load weight placed on the platform.
- Please refer to the attached **Accessory Device Weight Table** for the weight of accessory devices.

3.  displaying next to the calibrated item indicates successful calibration.

Calibrate joystick

On the TEST-RUN INFO Interface, press  to select "Joystick Calibration", and press OK button to enter "JOYSTICK CALIBRATION" interface.

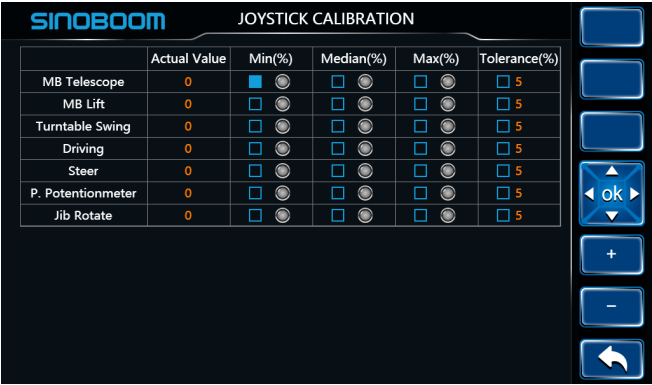


Fig. 23

- **Minimum value, median value, maximum value:**
Press  to select the item to be calibrated, press and hold OK button for 3s until  changing to , indicating successful calibration.
- **Tolerance:** Press  to select the item to be calibrated, and modify the value by pressing , , press and hold OK button for 3s until  displays next to the calibrated item, indicating successful calibration.
- Press  to return to the “TEST-RUN INFO” Interface.

HEAVY LOAD TEST

 **DANGER**

Heavy load test can only be performed by authorized and qualified personnel who have undergone professional training by Sinoboom. Not meeting this requirement may lead to personal injury or death. Our company will not be liable for any adverse consequences arising from the failure to operate and use the machine in accordance with this manual.

On the TEST-RUN INFO Interface, press  to select “Heavy Load Test”, and press OK button to enter “HEAVY LOAD TEST” interface.

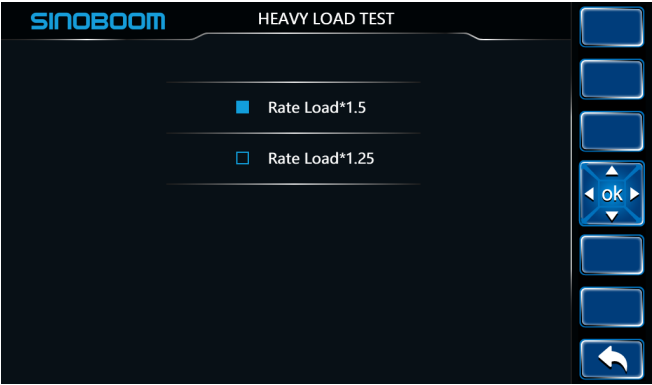


Fig. 24 HEAVY LOAD TEST

- Press  to select the test item, and press OK button for confirmation until  displays next to the test item.
 - If you exit this interface after confirmation, you will exit the selected test mode.
- Press  to return to the “TEST-RUN INFO” Interface.

Advanced Setting

 **DANGER**

Personnel who have not been professionally trained, examined and authorized by Sinoboom are not allowed to modify the advanced setting (including sensor setting, turntable enable setting, standardization setting, proportional configuration, parameter restore/save and reserved setting); not meeting this requirement may lead to personal injury or death. Our company will not be liable for any adverse consequences arising from the failure to operate and use the machine in accordance with this manual.

On the “CONFIGURATION” interface, press  to select “Advanced Setting”, press OK button to enter the “ADVANCED SETTING” interface (password required).

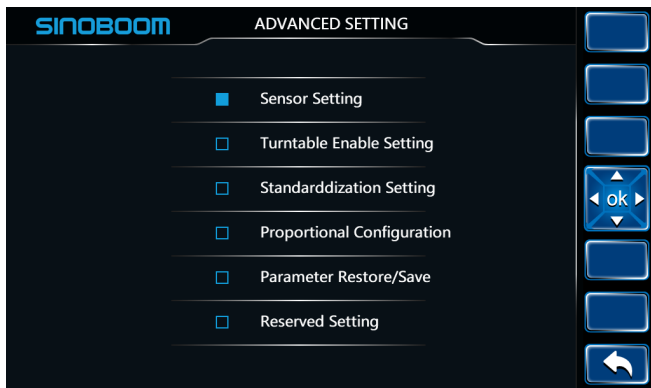


Fig. 25 Advanced Setting

- Press  to enter the desired advanced setting page.
- Press  to return to CONFIGURATION interface.

Sensor Configuration

- The sensor configuration is mainly used to turn on/off switches or sensors on the machine.
- The configuration of switches is subject to the actual machine configurations.

On the “ADVANCED SETTING” interface, press  to select “Sensor Setting”, and press OK button to enter “SENSOR CONFIGURATION” interface.

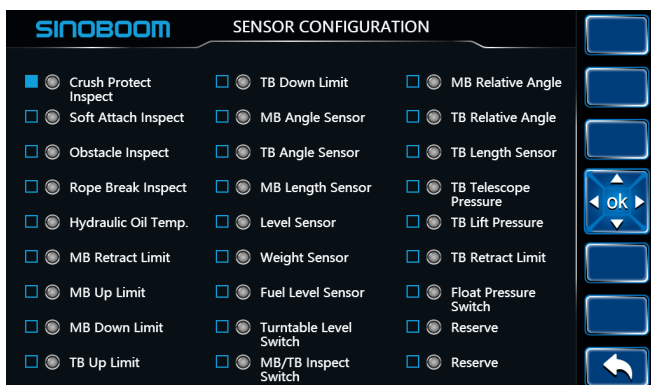


Fig. 26 Sensor Configuration

- Press  to select the item to be set, press and hold OK button for 3s. The setting completion is indicated by the change of color of the indicator light.  changing to  indicate the setting item has been enabled,  changing to  indicate the setting item has been disabled.
- Press  to return to ADVANCED SETTING interface.

Turntable Enable Setting

On the “ADVANCED SETTING” interface, press  to select “Turntable Enable Setting”, and press OK button to enter TURNTABLE ENABLE Interface.

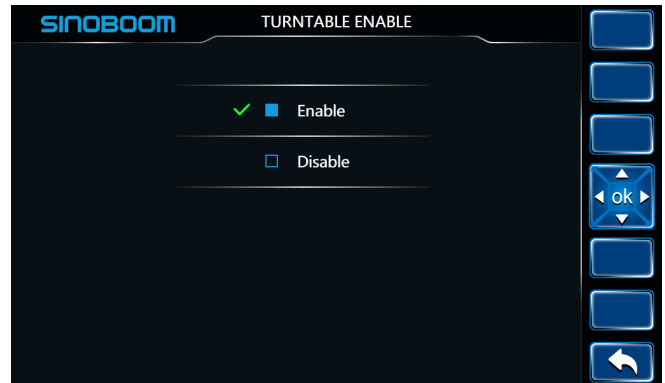


Fig. 27 Turntable Enable Setting

- Press  to select the item to be set, press and hold OK button for 3s.  displays next to the setting item, indicating successful setting.
- Press  to return to ADVANCED SETTING interface.

Standardization Setting

On the “ADVANCED SETTING” interface, press  to select “Standardization Setting”, and press OK button to enter “STANDARDIZATION” interface.

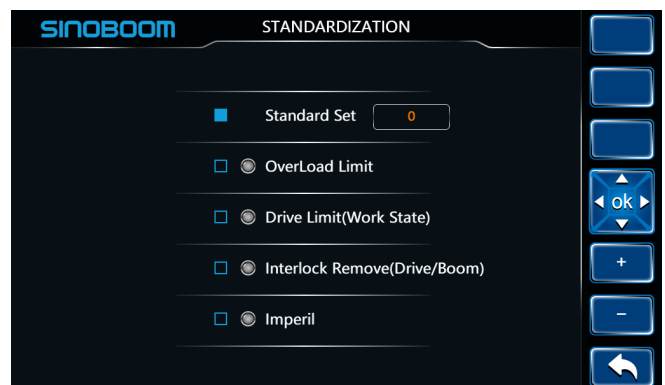


Fig. 28 STANDARDIZATION

- Standard Set:** Press  to select the item to be set, modify the value by pressing  or , press and hold OK button for 3s until  displays next to the setting item, indicating successful setting.
 - If the value is set to “0”, no standard icon will be displayed at the top of the main interface.

- If the value is set to “1”, the icon **CE** will be displayed at the top of the main interface.
- If the value is set to “2”, the icon **ANSI** will be displayed at the top of the main interface.
- If the value is set to “3”, the icon **CSA** will be displayed at the top of the main interface.
- If the value is set to “4”, the icon **AS** will be displayed at the top of the main interface.
- If the value is set to “5”, the icon **KCS** will be displayed at the top of the main interface.
- If the value is set to “6”, the icon **JIS** will be displayed at the top of the main interface.
- If the value is set to “7”, the icon **EAC** will be displayed at the top of the main interface.
- If the value is set to “8”, the icon **UKC** will be displayed at the top of the main interface.
- **Other setting items:** Press  to select the item to be set, press and hold OK button for 3s. The setting completion is indicated by the change of color of the indicator light.  changing to  indicate the setting item has been enabled,  changing to  indicate the setting item has been disabled.
- **Overload Limit :** Enable this item, **KG** will be displayed at the top of the Home interface. All movements are limited when the platform is overloaded.
- **Drive Limit (Work State):** Enable this item, **DR** will be displayed on top of the main interface. Drive movement is restricted when the machine is in operating position.
- **Interlock Remove (Drive/Boom):** Enable this item, **D/B** will be displayed on top of the main interface. Drive and boom movements can be performed simultaneously.
- Press  to return to ADVANCED SETTING interface.

Proportional Configuration

On the “ADVANCED SETTING” interface, press  to select “Proportional Configuration”, press OK button to enter “PROPORTIONAL CONFIG (1/4)” interface.

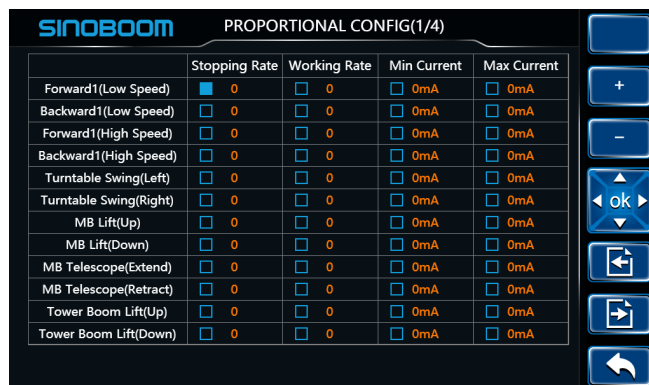


Fig. 29 PROPORTIONAL CONFIG (1/4)

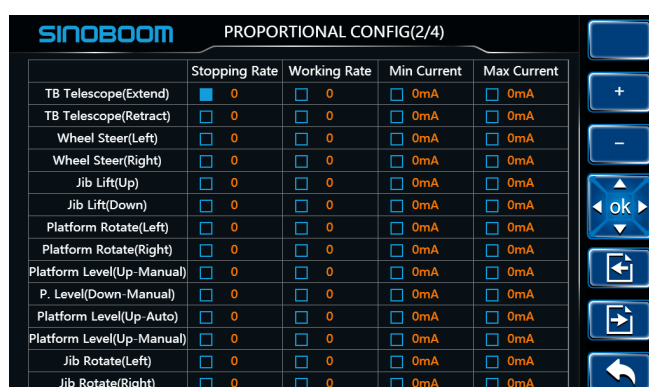


Fig. 30 PROPORTIONAL CONFIG (2/4)

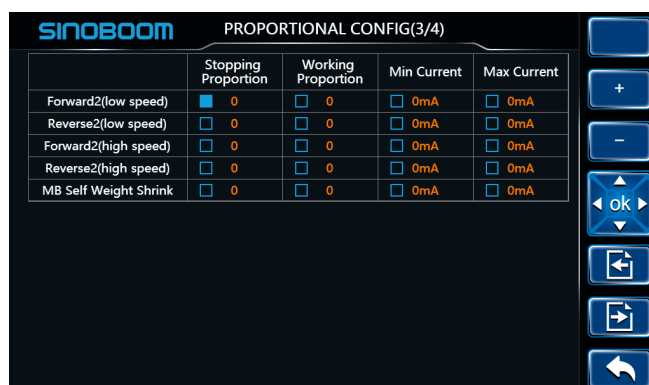


Fig. 31 PROPORTIONAL CONFIG (3/4)

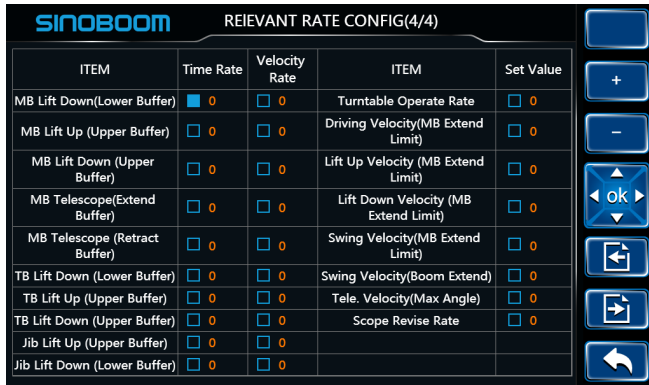


Fig. 32 RELEVANT RATE CONFIG (4/4)

- Press  to select the item to be set, modify the value by pressing  ,  , press and hold OK button for 3s until the right top corner shows  displays next to the setting item, indicating successful setting.
- Press  or  to change the interface.
- Press  to return to ADVANCED SETTING interface.

Notes:

The maximum current, minimum current, working rate, and stopping rate are only valid for actions controlled by proportional valves. For actions not controlled by proportional valves, please adjust the working rate and stopping rate to within 10, or the action response will be delayed.

- Minimum current: refers to the starting current of actions, which affects the starting of actions and micro-motion performance. The minimum current should be set to a value that allows the action to just get started, and it can be identified through the debug mode.
- Maximum current: refers to the maximum current of actions. If it is too low, the speed of actions will be affected, and if it is too high (exceeding the full-open current of the proportional valve), the buffering performance of actions will be affected.
- Working rate: refers to the starting buffer slope of actions. The smaller the rate value, the bigger the starting buffer slope and the shorter the time required; the larger the rate value, the smaller the starting buffer slope and the longer the required time. This parameter can be used to improve the starting hysteresis and starting impact performance of actions.
- Stopping rate: refers to the stopping buffer slope of actions. The smaller the rate value, the bigger the stopping buffer slope and the shorter the time required; the larger the rate value, the smaller the stopping buffer slope and the longer the time required. This parameter can be used to improve the stopping hysteresis and stopping impact performance of actions.
- Time rate: omitted.
- Speed proportion: used to adjust the target current of action buffering. The smaller the rate value, the lower the target current and the slower the action; the larger the rate value, the higher the target current and the faster the action. This parameter can be used to adjust the action speed in the buffer zone.

Table 12-2 RELEVANT RATE CONFIG (4/4) description

No.	Item	Description	Applicable models
1	MB Lift Down (Lower Buffer)	To set the time and speed rate of main boom when fully lowered during lifting-down. Condition of fully lowering: down limit switch is triggered or the main boom is positioned at an angle smaller than the set value.	TB, AB
2	MB Lift Up (Upper Buffer)	To set the time and speed rate of main boom when fully raised during lifting-up. Condition of fully lifting: up limit switch is triggered or the main boom is positioned at an angle bigger than the set value.	TB, AB
3	MB Lift Down (Upper Buffer)	To set the time and speed rate of main boom when fully raised during lifting-down. Condition of fully lifting: up limit switch is triggered or the main boom is positioned at an angle bigger than the set value.	TB, AB
4	MB Telescope (Extend Buffer)	To set the time and speed rate of main boom when fully extended. Condition of fully extending: the extended length is bigger than the set value.	TB

Table 12-2 RELEVANT RATE CONFIG (4/4) description (continued)

No.	Item	Description	Applicable models
5	MB Telescope (Retract Buffer)	To set the time and speed rate of main boom when fully retracted. Condition of fully retracting: the retracting limit switch is triggered or the extended length is smaller than the set value.	TB, AB
6	TB Lift Down (Lower Buffer)	To set the time and speed rate of tower boom when fully lowered during lifting-down. Condition of fully lowering: down limit switch is triggered or the tower boom is positioned at an angle smaller than the set value.	AB
7	TB Lift Up (Upper Buffer)	To set the time and speed rate of tower boom when fully raised during lifting-up. Condition of fully lifting: up limit switch is triggered or the tower boom is positioned at an angle bigger than the set value.	AB
8	TB Lift Down (Upper Buffer)	To set the time and speed rate of tower boom when fully raised during lifting-down. Condition of fully lifting: up limit switch is triggered or the tower boom is positioned at an angle bigger than the set value.	AB
9	Jib Lift Up (Upper Buffer)	To set the time and speed rate of jib when fully raised during lifting-up. Condition of fully lifting: up limit switch is triggered or the jib is positioned at an angle bigger than the set value.	TB, AB
10	Jib Lift Down (Lower Buffer)	To set the time and speed rate of jib when fully lowered during lifting-down. Condition of fully lowering: down limit switch is triggered or the jib is positioned at an angle smaller than the set value.	TB, AB
11	Working Speed (Operation on Turntable)	To set the speed of turntable rotation.	TB, AB
12	Driving Velocity (MB Extend Limit)	To set the travel speed with the main boom fully extended.	TB
13	Lift Up Velocity (MB Extend Limit)	To set the lifting-up speed with the main boom fully extended (maximum angle).	TB
14	Lift Down Velocity (MB Extend Limit)	To set the lifting-down speed with the main boom fully extended (maximum angle).	TB
15	Swing RPM (MB Extend End)	To set the rotation speed with the main boom fully extended (maximum angle).	TB
16	Swing RPM (MB Extend)	To set the rotation speed with the main boom extended. Condition: the retracting limit switch disengages or the main boom is longer than 1.2m.	AB
17	Telescope Velocity (Maximum Angle)	To set the extending/retracting speed with the main boom at the max angle.	TB
18	Scope Revise Rate	To slightly adjust the operating range of telescopic boom (not used yet).	TB

Notes: All parameters can be adjusted within 0-100.

Parameter Restore/Save



Before performing parameter restoration, it is necessary to completely record the parameters or configurations of each interface on the display screen as a reference basis for accurate restoration of settings.

On the "ADVANCED SETTING" interface, press to select "Parameter Restore/Save", and press OK button to enter "PARAMETER RESTORE/SAVE" interface.

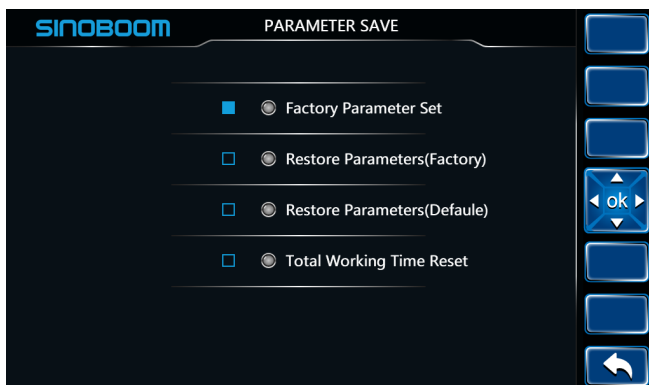


Fig. 33 Parameter Save

- Press to select the item to be set, press and hold OK button for 3s. changing to displays next to the setting item, indicating successful setting.
- Press to return to ADVANCED SETTING interface.

Note:

- Factory Parameter Set: used to save the current parameters as factory parameters and the original factory parameters will be overwritten. Please use this function with caution.
- Restore Parameters (Factory): used to restore the current parameters to the factory parameters and the current parameters will be overwritten. Please use this function with caution.
- Restore Parameters (Default): used to restore the current parameters to the default parameters and the current parameters will be restored. This function generally is only used in the initial installation and debugging.
- Total Working Time Reset: used to clear the total working time. Please use this function with caution.

Reserved Setting

On the "ADVANCED SETTING" interface, press to select "Reserved Setting", and press OK button to enter "RESERVED SETTING (1/2)" interface.

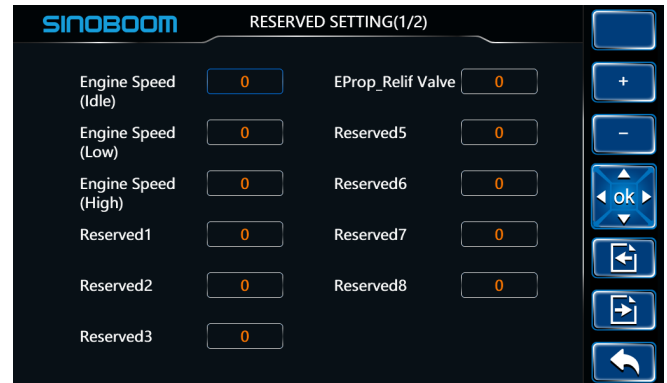


Fig. 34 RESERVED SETTING (1/2)

- Press to select the item to be set, modify the value by pressing , , press and hold OK button for 3s until the right top corner shows displays next to the setting item, indicating successful setting.
- Press or to change the interface.
- Press to return to ADVANCED SETTING interface.

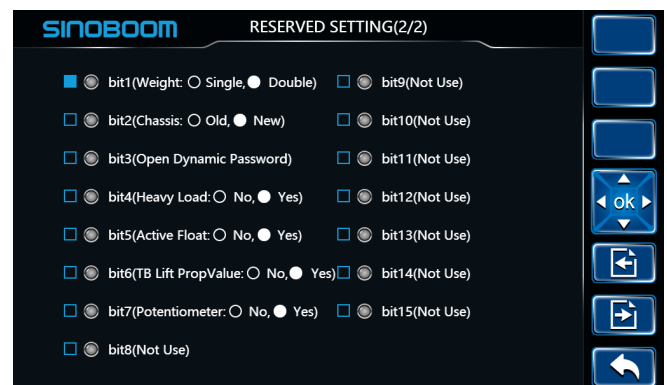


Fig. 35 RESERVED SETTING (2/2)

- Press to select the item to be set, press and hold OK button for 3s. The change of color of the indicator light (changing to , or changing to) indicate successful setting.
- Press or to change the interface.
- Press to return to ADVANCED SETTING interface.

Note: After dynamic password is enabled, it cannot be disabled, and only by re-installing the software can it be restored to a static password.

Temporary Unlocking

On the "CONFIGURATION" interface, press  to select "Temporary Unlocking", press OK button to enter "Temporary Unlocking" interface.

- If the machine is in locked state, enter the password verification interface, input the password by pressing  to temporarily unlock the machine.
- If the machine is not locked, the screen will display "This device does not need to be temporarily unlocked".

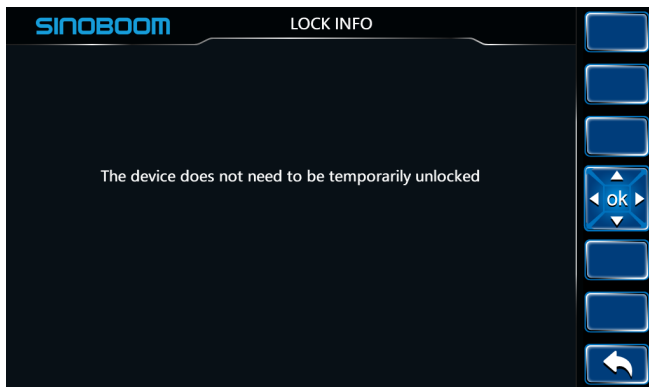


Fig. 36 Temporary Unlocking not Required

12.4 SYSTEM INFORMATION

On the main interface, press  to enter "SYSTEM INFO" interface.

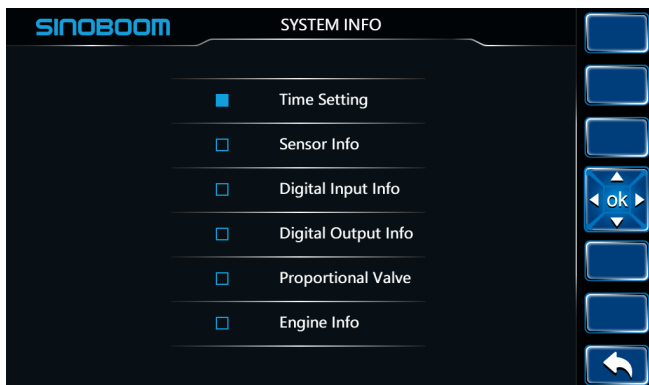


Fig. 37 System Information

- Press  to enter the desired information page.

- Press  to return to the main interface.
- For HD models, the interface will have an "Motor Driver Information" option.

Time Setting

On the SYSTEM INFO interface, select "Time Setting", and press OK button of  to enter "TIME SETTING" interface.

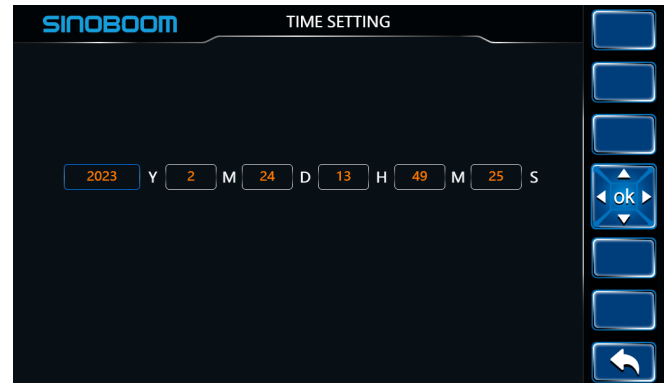


Fig. 38 Time Setting

- Press  to enter the current time, and press the OK button to confirm.
- Press  to return to "SYSTEM INFO" interface.

Sensor Information

- The sensor information option is mainly used to query the actual value of the sensor configured on the machine, thus determining whether each sensor is working normally.
- The configuration of switches is subject to the actual machine configurations.

On "SYSTEM INFO" interface, press  to select "Sensor Info", press OK button to enter the SENSOR INFO (1/3) interface.

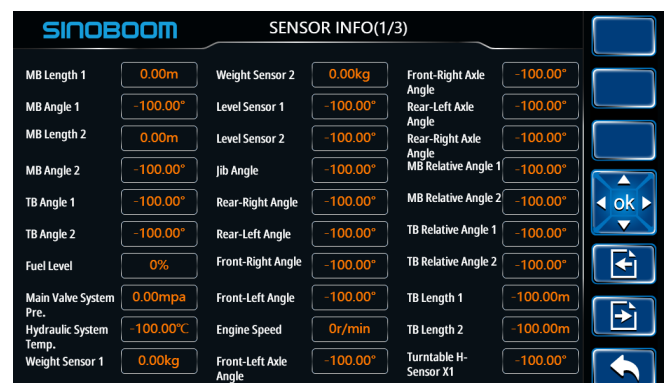


Fig. 39 SENSOR INFO (1/3)

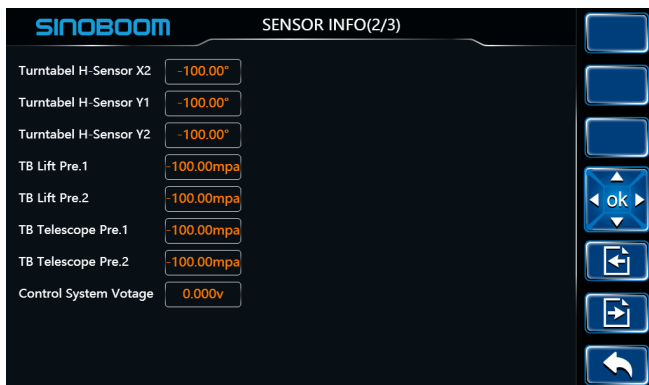


Fig. 40 SENSOR INFO (2/3)

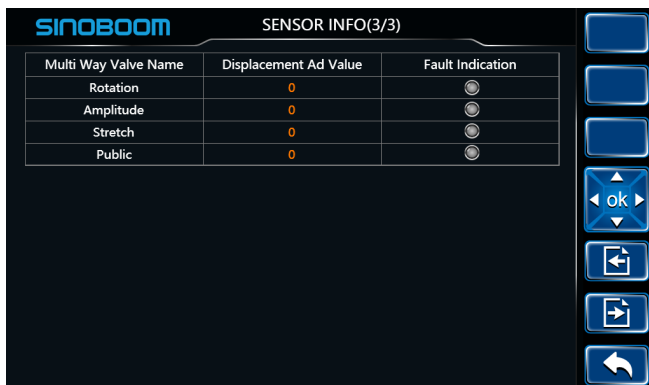


Fig. 41 SENSOR INFO (3/3)

- The corresponding values of the sensors are displayed in real-time.
-  indicates no fault, while  indicates a fault.
- Press  or  to change the interface.
- Press  to return to “SYSTEM INFO” interface.

Digital Input

- Digital Input Information option is mainly used to query the signal detection status of the detection switches (such as travel switches and proximity switches) configured on the machine, to determine whether the detection switches are working normally and whether the working status of the machine meets the requirements.
- The configuration of switches is subject to the actual machine configurations.

On “SYSTEM INFO” interface, press  to select “Digital Input Info”, press OK button to enter the INPUT INFO interface.

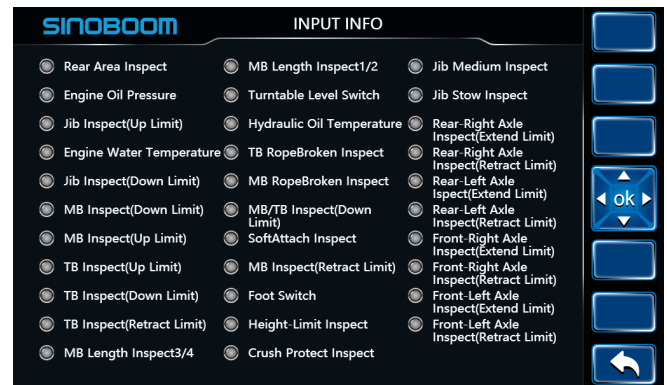


Fig. 42 Digital Input

-  indicates no input signal, while  indicates an input signal.
- Press  to return to “SYSTEM INFO” interface.

Digital Output Information

- Digital Output Information option is mainly used to query the output status of the relay, switching valve and other output points configured on the machine, thus assisting in determining the trouble causes.
- The configuration of output points is subject to the actual machine configurations.

On “SYSTEM INFO” interface, press  to select “Digital Output Info”, press OK button to enter the OUTPUT INFO (1/2) interface.

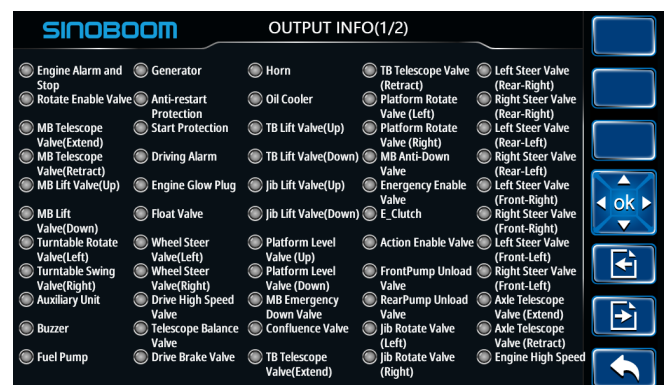


Fig. 43 OUTPUT INFO (1/2)

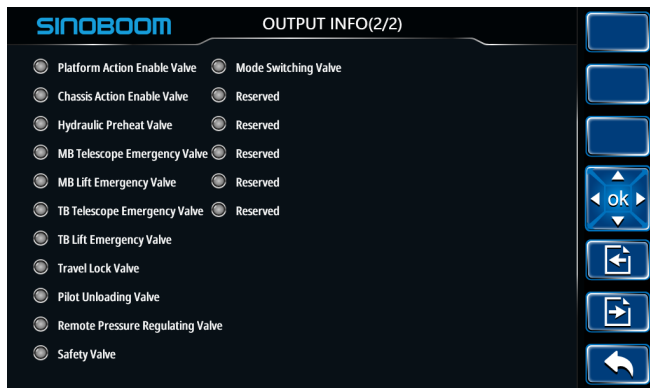


Fig. 44 OUTPUT INFO (2/2)

- indicates no output signal, while indicates an output signal.
- Press or to change the interface.
- Press to return to "SYSTEM INFO" interface.

Proportional Valve

On "SYSTEM INFO" interface, press to select "Proportional Valve", press OK button to enter the PROPORTIONAL INFO interface.

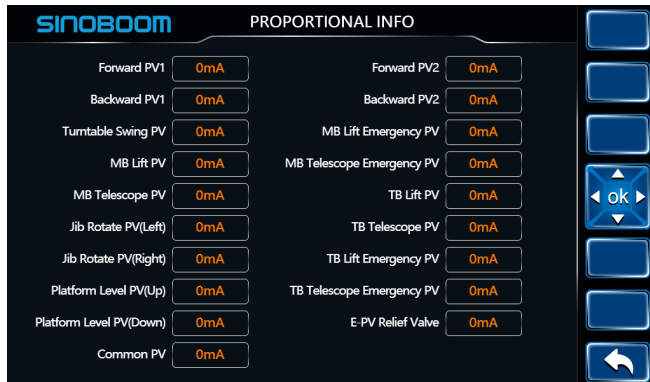


Fig. 45 Proportional Valve Output

- The corresponding values of the proportional valves are displayed in real-time.
- Press to return to "SYSTEM INFO" interface.

Engine Information

This section is applicable to models equipped with an engine.

- The engine information option is mainly used to query the status and fault information of the engine configured on the machine, so as to determine whether the engine is working normally.

- The configuration of engine is subject to the actual machine configuration.

On "SYSTEM INFO" interface, press to select "Engine Info", press OK button to enter ENGINE INFO interface.

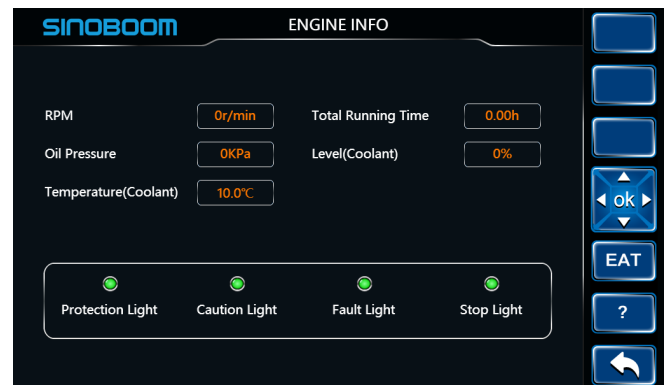


Fig. 46 Engine Status

- On the ENGINE INFO interface, users can query the engine RPM, oil pressure, temperature (cooling water), total running time, level (cooling water), protection light, caution light, fault light and stop light.
- Press to enter EAT INFO interface.
- Press to enter ENGINE FAULT DIAGNOSES interface.
- Press to return to "SYSTEM INFO" interface.

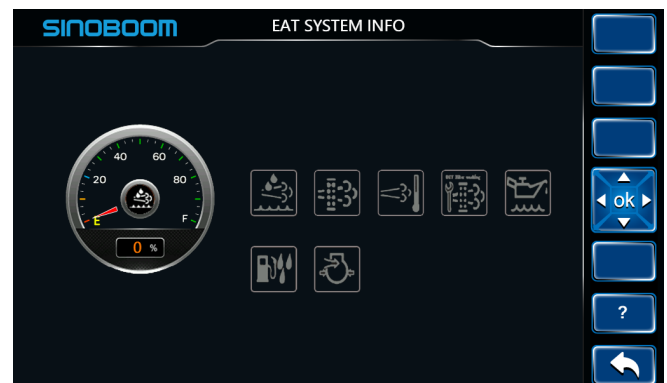


Fig. 47 EAT SYSTEM INFO (Deutz engine)

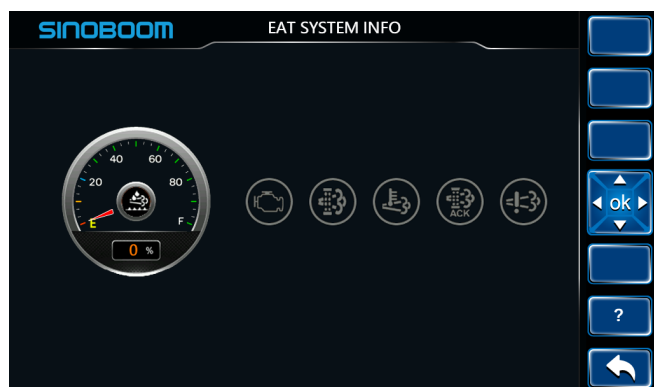


Fig. 48 EAT SYSTEM INFO (Yuchai, Yanmar engine)

Table 12-3 Description of indicator lights for Deutz engine


No.	Indicator light	Status	Description	Symbol
1	SCR fault warning indicator light	Off	SCR system is working normally	
		Solid on	SCR system is faulted	
2	DEF level indicator light	Off	DEF level is normal	
		Solid on	DEF level is too low	
3	Standstill regeneration indicator light	Off	Standstill regeneration is not performed or requested	
		Solid on	Standstill regeneration is being performed	
		Slow flashing	Standstill regeneration is requested	
		Fast flashing	Standstill regeneration is requested, but since the operator has ignored the request for a long time, the standstill regeneration can only be completed through the DEUTZ diagnostic tool.	
4	Standstill regeneration/high temperature indicator light	Off	Exhaust system temperature is normal	
		Solid on	Exhaust system temperature is abnormal	
5	DPF replacing required due to excessive ash content	Off	Ash content is normal	
		Solid on	Ash content is excessive	
6	Oil replacing required due to cumulative regeneration time being too long	Off	Cumulative regeneration time is within the normal range	
		Solid on	Oil replacing is required due to cumulative regeneration time being too long	

Table 12-4 Description of indicator lights for Yuchai & Yanmar engines

No.	Indicator light	Status	Description	Symbol
1	Engine malfunction indicator light	Off	Engine works normally	

Table 12-4 Description of indicator lights for Yuchai & Yanmar engines (continued)

No.	Indicator light	Status	Description	Symbol
		Solid on	Engine malfunctions	
2	Regeneration request indicator light (Yanmar)	Off	Regeneration is not requested and need not to be performed	
		Solid on	Regeneration is requested, with a reminder that regeneration must be performed	
	DPF regeneration reminder indicator light (Yuchai)	Off	Regeneration is not performed or requested	
		Solid on	The carbon content in DPF is too high, so it is recommended to perform parked regeneration	
		Slow flash-ing	Since the carbon content in DPF is too high, perform parked regeneration or service regeneration immediately	
		Fast flash-ing	Since DPF is heavily clogged, perform service regeneration immediately	
3	High exhaust temperature indicator light	Off	Exhaust system is at normal temperature	
		Solid on	Exhaust system temperature exceeds the set limit	
4	Regeneration execution indicator light	Off	Regeneration execution is inactive	
		Solid on	Regeneration function is being executed	
5	NCD indicator light (Yanmar only)	Off	NCD is not working	
		Solid on	NCD is working	
6	Regeneration prohibiting indicator light (Yuchai only)	Off	Conditions prohibiting active regeneration do not exist	
		Solid on	ECU receives the set status of regeneration prohibiting switch, and active regeneration can't be performed	

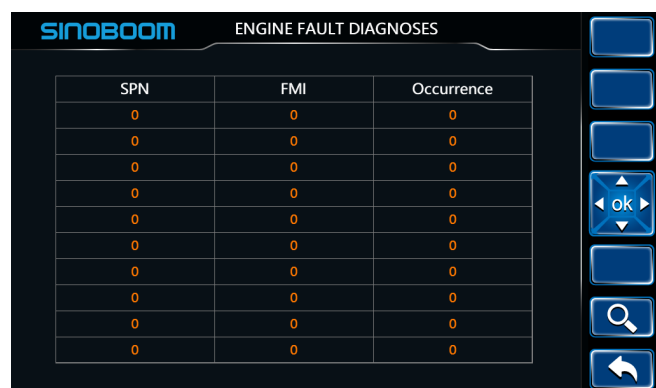

- Press  to enter the "ENGINE FAULT DIAGNOSES" interface, and search for the corresponding fault cause by checking the "Fault SPN" and "Fault FMI".
- Press  to return to "SYSTEM INFO" interface.

Fig. 49 ENGINE FAULT DIAGNOSES

SPN	FMI	Description
629	12	Engine control module critical internal fault-Bad intelligent device or component.
91	3	Accelerator pedal or lever position sensor 1 circuit-Voltage above normal, or shorted to high source.
91	4	Accelerator pedal or lever position sensor 1 circuit-Voltage below normal, or shorted to low source.
110	3	Engine coolant temperature sensor 1 circuit-Voltage above normal, or shorted to high source.
110	4	Engine coolant temperature sensor 1 circuit-Voltage below normal, or shorted to low source.
110	16	Engine coolant temperature-Data valid but above normal operating range-Moderately severe level.
91	1	Accelerator pedal or lever position sensor 1 circuit frequency-Data valid but below normal operating range-Most severe level.
91	0	Accelerator pedal or lever position sensor 1 circuit frequency-Data valid but above normal operating range-Most severe level.

Fig. 50 ENGINE FAULT CAUSATION

- Press or to change the interface.
- Press to return to ENGINE FAULT DIAGNOSES interface.

Override Operation Query

The override operation query option is mainly used to check the historical information of the machine's override operations with an overloaded platform, which records the platform load weight and the occurrence time of each override operation with an overloaded platform.

On "SYSTEM INFO" interface, press to select "Ultra Vires Inquiry", press OK button to enter "Ultra Vires Inquiry" interface.

No.	Weight	Time of occurrence	No.	Weight	Time of occurrence
1	0.00kg	00:00:00	11	0.00kg	00:00:00
2	0.00kg	00:00:00	12	0.00kg	00:00:00
3	0.00kg	00:00:00	13	0.00kg	00:00:00
4	0.00kg	00:00:00	14	0.00kg	00:00:00
5	0.00kg	00:00:00	15	0.00kg	00:00:00
6	0.00kg	00:00:00	16	0.00kg	00:00:00
7	0.00kg	00:00:00	17	0.00kg	00:00:00
8	0.00kg	00:00:00	18	0.00kg	00:00:00
9	0.00kg	00:00:00	19	0.00kg	00:00:00
10	0.00kg	00:00:00	20	0.00kg	00:00:00

Fig. 51 Ultra Vires Inquiry

- Press or to change the interface.
- Press to return to "SYSTEM INFO" interface.

Motor Driver Information

This section is applicable to HD models.

The motor driver information option is mainly used to query the status of the electric motor configured on the machine, thus determining whether the electric motor is working normally.

On "SYSTEM INFO" interface, press to select "Motor Driver Info", press OK button to enter the Motor Driver Info interface.

Working mode	initialization	Total voltage	0.0V
Running flag	Halt	Total current	-320.0A
Start signal of water cooling system	Cooling system shutdown	Highest temperature	-40°C
Motor Enable	Invalid(stop)	Minimum temperature	-40°C
Electric drive contactor closed state	Break		
bus current	-1000.0A		
Motor temperature	-40°C		
Controller NTC temperature	-40°C		
Bus voltage	0.0V		

Fig. 52 Motor Driver Information

- Press to return to "SYSTEM INFO" interface.

12.5 TURNTABLE PANEL INFORMATION

- The turntable panel information option is mainly used to query the input status of switches on the turntable control panel, so as to check whether the circuit from the switches to the controller, input signal, etc. are normal, thus assisting in determining the trouble causes.
- The configuration of switches on the turntable panel is subject to the actual machine configuration.

On the main interface, press to enter TURNTABLE PANEL INFO interface.

Engine Speed	Platform Level(Up)	Jib Rotate(Right)
MB Lift(Up)	Platform Level(Down)	Turntable Enable
MB Lift(Down)	Engine Glow Plug	Engine Start
Turntable Swing(Left)	Platform Rotate(Left)	Hybrid Mode Switch
Turntable Swing(Right)	Platform Rotate(Right)	Reserved
MB Telescope(Extend)	Horn	
MB Telescope(Retract)	TB Lift (Up)	
Jib Down(Down)	TB Lift (Down)	
Jib Lift(Up)	TB Telescope(Extend)	
Platform/Turntable Select	TB Telescope(Retract)	
Auxiliary Unit	Jib Rotate(Left)	

Fig. 53 TURNTABLE PANEL INFO

- indicates no signal, while ● indicates a signal.
- Press  to return to the main interface.

12.6 PLATFORM INFORMATION

- The platform information option is mainly used to query the input and output status of switches on the platform control panel and the status of joystick at the platform controls, so as to check whether the circuit from the switches to the controller, input signal, output signal, etc. are normal, thus assisting in determining the trouble causes.
- The configuration of switches and joystick on the platform panel is subject to the actual machine configuration.

On the main interface, press  to enter the PLATFORM PANEL INFO (1/3) interface.

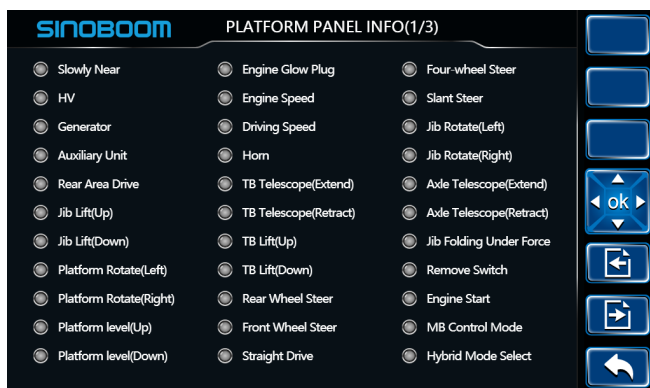


Fig. 54 PLATFORM PANEL INFO (1/3)

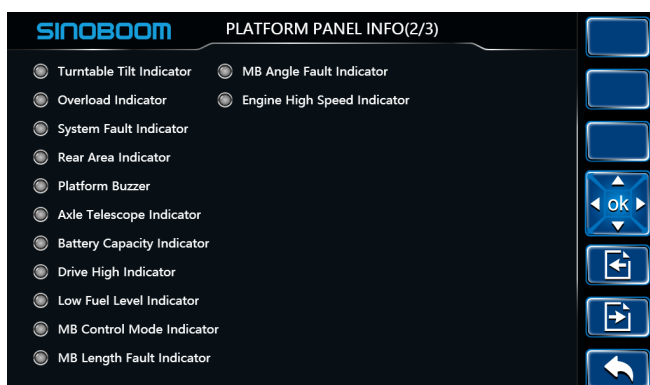


Fig. 55 PLATFORM PANEL INFO (2/3)

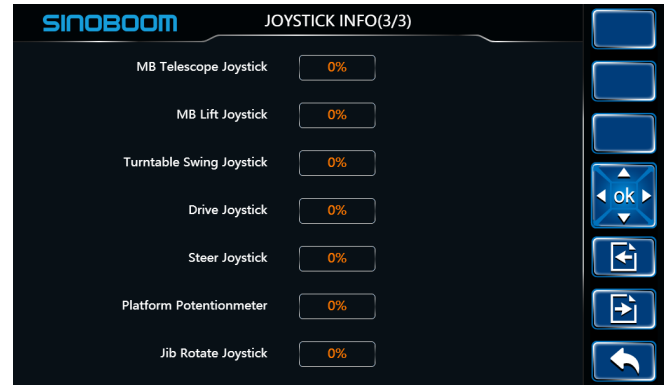


Fig. 56 PLATFORM PANEL INFO (3/3)

- The information of platform panel joysticks/potentiometers is displayed in real-time, so as to check whether the position status of joystick/potentiometer is normal.
- indicates no signal, while ● indicates a signal.
- Press  or  to change the interface.
- Press  to return to the main interface.

12.7 MACHINE INFORMATION

On the main interface, press  to enter "MACHINE INFO (1/2)" interface.

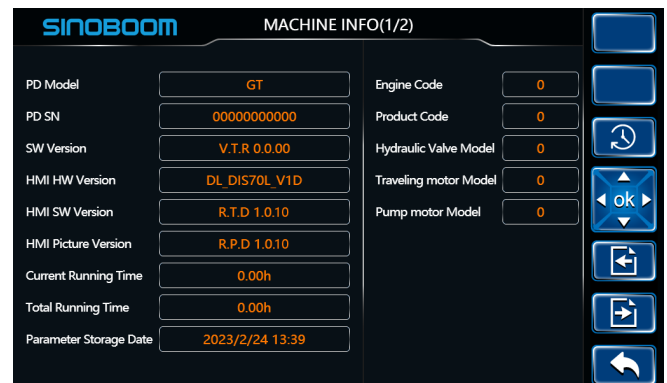


Fig. 57 MACHINE INFO (1/2)

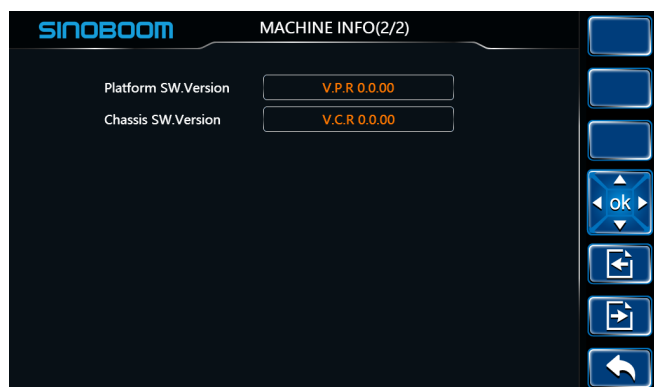


Fig. 58 MACHINE INFO (2/2)

Interface operations and button functions are detailed in the **Configuration – Machine Information**.

12.8 ALARM INFORMATION

The alarm information option is mainly used to query the alarm or fault status of the control system, so as to determine the cause of fault and facilitate troubleshooting.

On the main interface, press  to enter Real Time Faults (1/1) interface.

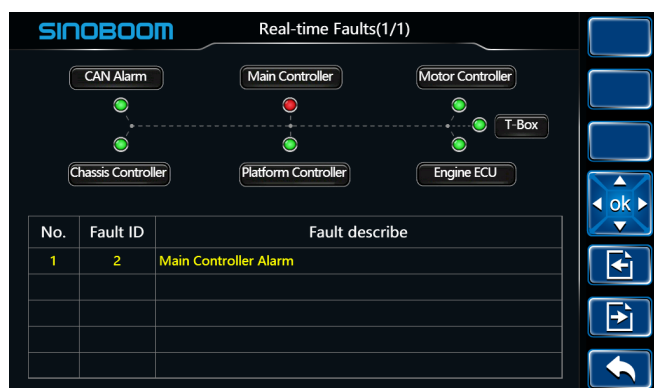


Fig. 59 Real Time Faults (1/1)

- If “BMS Fault” is displayed in the form, refer to the **Lithium Battery BMS Fault Codes** section in the Maintenance Manual for details (if the machine is equipped with lithium batteries).
- If “Motor Driver Fault” is displayed in the form, refer to the **Motor Driver Fault Codes** section in the Maintenance Manual for details (if the machine is an HD model).
- If “Charging Pack Level 1 Fault” or “Charging Pack Level 2 Fault” is displayed in the form, contact Sino-boom after-sales personnel to check the specific backend data and find out the fault cause.

-  indicates normal status, while  indicates fault warning status.
- Press  or  to change the interface.
- Press  to return to the main interface.
- In the form, yellow text indicates alarm information, and red text indicates fault information.
- If “Lift Motor Controller Fault” or “Drive Motor Controller Fault” is displayed in the form, refer to the **Motor Controller Fault Codes** section in the Maintenance Manual for details (if the machine is equipped with a motor controller).

This Page Intentionally Left Blank

13 APPENDIX

13.1 ACCESSORY DEVICE WEIGHT TABLE

To meet diverse operational requirements, this machine supports the installation of accessory devices on the platform, allowing customers to configure them flexibly according to actual working conditions. The table below details the weights of various accessory devices. For more instructions and installation guidelines, please refer to the **Boom Lift Accessories Manual**.

Table 13-1 Accessory Device Weight Table

No.	Accessory Code	Accessory Name	Weight (kg)	Remarks
1	103010043276	Operator protective device	12	For 1.15m (3.77') platform, without protective cover
2	103010043323	Operator protective device	12	For 1.15m (3.77') platform, with protective cover
3	105070043057	Operator protective device	12	For standard platform, without protective cover
4	105070043063	Operator protective device	12	For standard platform, with protective cover
5	105070043033	Operator protective device	12	Legacy version (discontinued)
6	105065043018	Operator protective device	12	For shipyard models, without height detection bar
7	105065043009	Electrical height-limit operator protective device	28	For shipyard models, with height detection bar
8	103010043331	Half-height platform mesh	9	For 1.15m (3.77') platform with swing gate
9	105068043056	Half-height platform mesh	4	For 1.45m (4.76') platform with single gate
10	103006043015	Half-height platform mesh	10	For 1.45m (4.76') platform with swing gate
11	105068043041	Half-height platform mesh	10	For 1.83m (6') platform with swing gate
12	105064043033	Half-height platform mesh	12	For 2.44m (8') platform with swing gate
13	105064043113	Full-height platform mesh	26	For 2.44m (8') platform with swing gate
14	103010040004	Anti-pinch rail	8	For 1.15m (3.77') platform with swing gate
15	105068043067	Anti-pinch rail	9	For 1.45m (4.76') platform with single gate
16	105068043064	Anti-pinch rail	11	For 1.83m (6') platform with swing gate
17	105068043071	Anti-pinch rail	14	For 2.44m (8') platform with swing gate
18	105017040003	Manual storage container	1	/
19	104009040011	Manual storage container	1	Legacy version (discontinued)

Table 13-1 Accessory Device Weight Table (continued)

No.	Accessory Code	Accessory Name	Weight (kg)	Remarks
20	105017060062	Limit stop device	13	Legacy version (discontinued)
21	103010060038	Overhead protection device	14	For 1.15m (3.77') platform
22	114002060083	Overhead protection device	14	For 1.45m (4.76') platform
23	114002060084	Overhead protection device	14	For 1.83m (6') platform
24	114002060086	Overhead protection device	14	For 2.44m (8') platform
25	105064043064	Tool box	5	For standard platform
26	103010043262	Tool box	4	For 1.15m (3.77') platform
27	103013170030	Welder bracket package	7	For 1.83m (6') platform
28	105069170010	Welder bracket package	9	For 2.44m (8') platform
29	114006040008	Pipe rack	29	U-shaped
30	105064043135	Pipe rack	4	Y-shaped
31	104029170001	Glass panel cradle	13	For 1.83m (6') platform with swing gate
32	105064043022	Glass panel cradle	17	For 2.44m (8') platform
33	105090040013	Anemometer	3	/
34	105064043307	Access deck	25	/
35	105017060065	Work light	1	/

Note:

- Standard platform: All platforms with heights other than 1.15m (3.77').

13.2 MAJOR MODIFICATION AND REPAIR RECORD

Major Modification and Repair Record			
Model			
Serial No.			
Date	Modified/Repaired Item	Machine Status after Change	Technician

[illegible]

13.3 INSPECTION AND PREVENTIVE MAINTENANCE SCHEDULE

Perform inspection and preventive maintenance for the items in the table below at the specified intervals. Maintenance and inspection intervals are calculated based on the months of service or the “accumulated operating hours” displayed on the turntable controls (whichever comes first).

Inspection intervals are based on the use of the machine under normal operating conditions. The intervals should be shortened accordingly when operating in harsh environmental conditions.

Table 13-2 Inspection and Preventive Maintenance Schedule

Item	Interval		
	Before each delivery ¹ or quarterly ²	Semiannually ³	Annually ⁴
Chassis assembly			
Chassis	2	2	2
Tires	1, 2	1, 2	1, 2
Wheel nuts	1 ⁵⁰	1 ⁵⁰	1 ⁵⁰
Drive motor	1, 6	1, 6	1, 6
Travel reducer	1, 2, 6	1, 2, 6	1, 2, 6, 11
Steering components	1, 2	1, 2	1, 2
Axles/extending axles (if equipped)	1, 2, 3	1, 2, 3	1, 2, 3
Bearings	1, 2, 5, 12	1, 2, 5, 12	1, 2, 5, 12
Turntable assembly			
Turntable	2	2	2
Slewing bearing or slewing reducer	1 ⁵⁰ , 2, 6, 12	1 ⁵⁰ , 2, 6, 12	1 ⁵⁰ , 2, 6, 8, 12
Slewing reducer (if equipped)	1, 2, 6	1, 2, 6	1, 2, 6, 11
Central rotary joint	6	6	6
Slewing motor	1, 6	1, 6	1, 6
Turntable slewing pin (if equipped)	1, 2, 3	1, 2, 3	1, 2, 3
Turntable cover assembly	1, 2, 3	1, 2, 3	1, 2, 3
Hydraulic generator (if equipped)	1, 3, 6, 10 ^{NO.1}	1, 3, 6, 10 ^{NO.1}	1, 3, 6, 10 ^{NO.1}
Boom assembly			
Boom weldment	1, 2	1, 2	1, 2
Hose, wire rope bracket	1, 2	1, 2	1, 2
Pulley and wear pad assembly	1, 2	1, 2	1, 2
Bearings	1, 2, 5, 12	1, 2, 5, 12	1, 2, 5, 12
Cover or protective guard (if equipped)	1, 2	1, 2	1, 2
Cable track or wire rope system (if equipped)	1, 2, 3, 5	1, 2, 3, 5	1, 2, 3, 5
Pivot pins and retaining rings	1, 2	1, 2	1, 2
Platform assembly			
Guardrails	2	2	2
Access gate	1, 2, 3	1, 2, 3	1, 2, 3
Floor	2	2	2
Swing cylinder	1, 2, 5, 6	1, 2, 5, 6	1, 2, 5, 6
Safety belt anchorage point	1, 2, 7	1, 2, 7	1, 2, 7

Table 13-2 Inspection and Preventive Maintenance Schedule (continued)

Item	Interval		
	Before each delivery ¹ or quarterly ²	Semiannually ³	Annually ⁴
Power system			
Refer to the machine's maintenance manual for inspection and preventive maintenance schedule, and the engine manual provided with the machine for detailed instructions.			
Hydraulic system			
Hydraulic pump	1, 2, 6	1, 2, 6	1, 2, 6
Hydraulic cylinder	1, 2, 5, 6	1, 2, 5, 6	1, 2, 5, 6
Bleeding the oscillating cylinder (if equipped)	10 ^{NO.1}	10 ^{NO.1}	10 ^{NO.1}
Hydraulic valves	1, 2, 5, 6	1, 2, 5, 6	1, 2, 5, 6
Counterbalance valve, check of the locking function (if equipped)	10 ^{NO.1}	10 ^{NO.1}	10 ^{NO.1}
Hydraulic hoses, pipelines and fittings	1, 2, 6	1, 2, 6	1, 2, 6
Hydraulic tank	1, 2, 3, 5, 6	1, 2, 3, 5, 6	1, 2, 3, 5, 6
Hydraulic tank suction filter	1, 5, 6	1, 5, 6	1, 5, 6, 11
Hydraulic tank return filter	1, 5, 6, 11 ⁵⁰	1, 5, 6, 11 ⁵⁰	1, 5, 6, 11 ⁵⁰
Hydraulic tank air filter	1, 5, 6	1, 5, 6, 11	1, 5, 6, 11
Hydraulic oil high-pressure filter	1, 5, 6, 11	1, 5, 6, 11	1, 5, 6, 11
Hydraulic oil	5, 6	5, 6	5, 6, 11
Electrical system			
Electrical harness, connectors	1, 2	1, 2	1, 2
Battery	1, 2, 6, 9, 12	1, 2, 6, 9, 12	1, 2, 6, 9, 12
Electrolyte	6	6	6
Charging function	3	3	3
Instruments, gauges, switches, lamps, horn, contactor, relay	1, 3	1, 3	1, 3
Functions and controls			
Platform controller	1, 3, 4, 7, 10	1, 3, 4, 7, 10	1, 3, 4, 7, 10
Turntable controller	1, 3, 4, 7, 10	1, 3, 4, 7, 10	1, 3, 4, 7, 10
Function control lock, secondary guarding device and brake	1, 3, 10	1, 3, 10	1, 3, 10
Foot switch	1, 3, 10	1, 3, 10	1, 3, 10
Emergency stop switch (ground and platform)	1, 3, 10	1, 3, 10	1, 3, 10
Limit switches and power-off switch	1, 3, 10	1, 3, 10	1, 3, 10

Table 13-2 Inspection and Preventive Maintenance Schedule (continued)

Item	Interval		
	Before each delivery ¹ or quarterly ²	Semiannually ³	Annually ⁴
Pothole protection device (if equipped)	1, 3, 10	1, 3, 10	1, 3, 10
Overload limit system	1, 3, 10	1, 3, 10	1, 3, 10
Tilt alarm	1, 3, 10	1, 3, 10	1, 3, 10
Drive brake	1, 3, 10	1, 3, 10	1, 3, 10
Slewing brake	1, 3, 10	1, 3, 10	1, 3, 10
Others			
Operation Manual in the manuals compartment	10	10	10
All decals/labels complete, clear and secure	10	10	10
Annual inspection date of the machine	/	/	10
No unapproved changes or additions	10	10	10
All safety publications taken into account	10	10	10
General structural components and weldments	2	2	2
All fasteners, pins, protective guards and covers	1, 2	1, 2	1, 2
Greasing and lubricating according to specifications	10	10	10
Functional test of all systems	10	10	10
Paint and appearance	5	5	5
Inspection date stamped on the chassis	/	/	10
Notify Sinoboom of machine ownership (change)	/	/	10

Table 13-2 Inspection and Preventive Maintenance Schedule (continued)

Item	Interval		
	Before each delivery ¹ or quarterly ²	Semiannually ³	Annually ⁴
Note: ¹ Before each sale, lease or shipment delivery; ² In service for 3 months or 250 hours; or out of service for more than 3 months; ³ In service for 6 months or 500 hours; ⁴ Once a year and no later than 13 months from the date of the previous annual machine inspection; ⁵⁰ The first inspection shall be performed once the machine reaches 50 hours in service for the first time. This occurs only once in the service life of the machine. ²⁵⁰ The first inspection shall be performed once the machine reaches 250 hours in service for the first time. This occurs only once in the service life of the machine. NO.1 Before the machine is put into service for the first time, or before the first use after the oscillating cylinder or counterbalance valve has been replaced.			
Inspection activity (numerical codes): 1. Check for correct installation (accurate position, firmly installed, tightened to the specified torque) 2. Check for damage (cracks, cracked welds, deformation, wear, corrosion, excessive wear, gouges, abrasions and exposed threads) 3. Check for normal function 4. Return to neutral position or "off" position normally (the self-reset switch can return to neutral position or "off" position after released) 5. Clean and free of foreign objects 6. Check for correct level, sealing and leaks 7. Labels complete, clear and secure 8. Check for appropriate tolerances 9. Fully charged 10. Verify/perform 11. Replace the oil or filter element 12. Correctly lubricated			

This Page Intentionally Left Blank

PARTNERS IN ACCESS



Hunan Sinoboom Intelligent Equipment Co., Ltd.

No.128, East Jinzhou Avenue, Ningxiang High-tech Industrial Park, Changsha, Hunan, China

☎ 0086-0731-87116222 (Sales) & 0086-0731-87116333 (Service)

✉ sales@sinoboom.com

🌐 www.sinoboom.com

North American Subsidiary

Sinoboom North America LLC

105 W Riley Rd, Houston, TX,
77047, US

E-mail: sales@sinoboom.us

Phone: +1 (800)867-2552

Australia Subsidiary

Sinoboom Intelligent Equipment Pty Ltd.

32-34 Marni St, Dandenong South, Vic
3175

E-mail: au@sinoboom.com

Phone: +61 484 118 324

Korea Subsidiary

Sinoboom Korea Co., Ltd.

E-mail: sales@sinoboom.com

Phone: +82-10-2533-1831

Europe Subsidiary

Sinoboom B.V.

Nikkelstraat 26
NL-2984 AM Ridderkerk
The Netherlands

E-mail: info@sinoboom.eu

Phone: +31 180 225 666

Brazil Subsidiary

SINOBOOM Brasil LTDA

Av. Antonieta Piva Barranqueiros,
62 – Unidade 1 - Distrito Industrial, Jundiaí
- SP Brazil

E-mail: sales@sinoboom.com

Mexican Subsidiary

SINOBOOM LATIN AMERICA, S. DE R. L.
DE C. V.

Camino a Napoles Km. 2+370(LI)
entronque a brecha Km.1(LI) del Ejido San
Miguel del Arenal, Silao de la Victoria, Gto.

Poland Subsidiary

Sinoboom Poland sp.z o.o.

ul. Feliksa Tychowskiego 5A 61-248
Poznań, Poland

E-mail: sales@sinoboom.com

Middle East Subsidiary

Sinoboom Middle East FZE

Q4-085 , SAIF-Zone,
Sharjah, U.A.E.

E-mail: sales@sinoboom.com